



MAJA 1 - 15 M²

Parts list			
Name		QTY	Description
Nails		1 roll	For missing wall panel boards
Scew	6x140	40	For wall panels
Screw	6x240	40	For roof
Screw	6x180	10	For wall panels
Screw	5x70	30	For wall bar
Screw	4x32	30	For metal covers on roof
Bolt	8x50	24	For fix panel
Screw	4x50	300	For window covers, where needed


Front

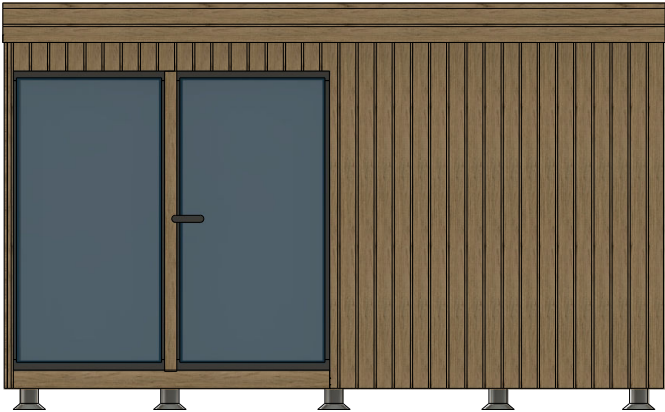


Right

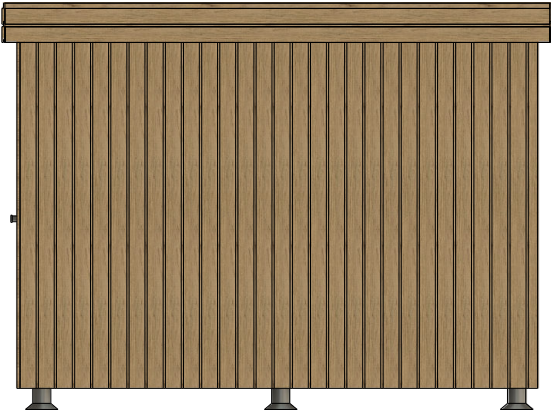


Left

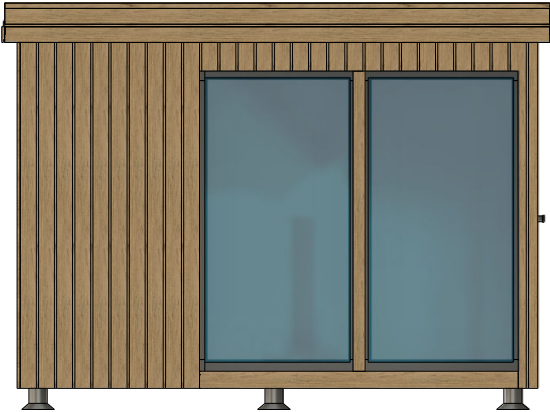

Back

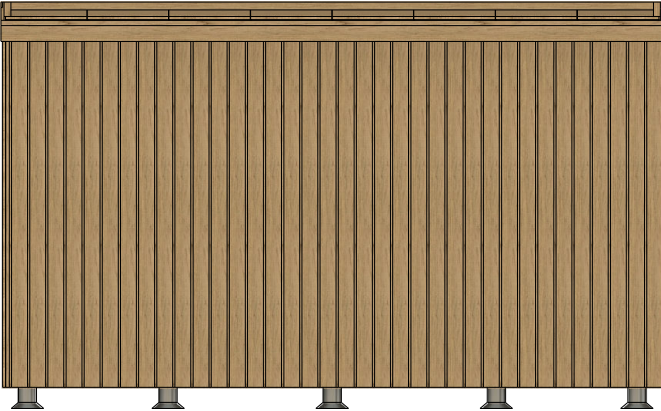

S Ø L U N D

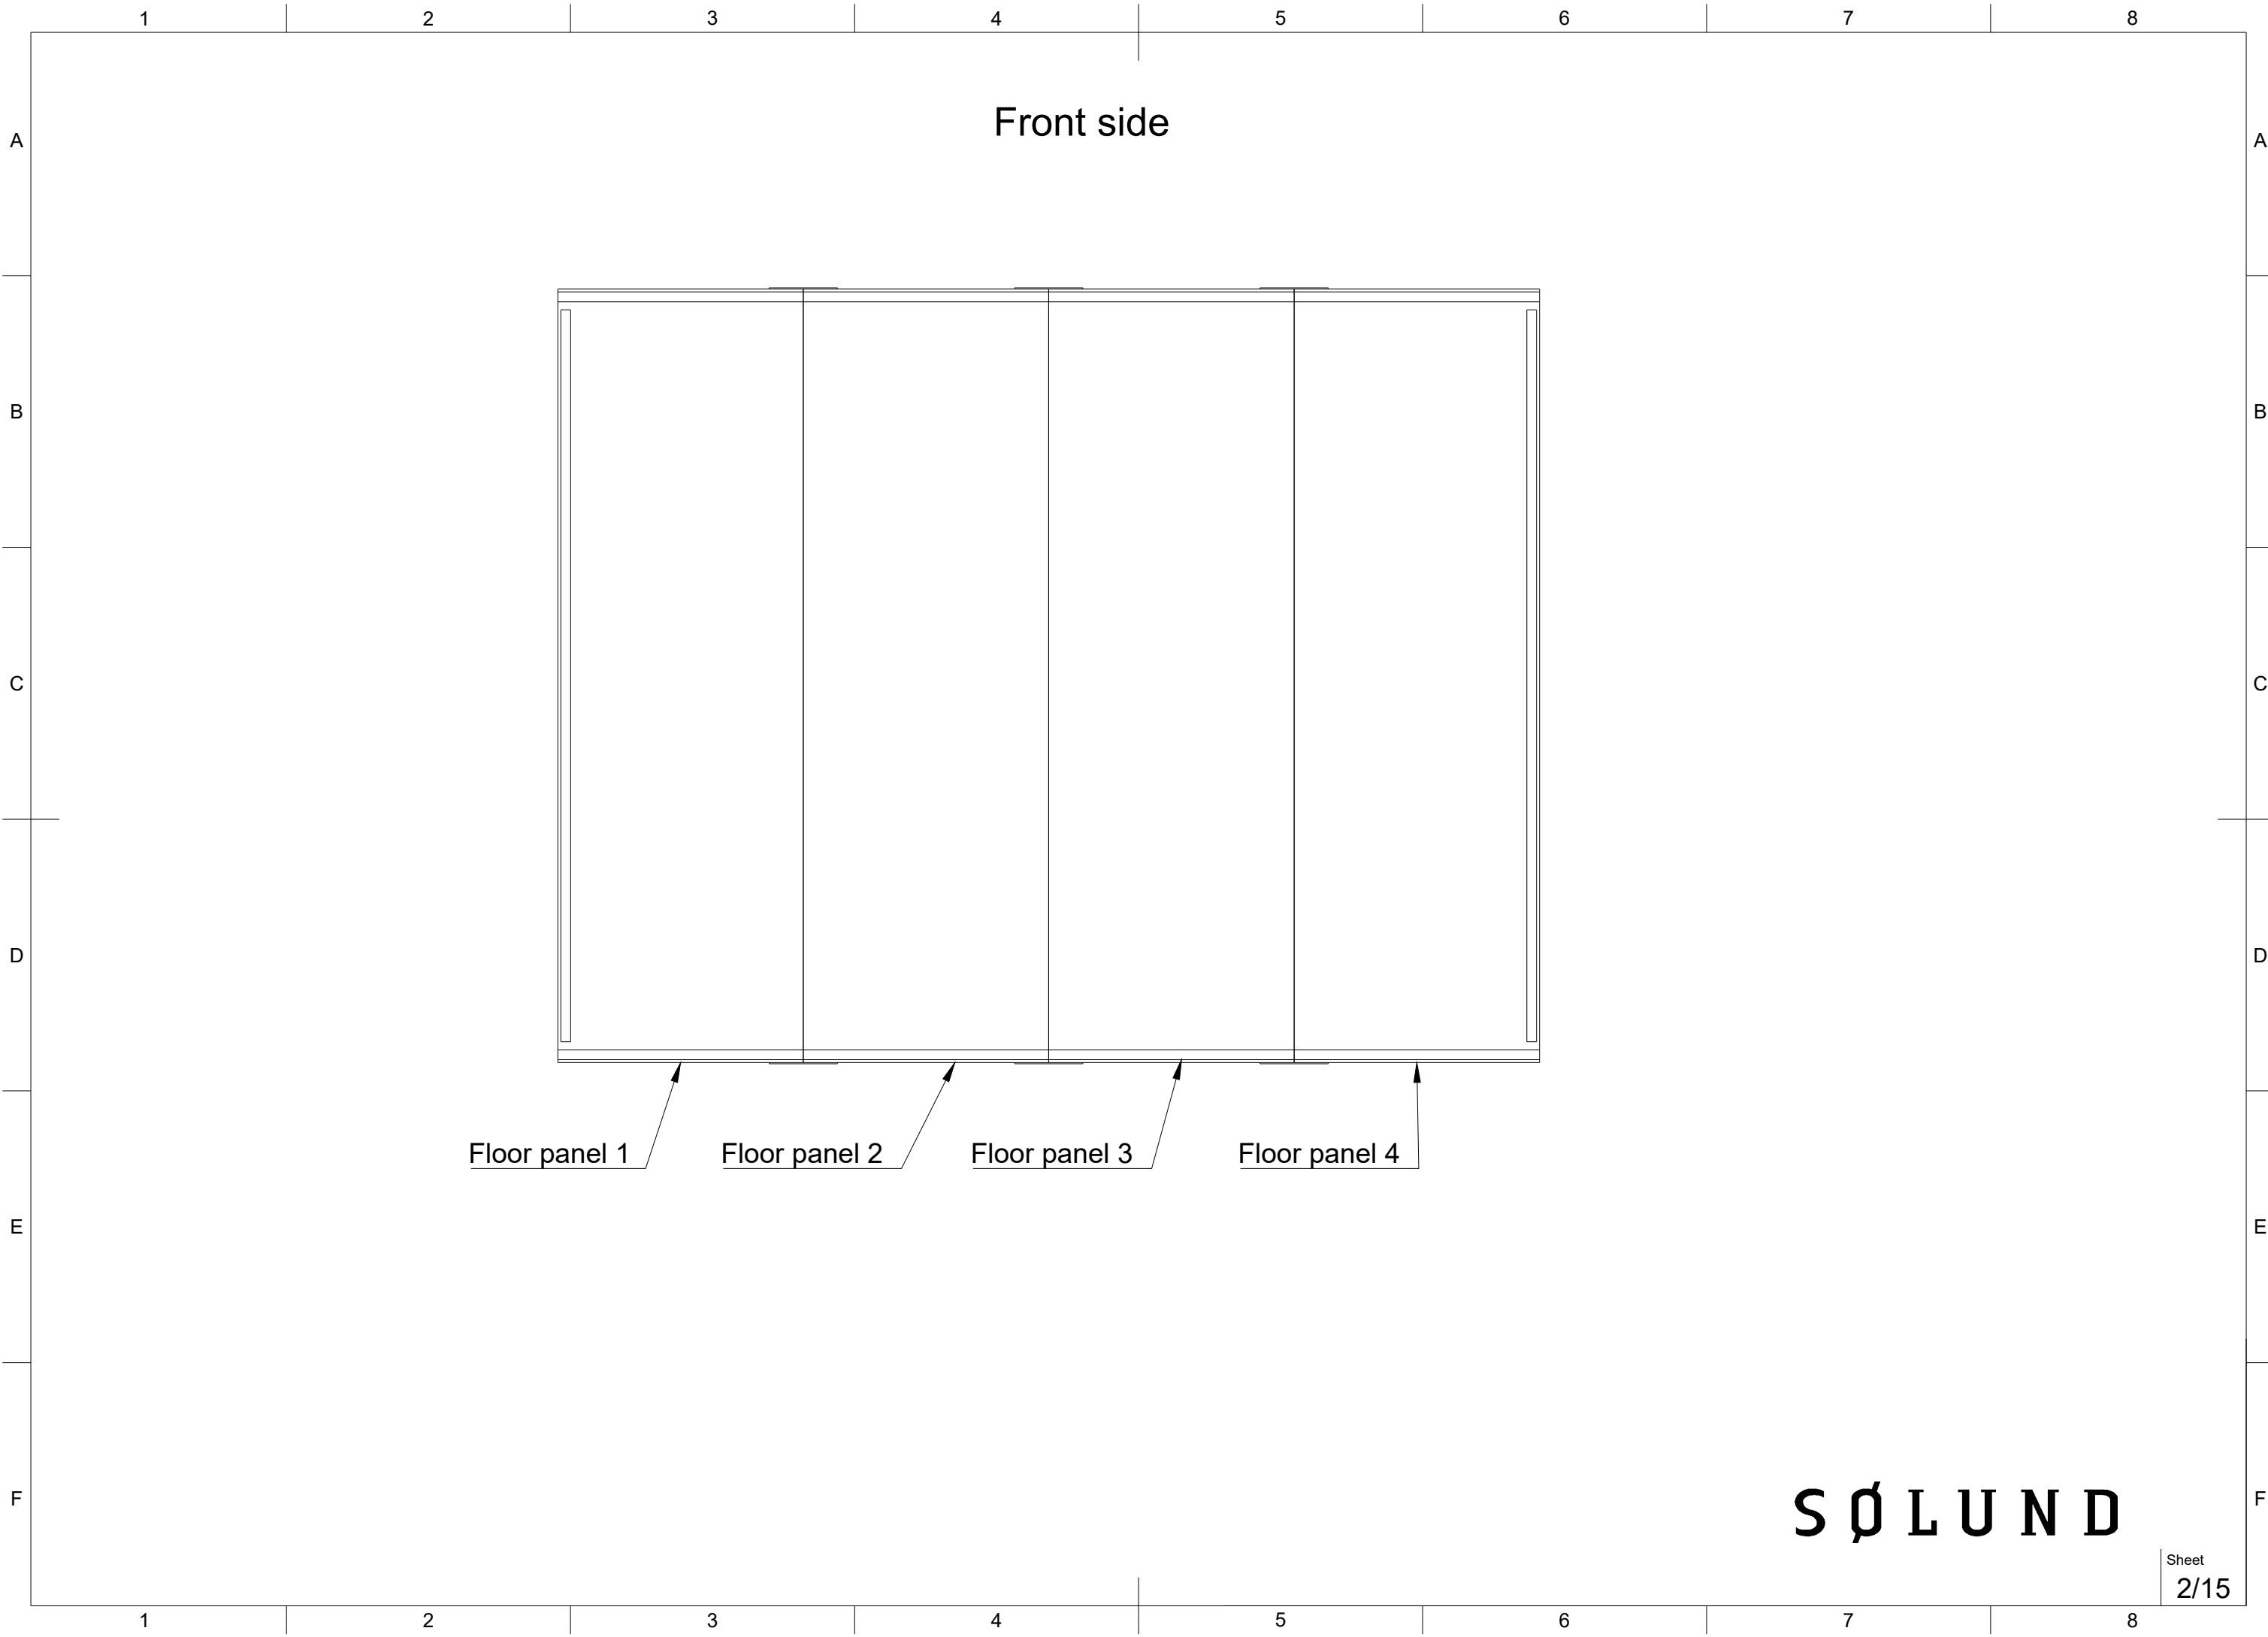

Front side


Floor panel 1

Floor panel 2

Floor panel 3

Floor panel 4


S Ø L U N D

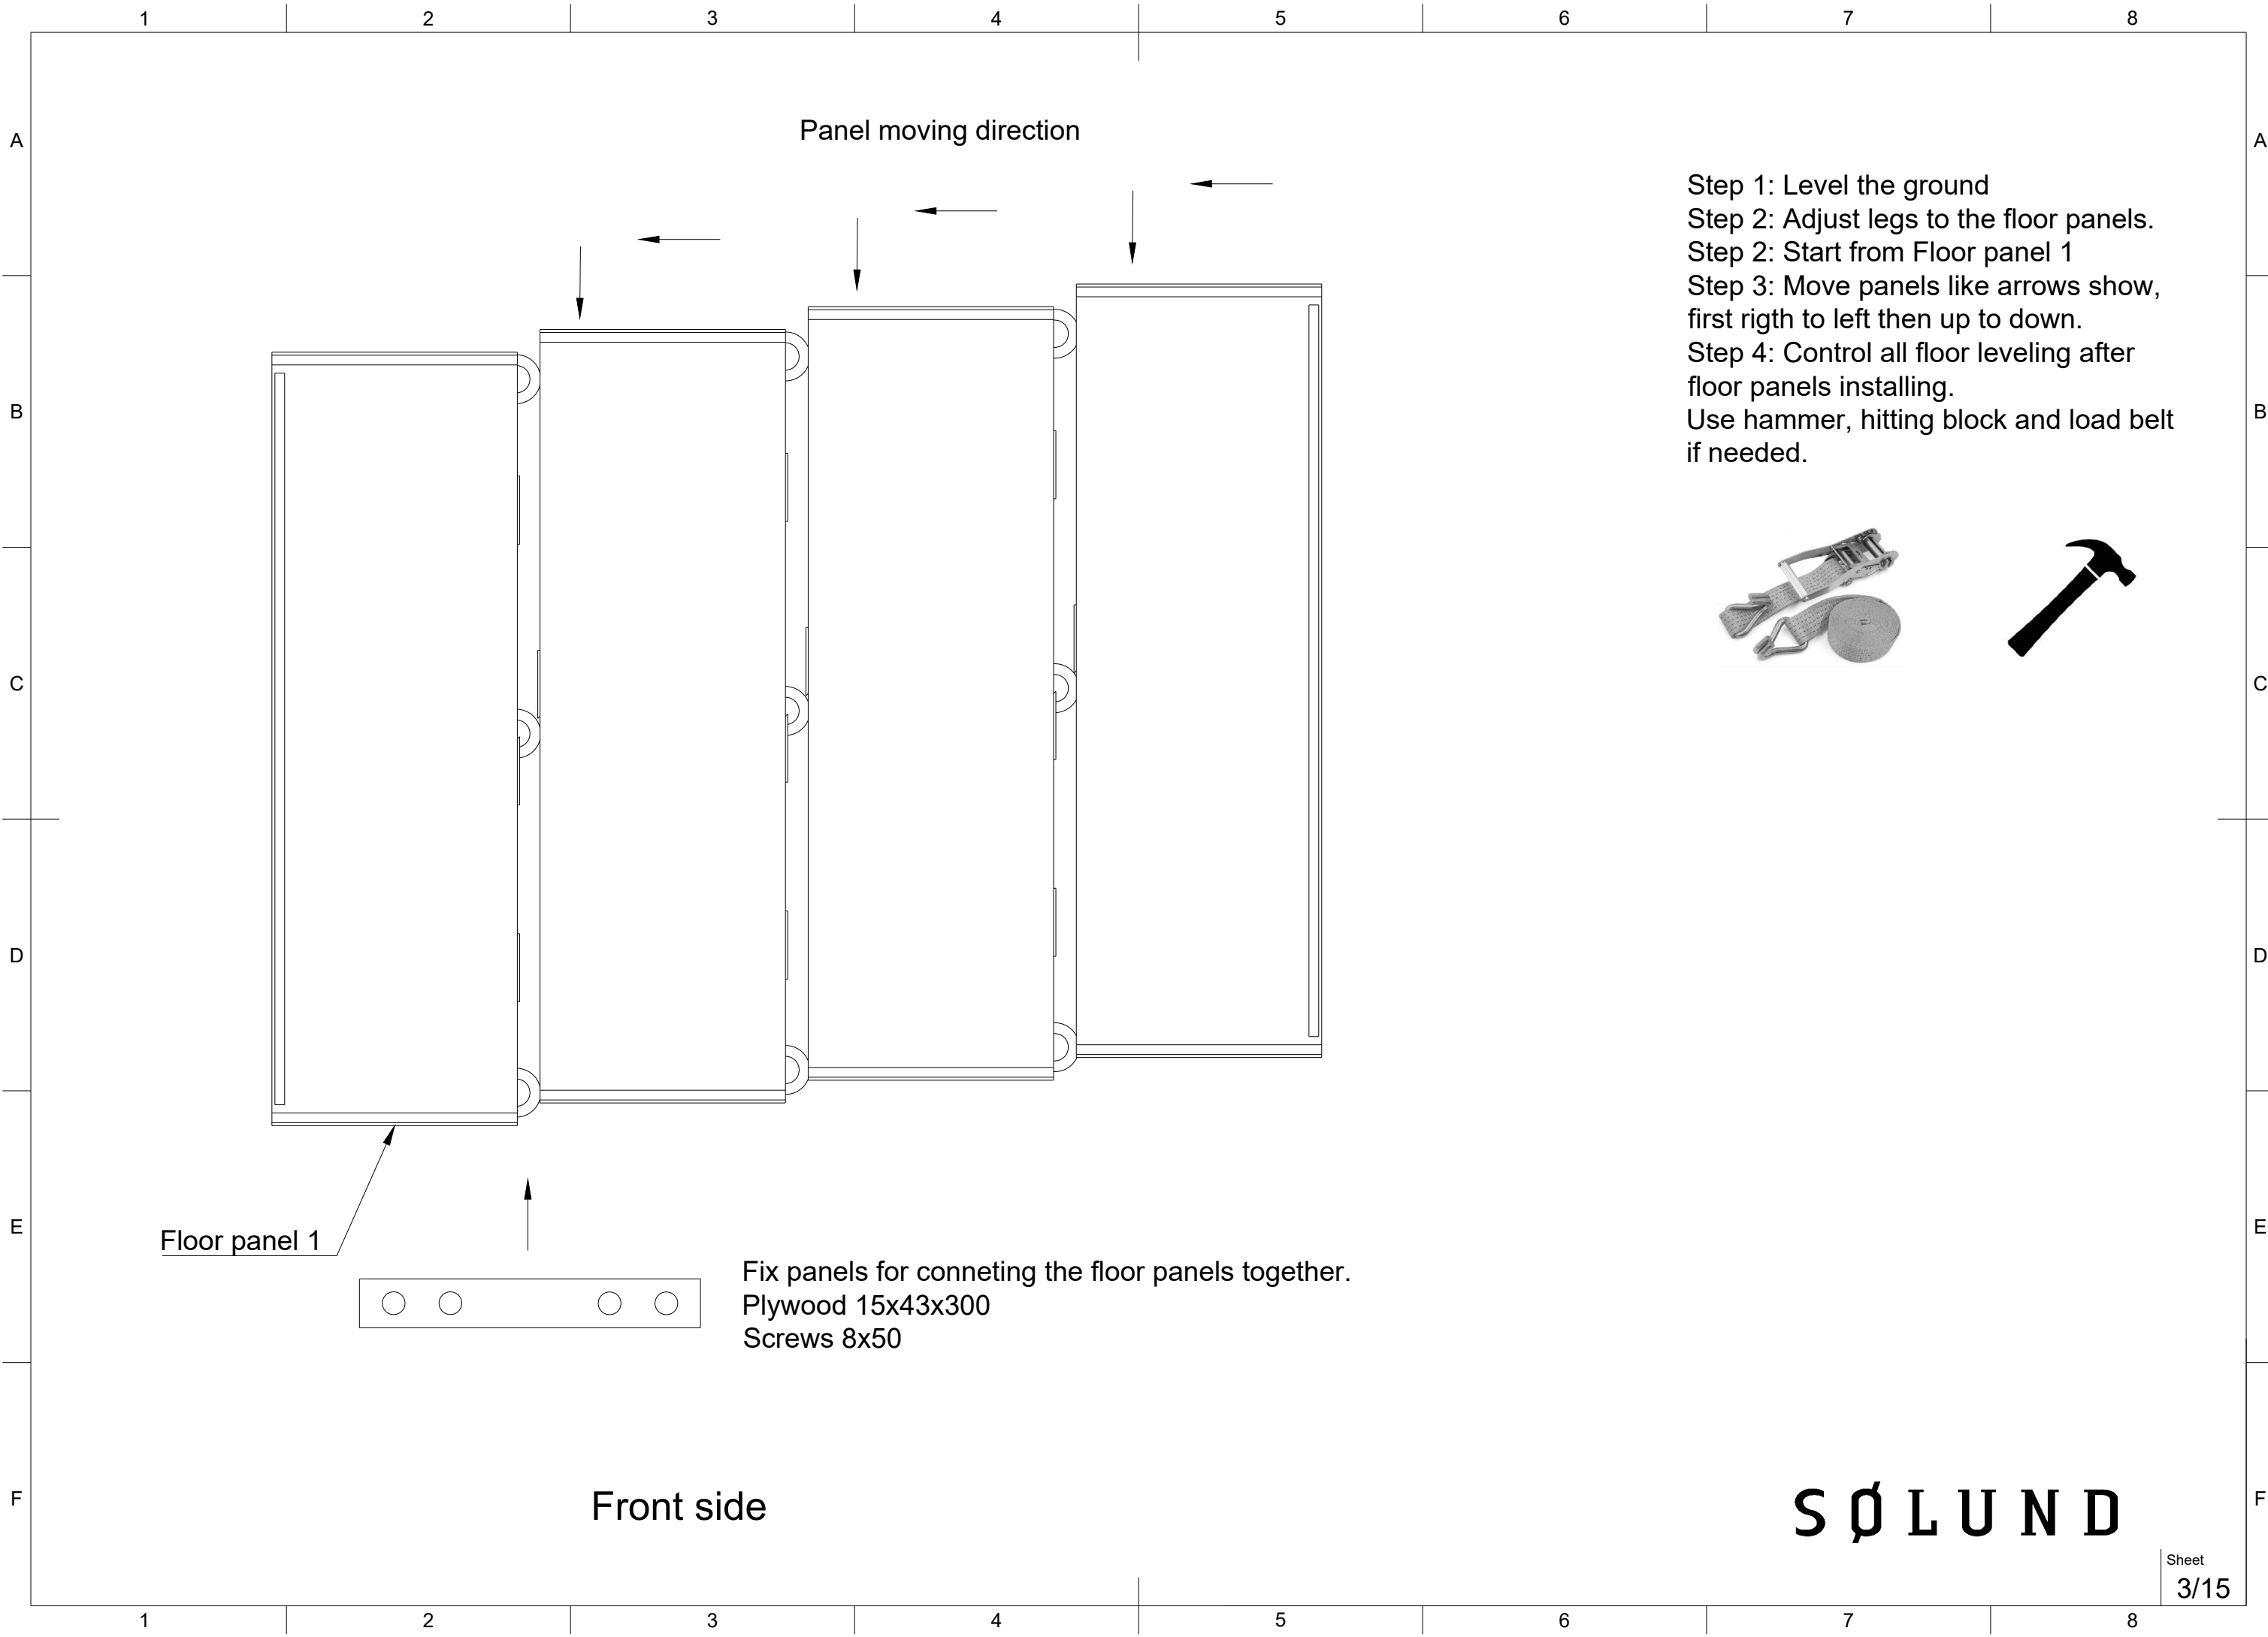


Step 1: Level the ground
Step 2: Adjust legs to the floor panels.
Step 2: Start from Floor panel 1
Step 3: Move panels like arrows show, first rigth to left then up to down.
Step 4: Control all floor leveling after floor panels installing.
Use hammer, hitting block and load belt if needed.




S Ø L U N D

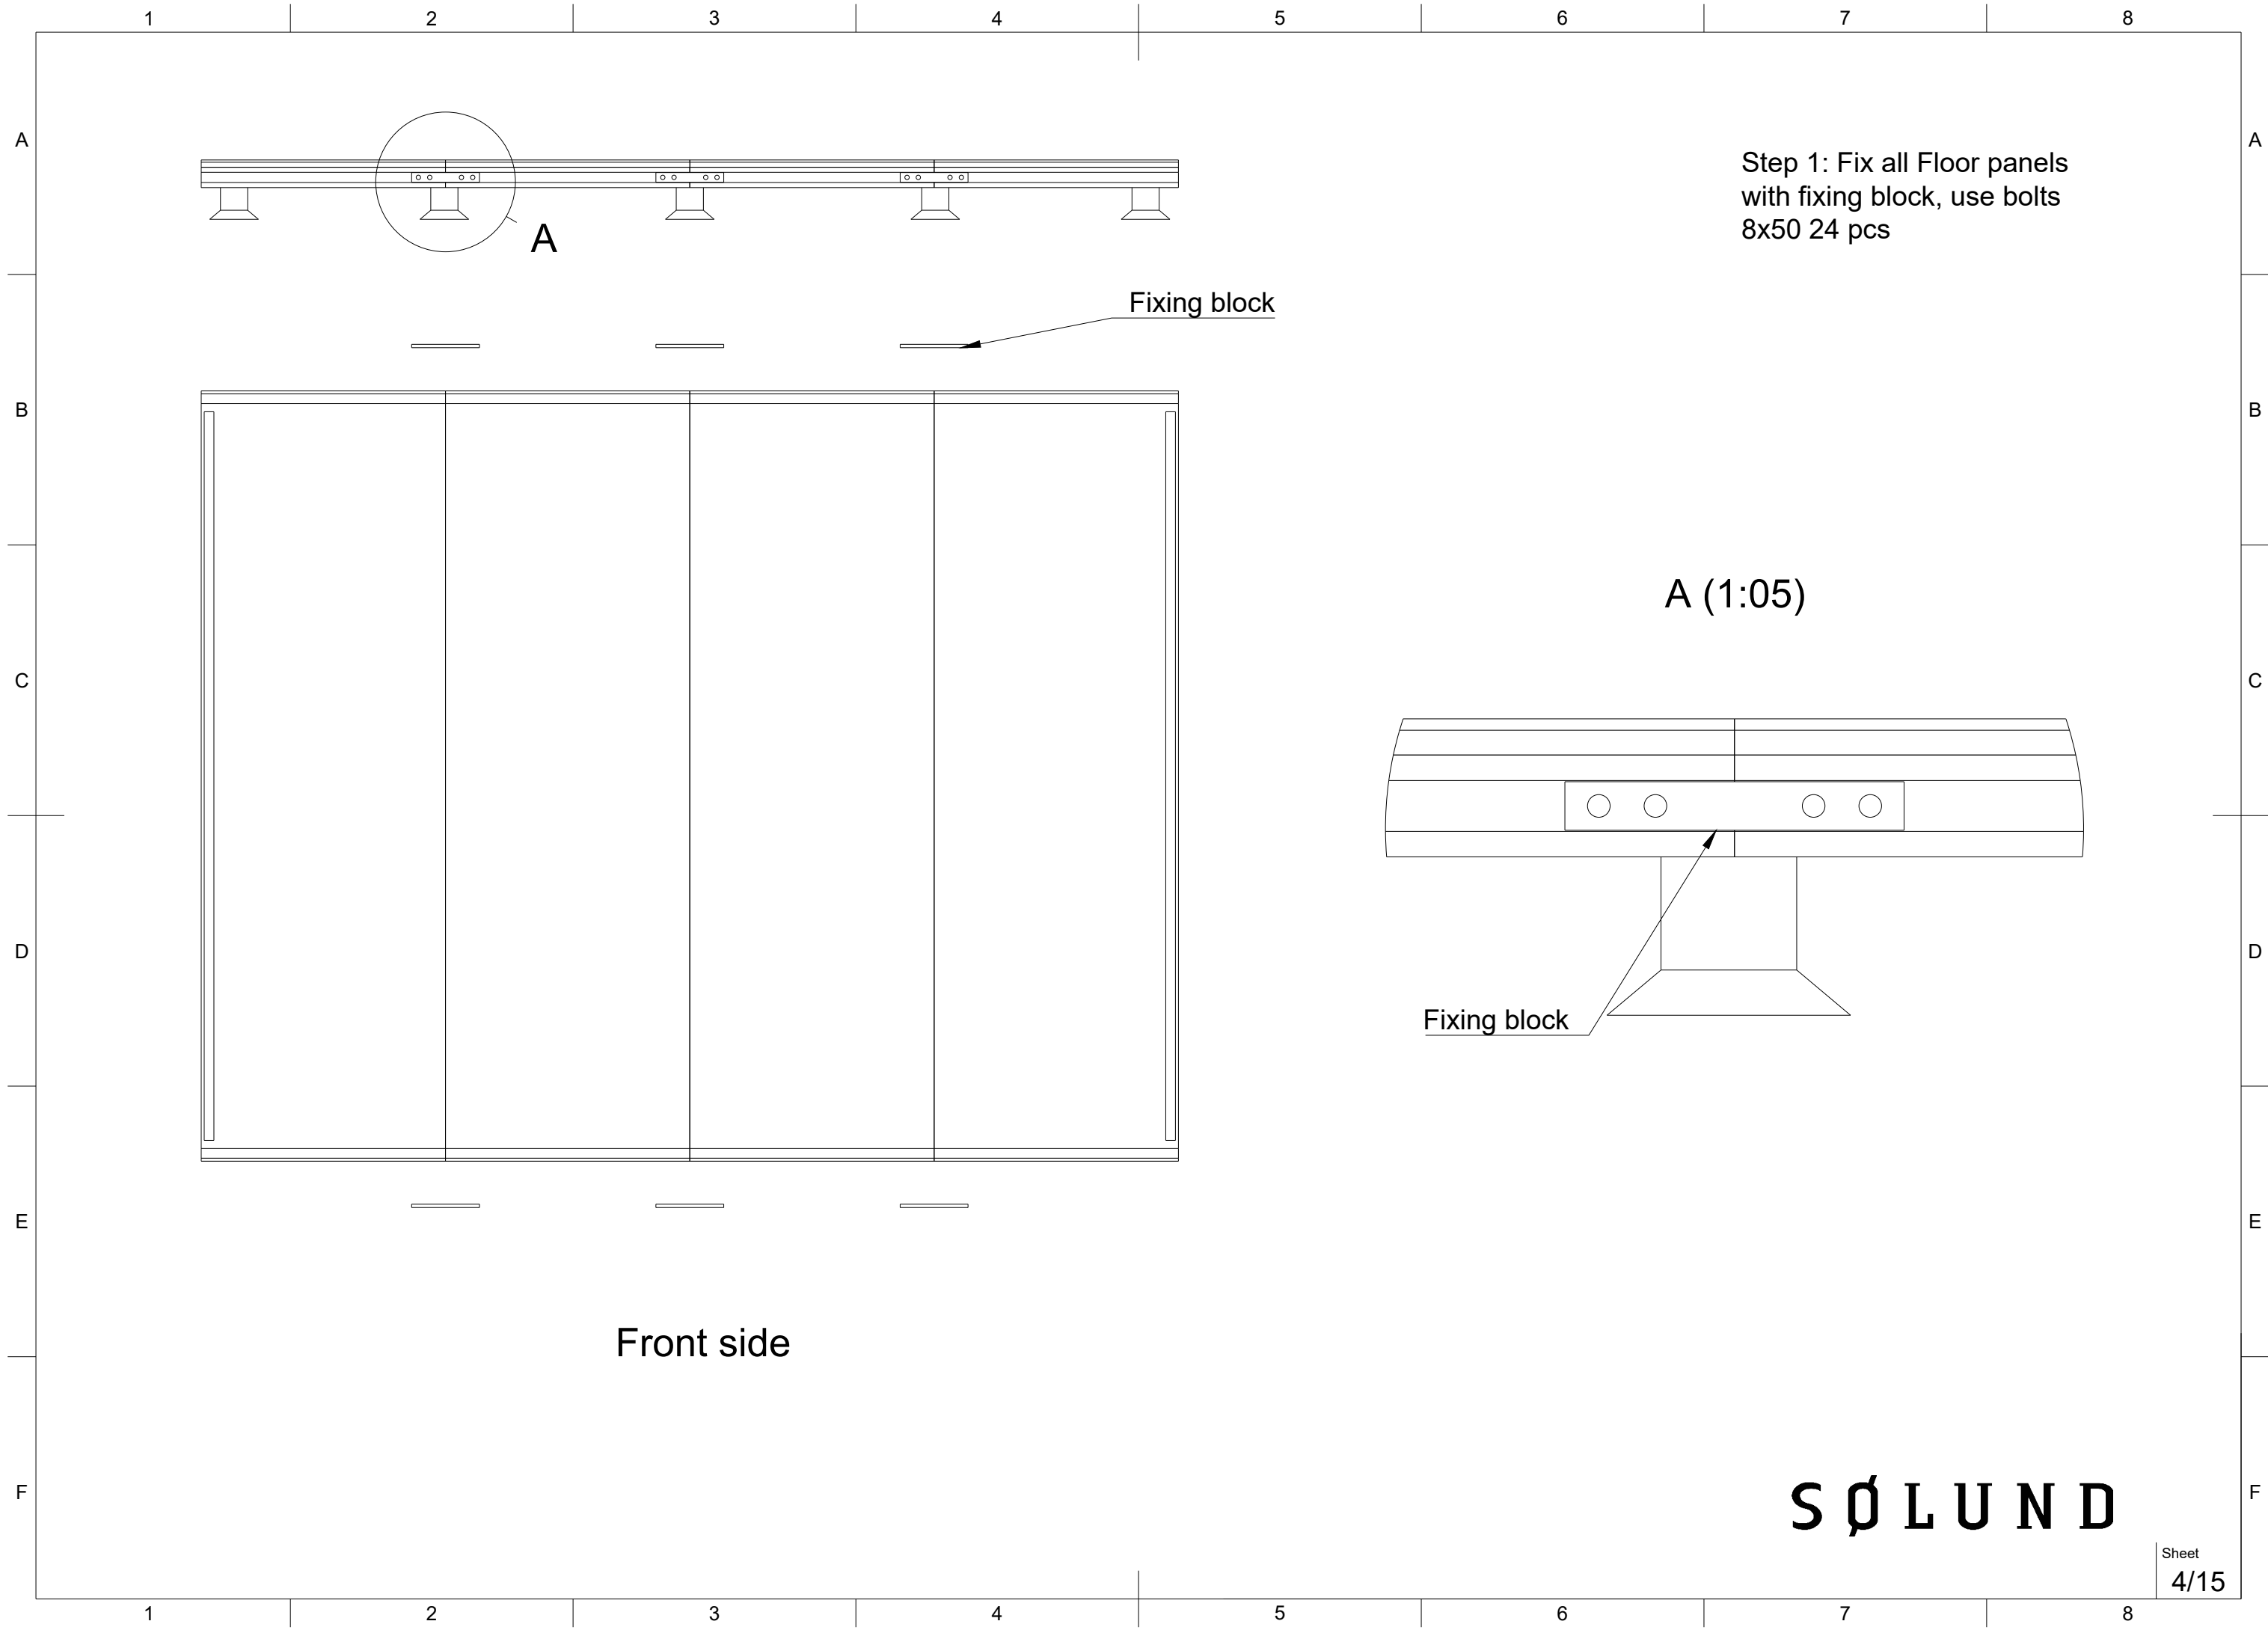


S Ø L U N D

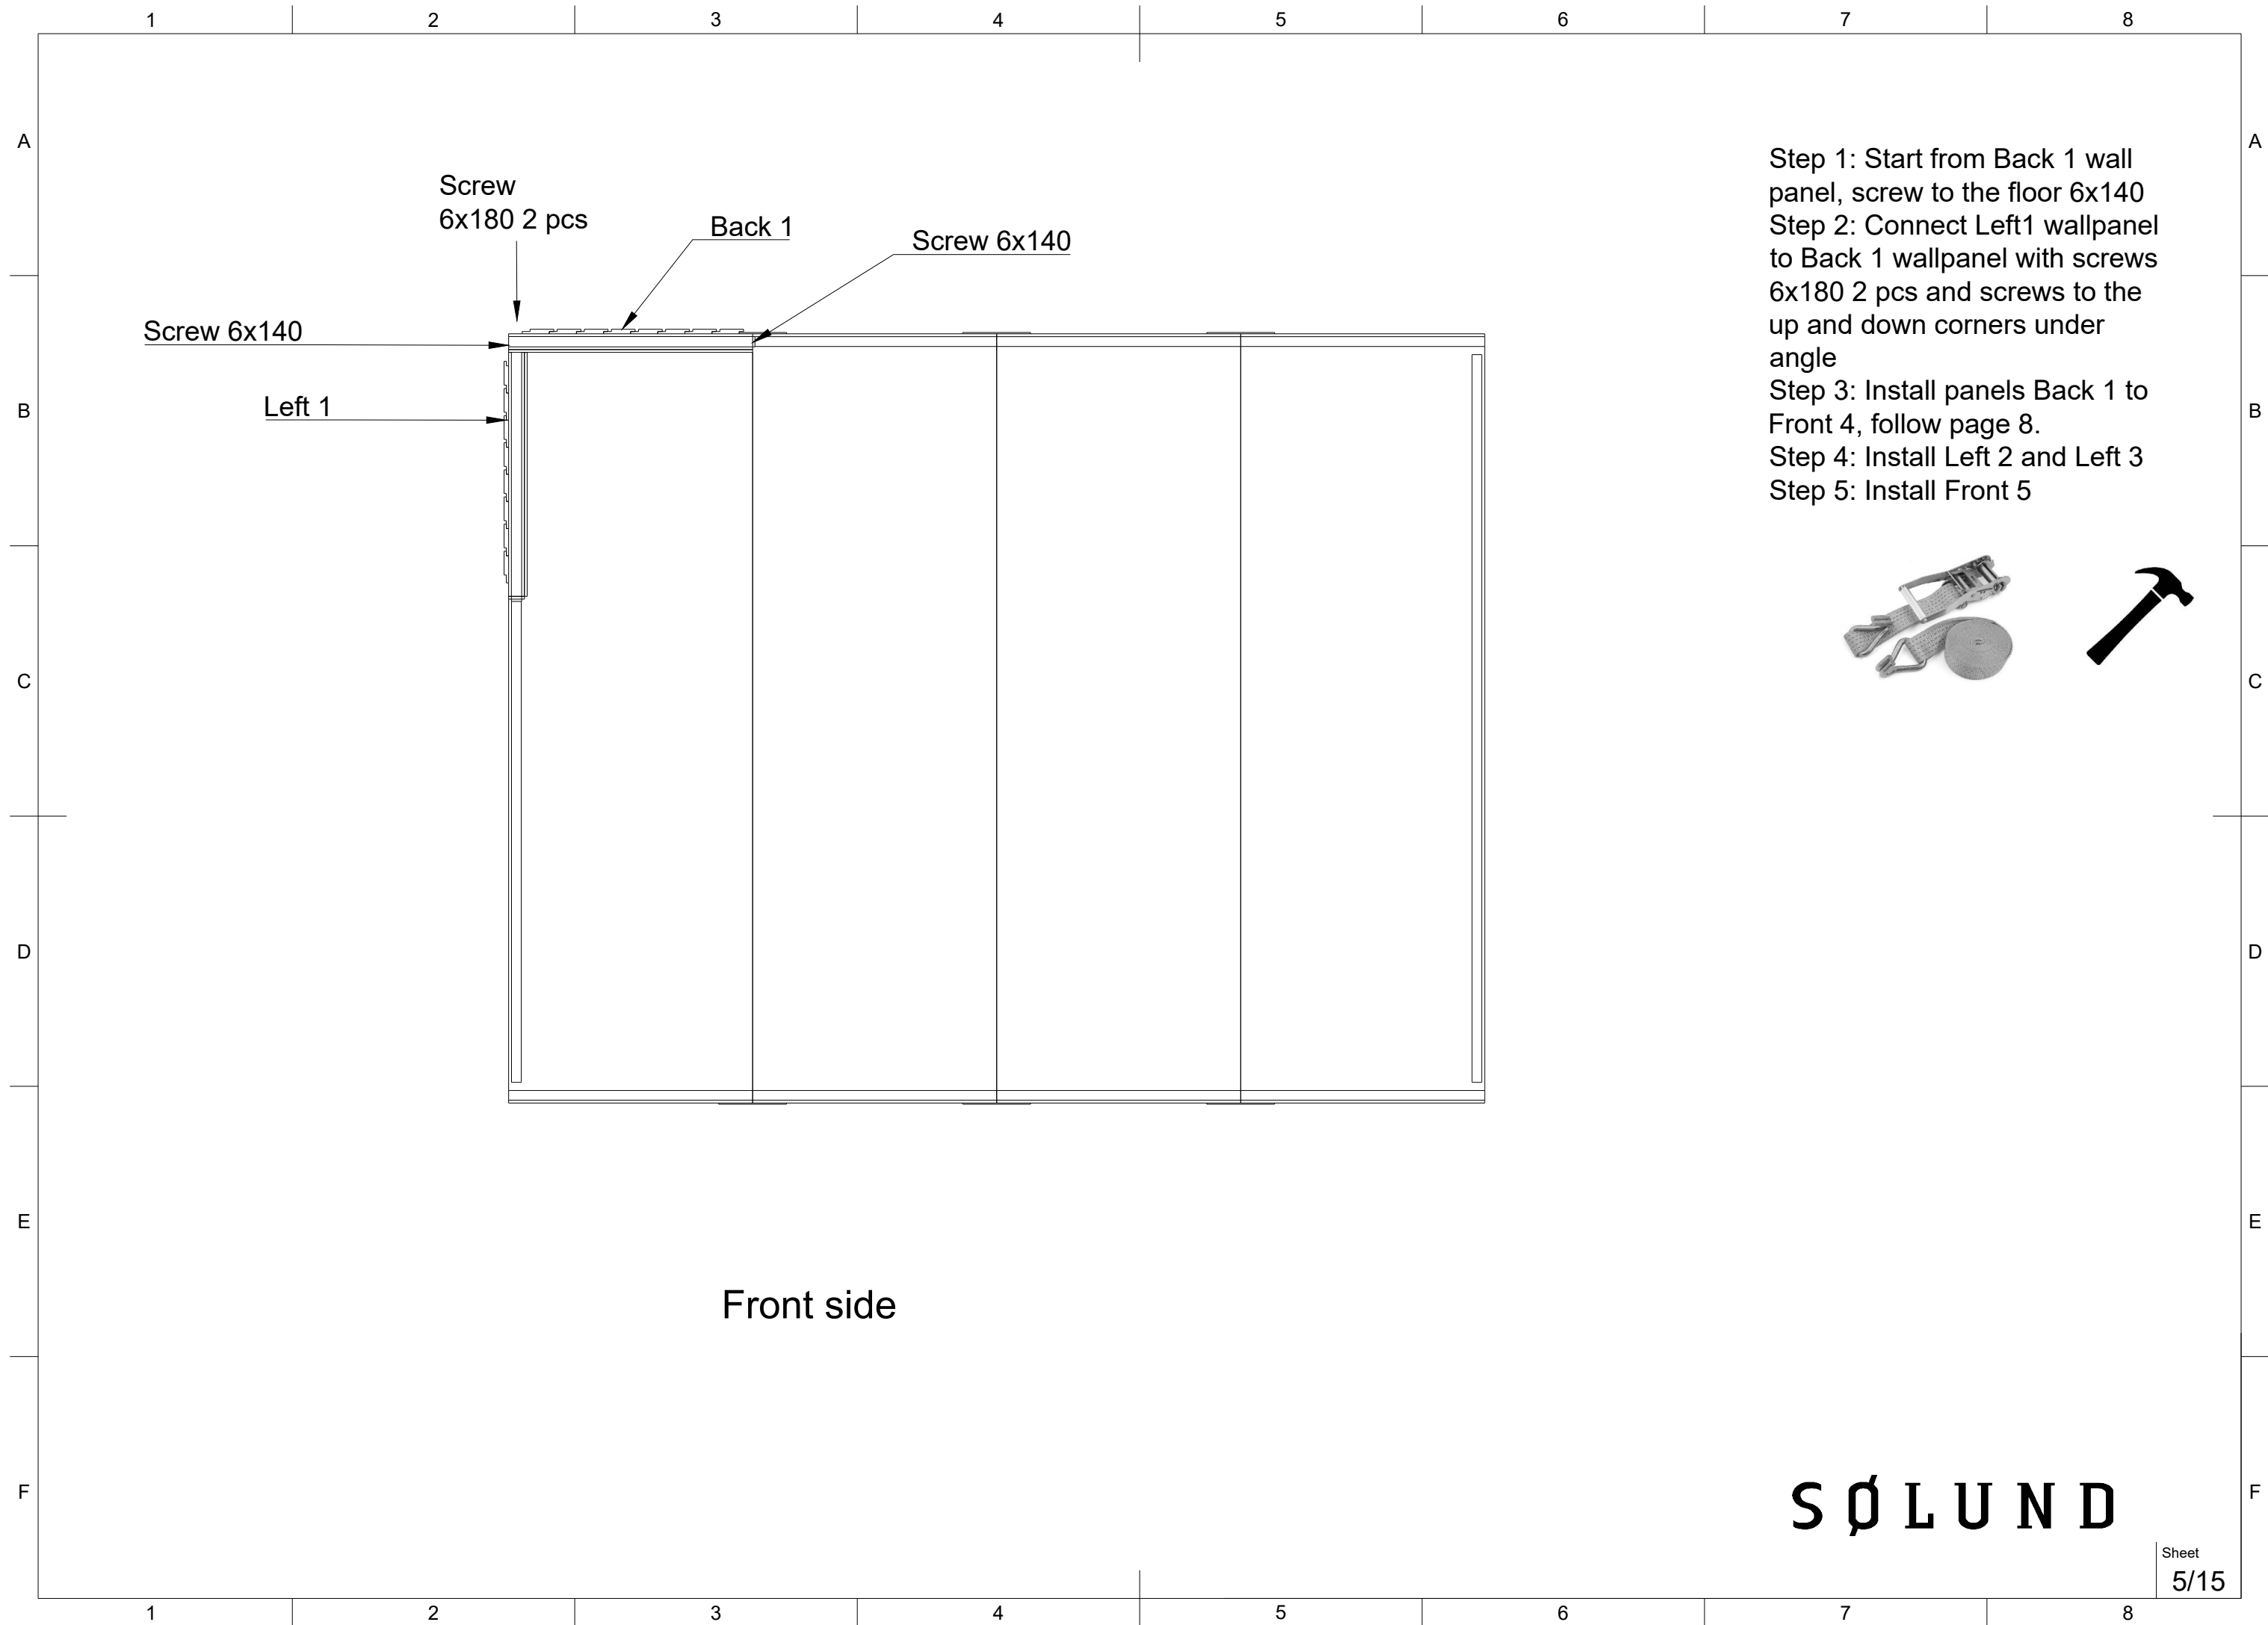

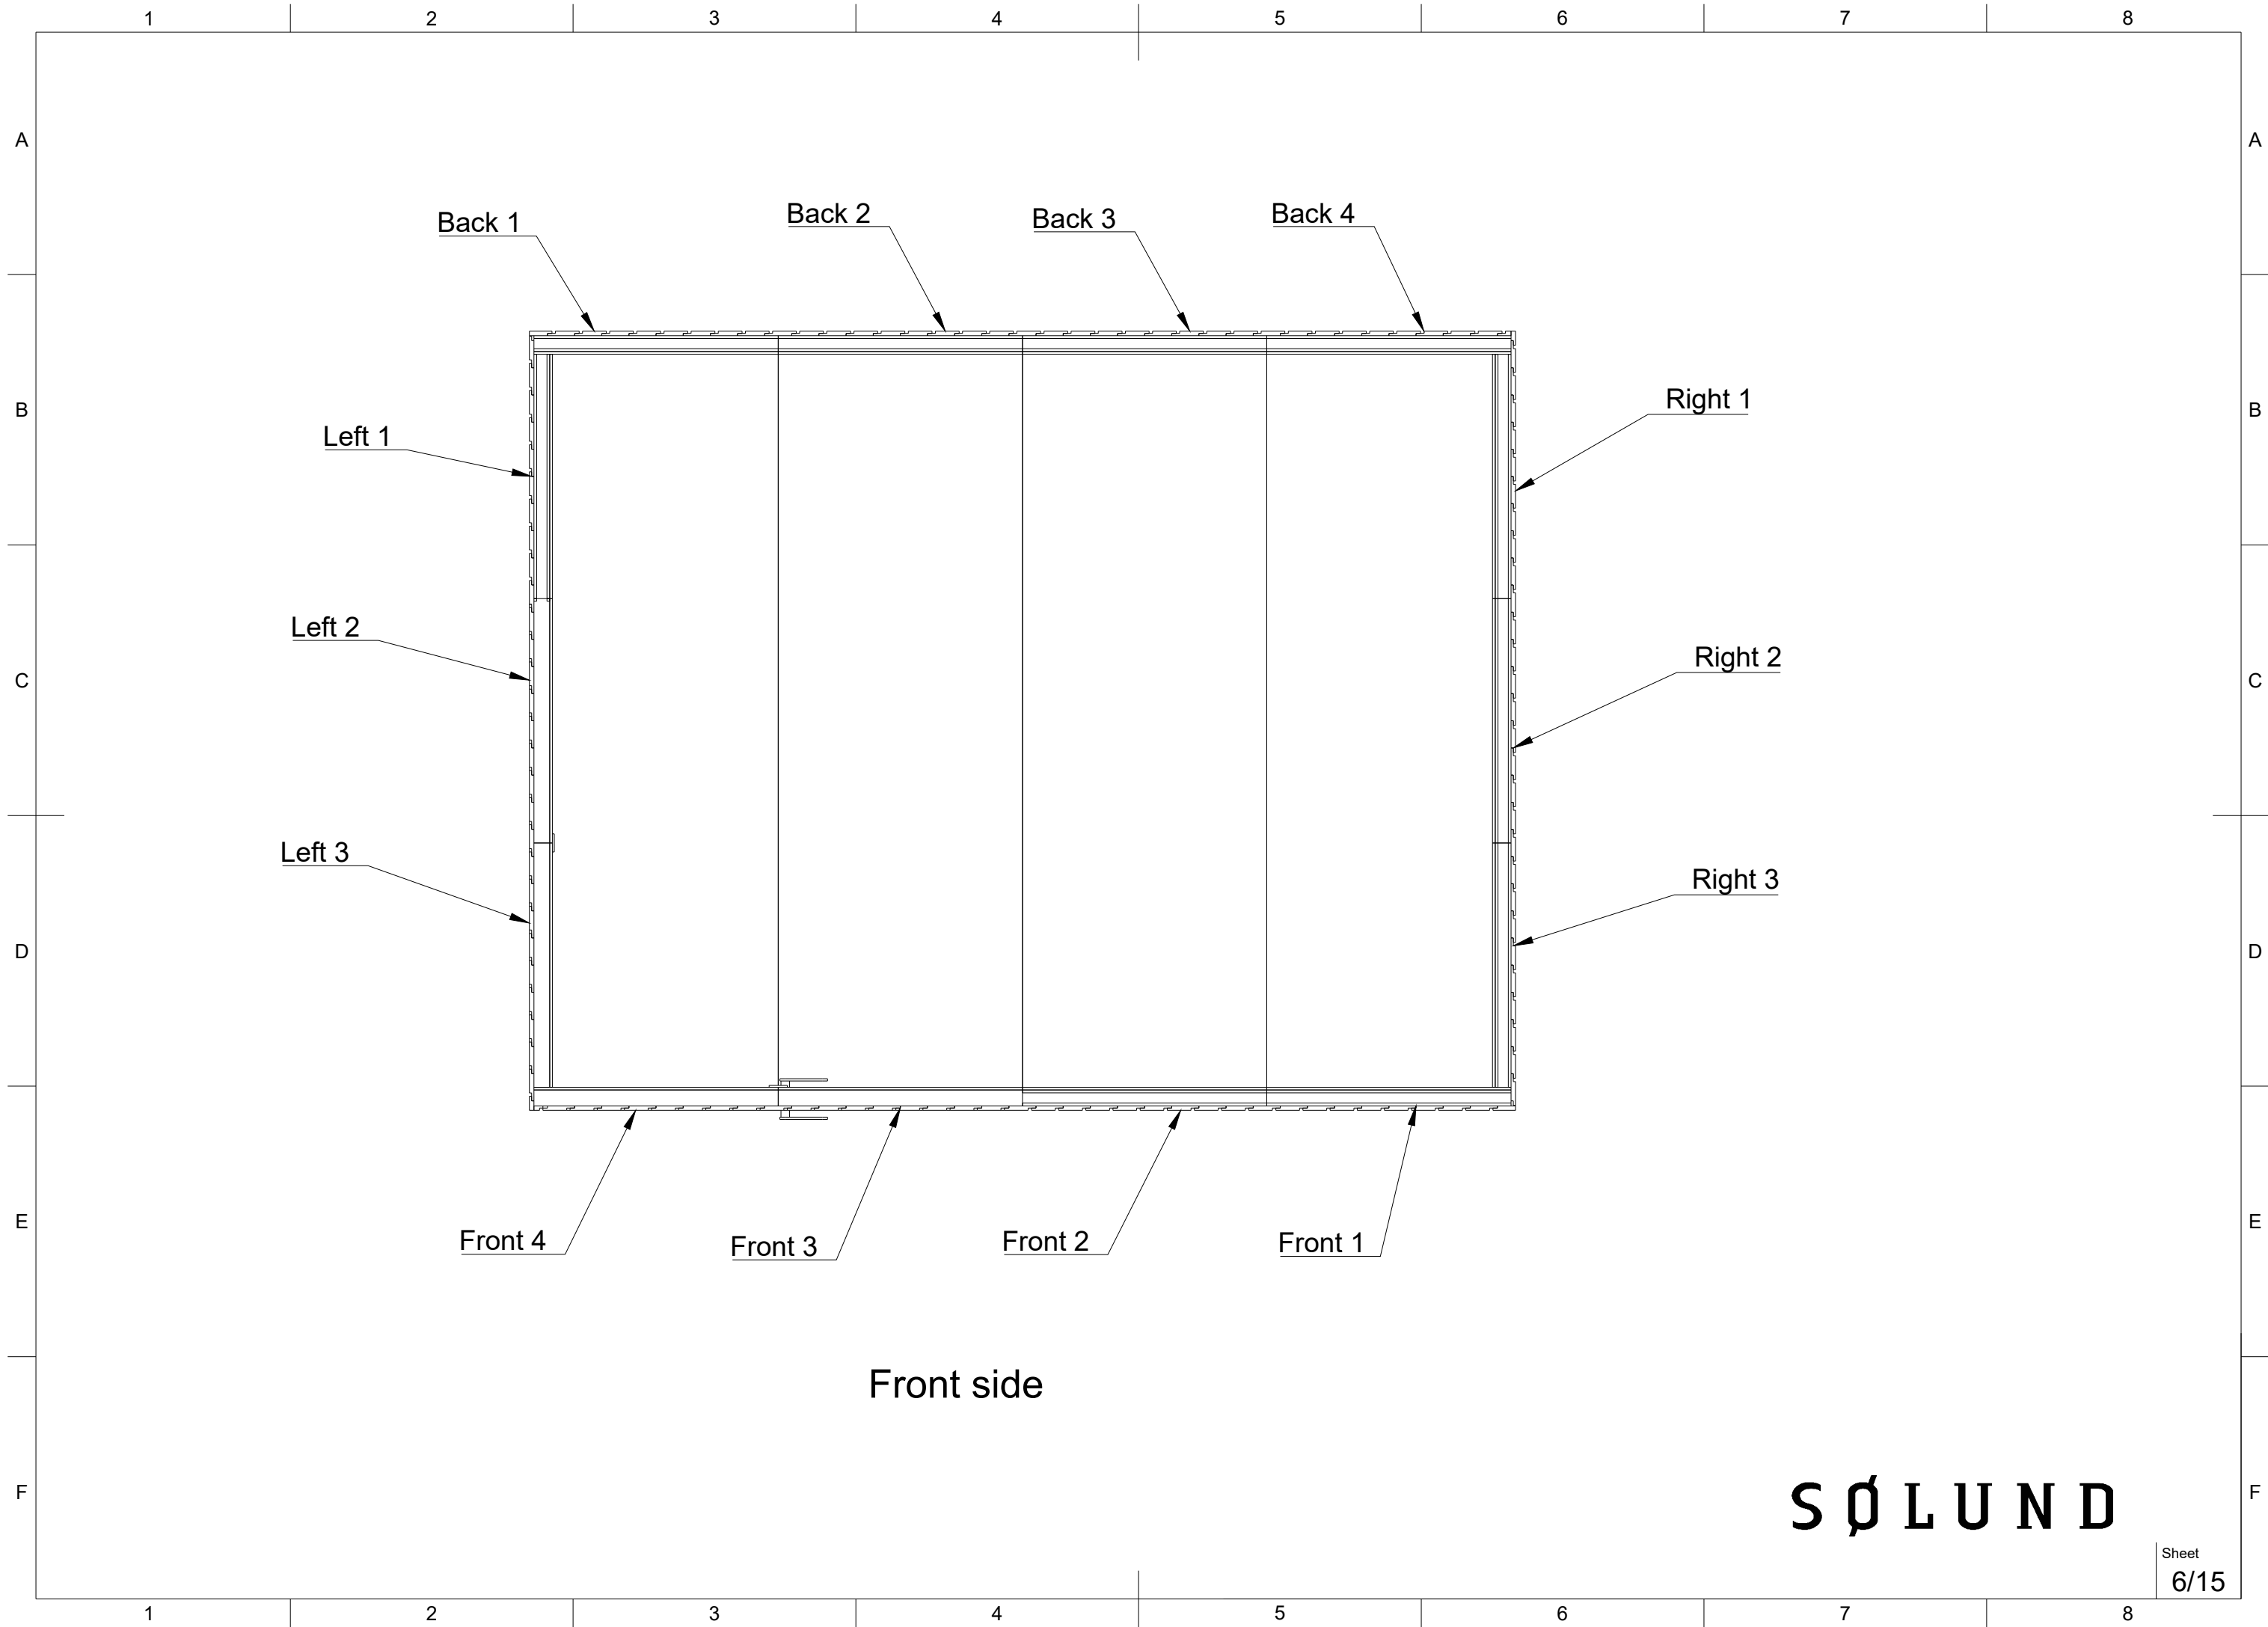

S Ø L U N D

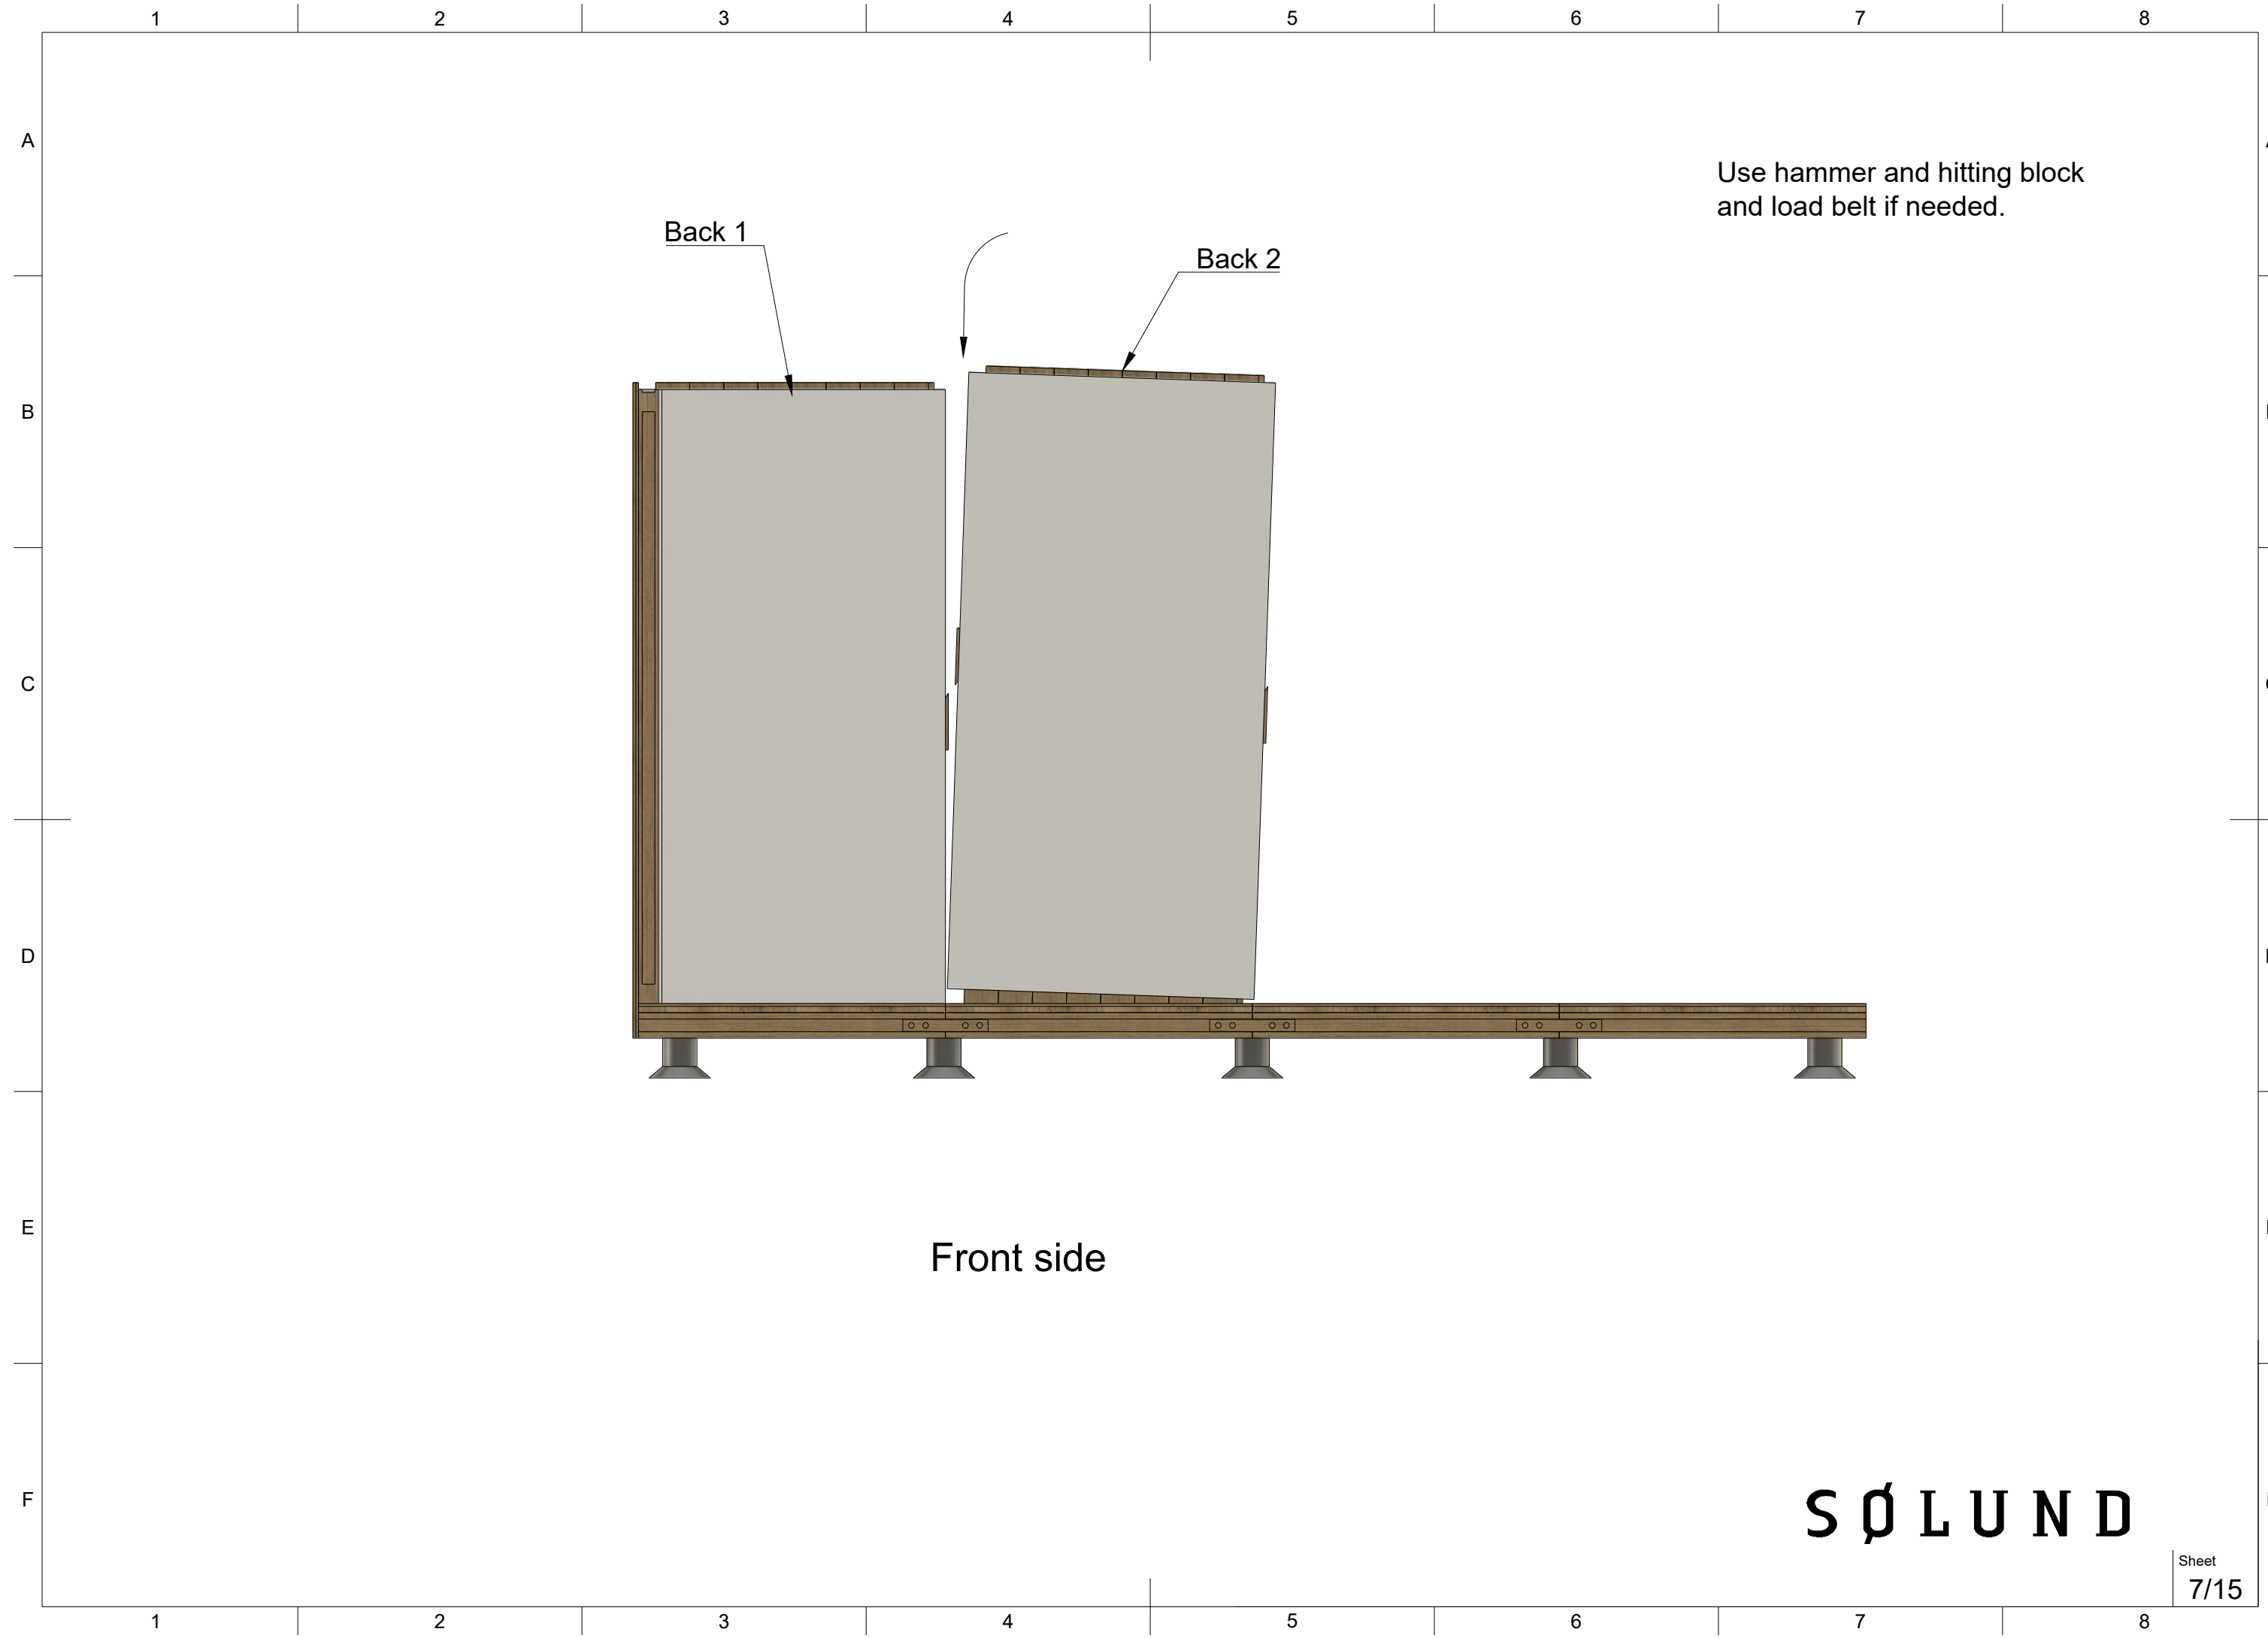


Use hammer and hitting block
and load belt if needed.

Back 1

Back 2


Front side


S Ø L U N D

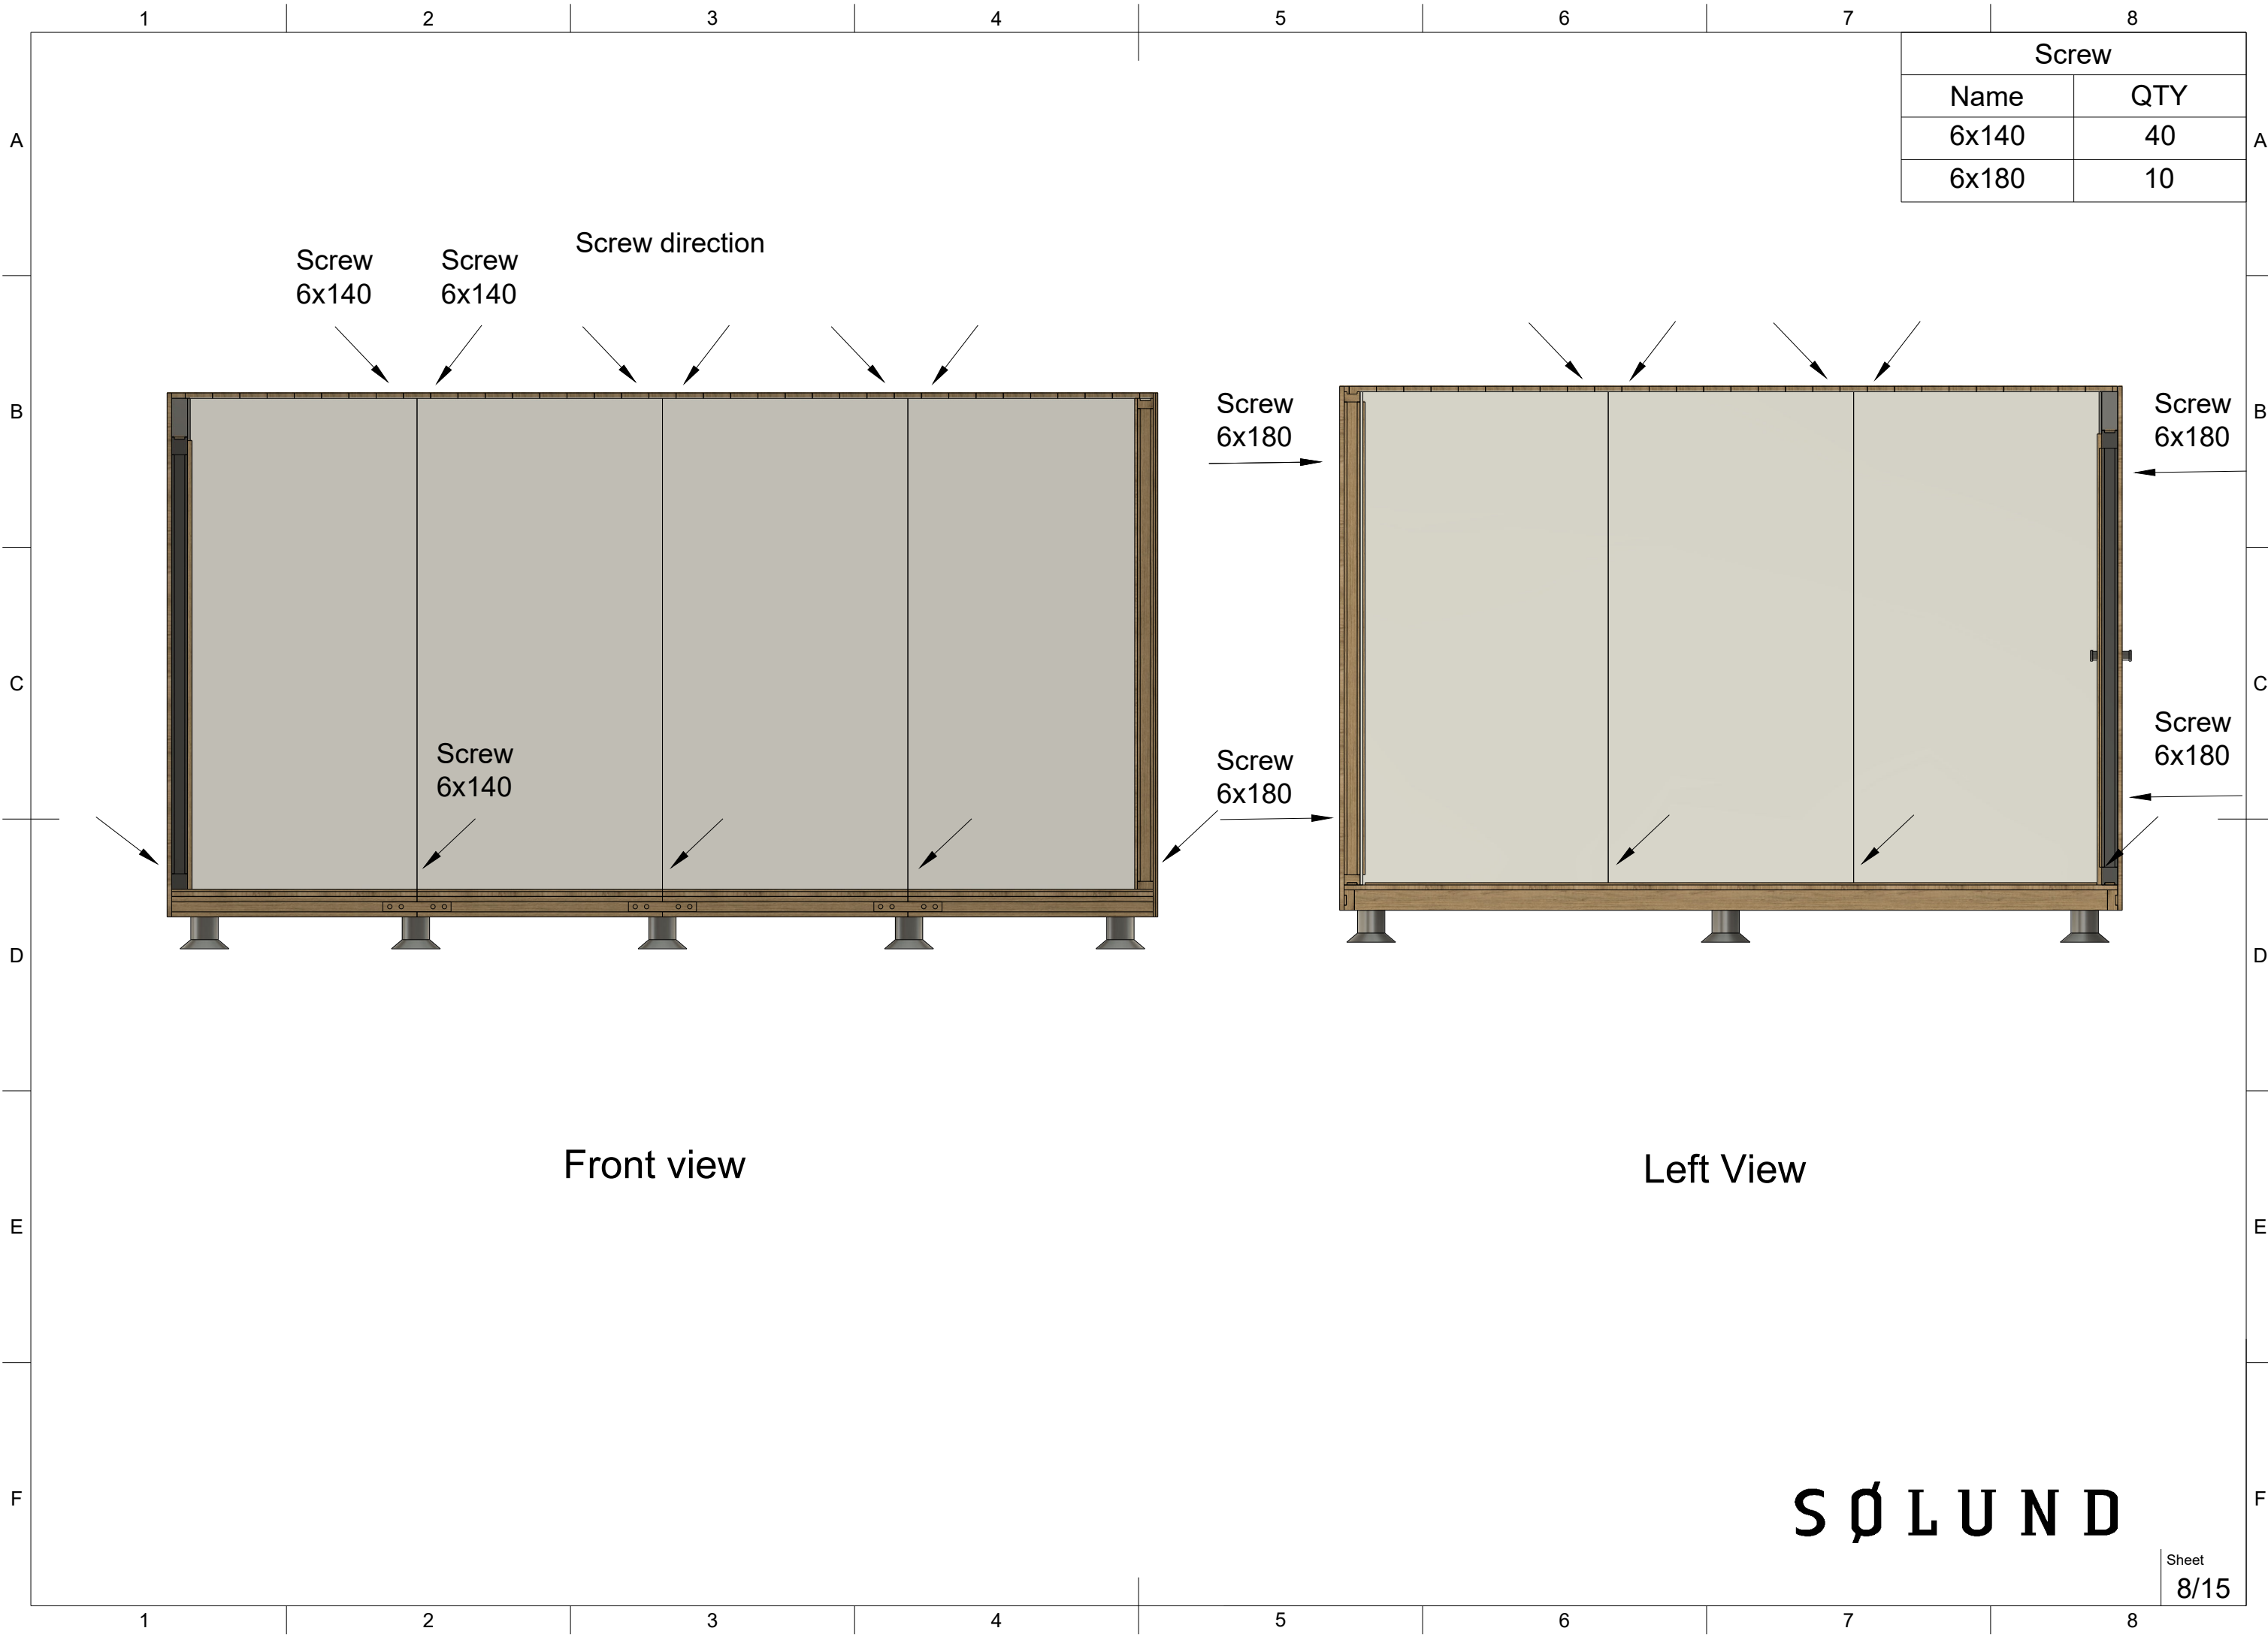



Screw	
Name	QTY
6x140	40
6x180	10

S Ø L U N D

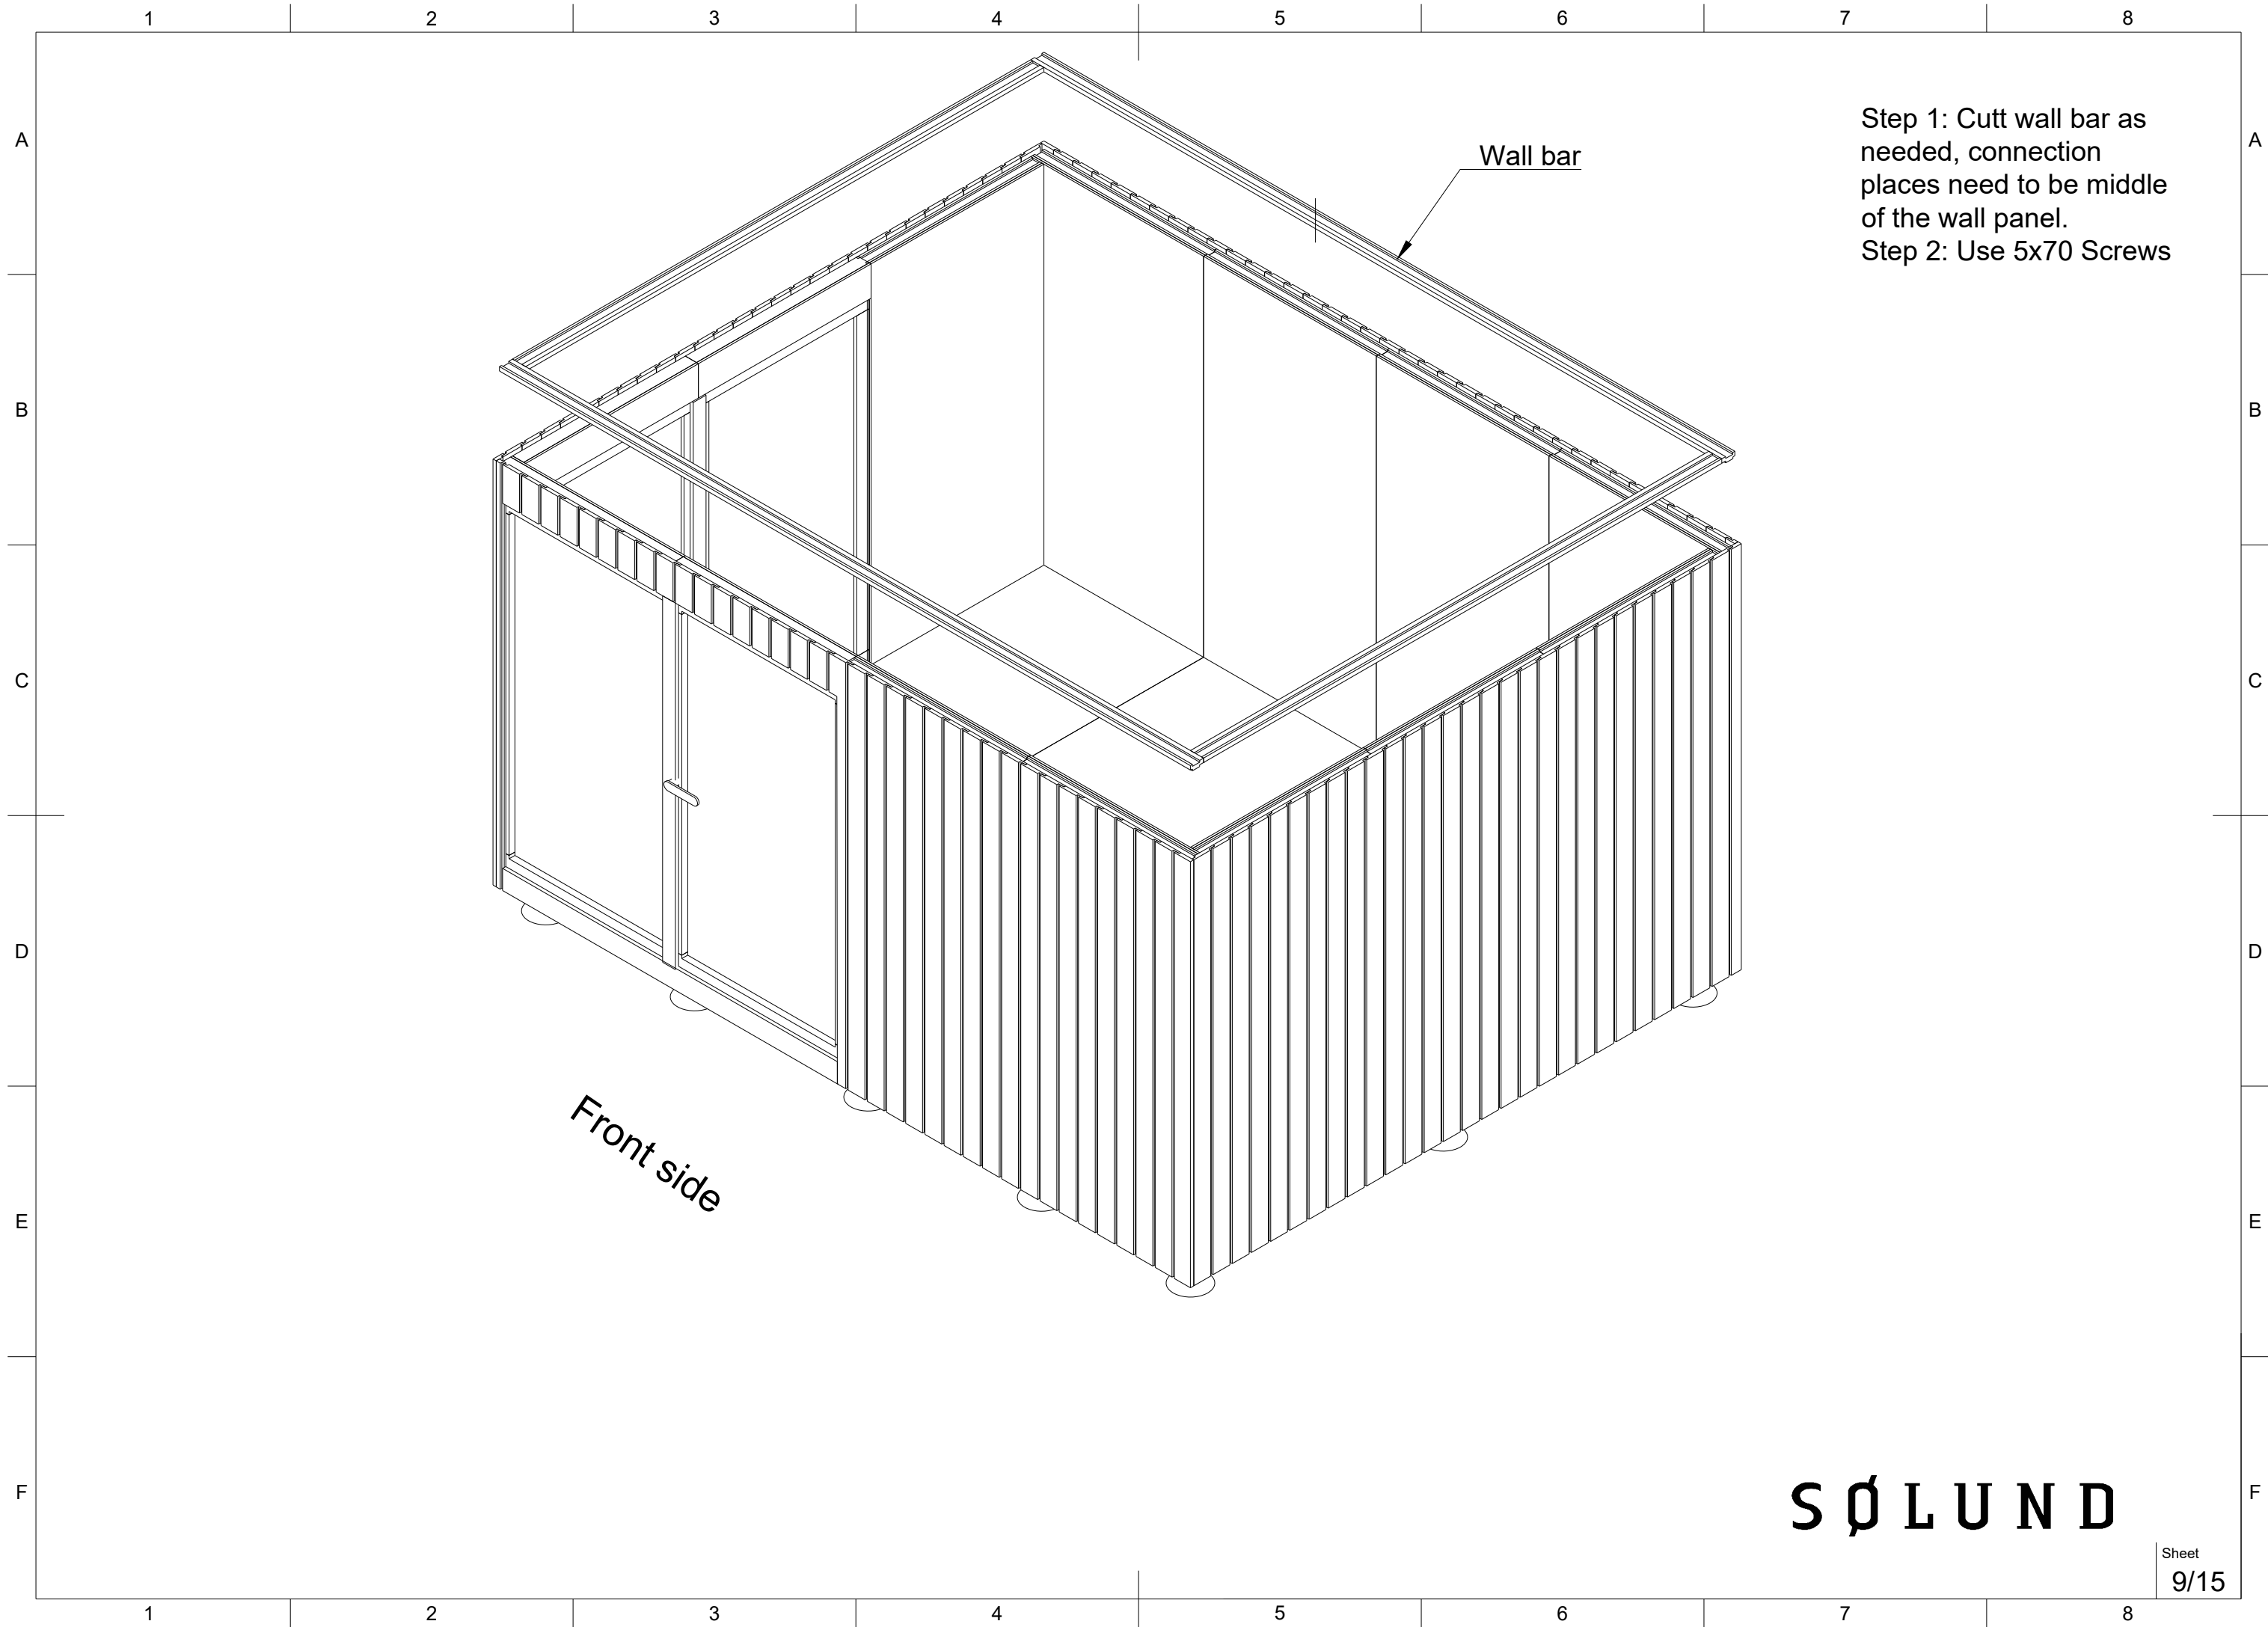


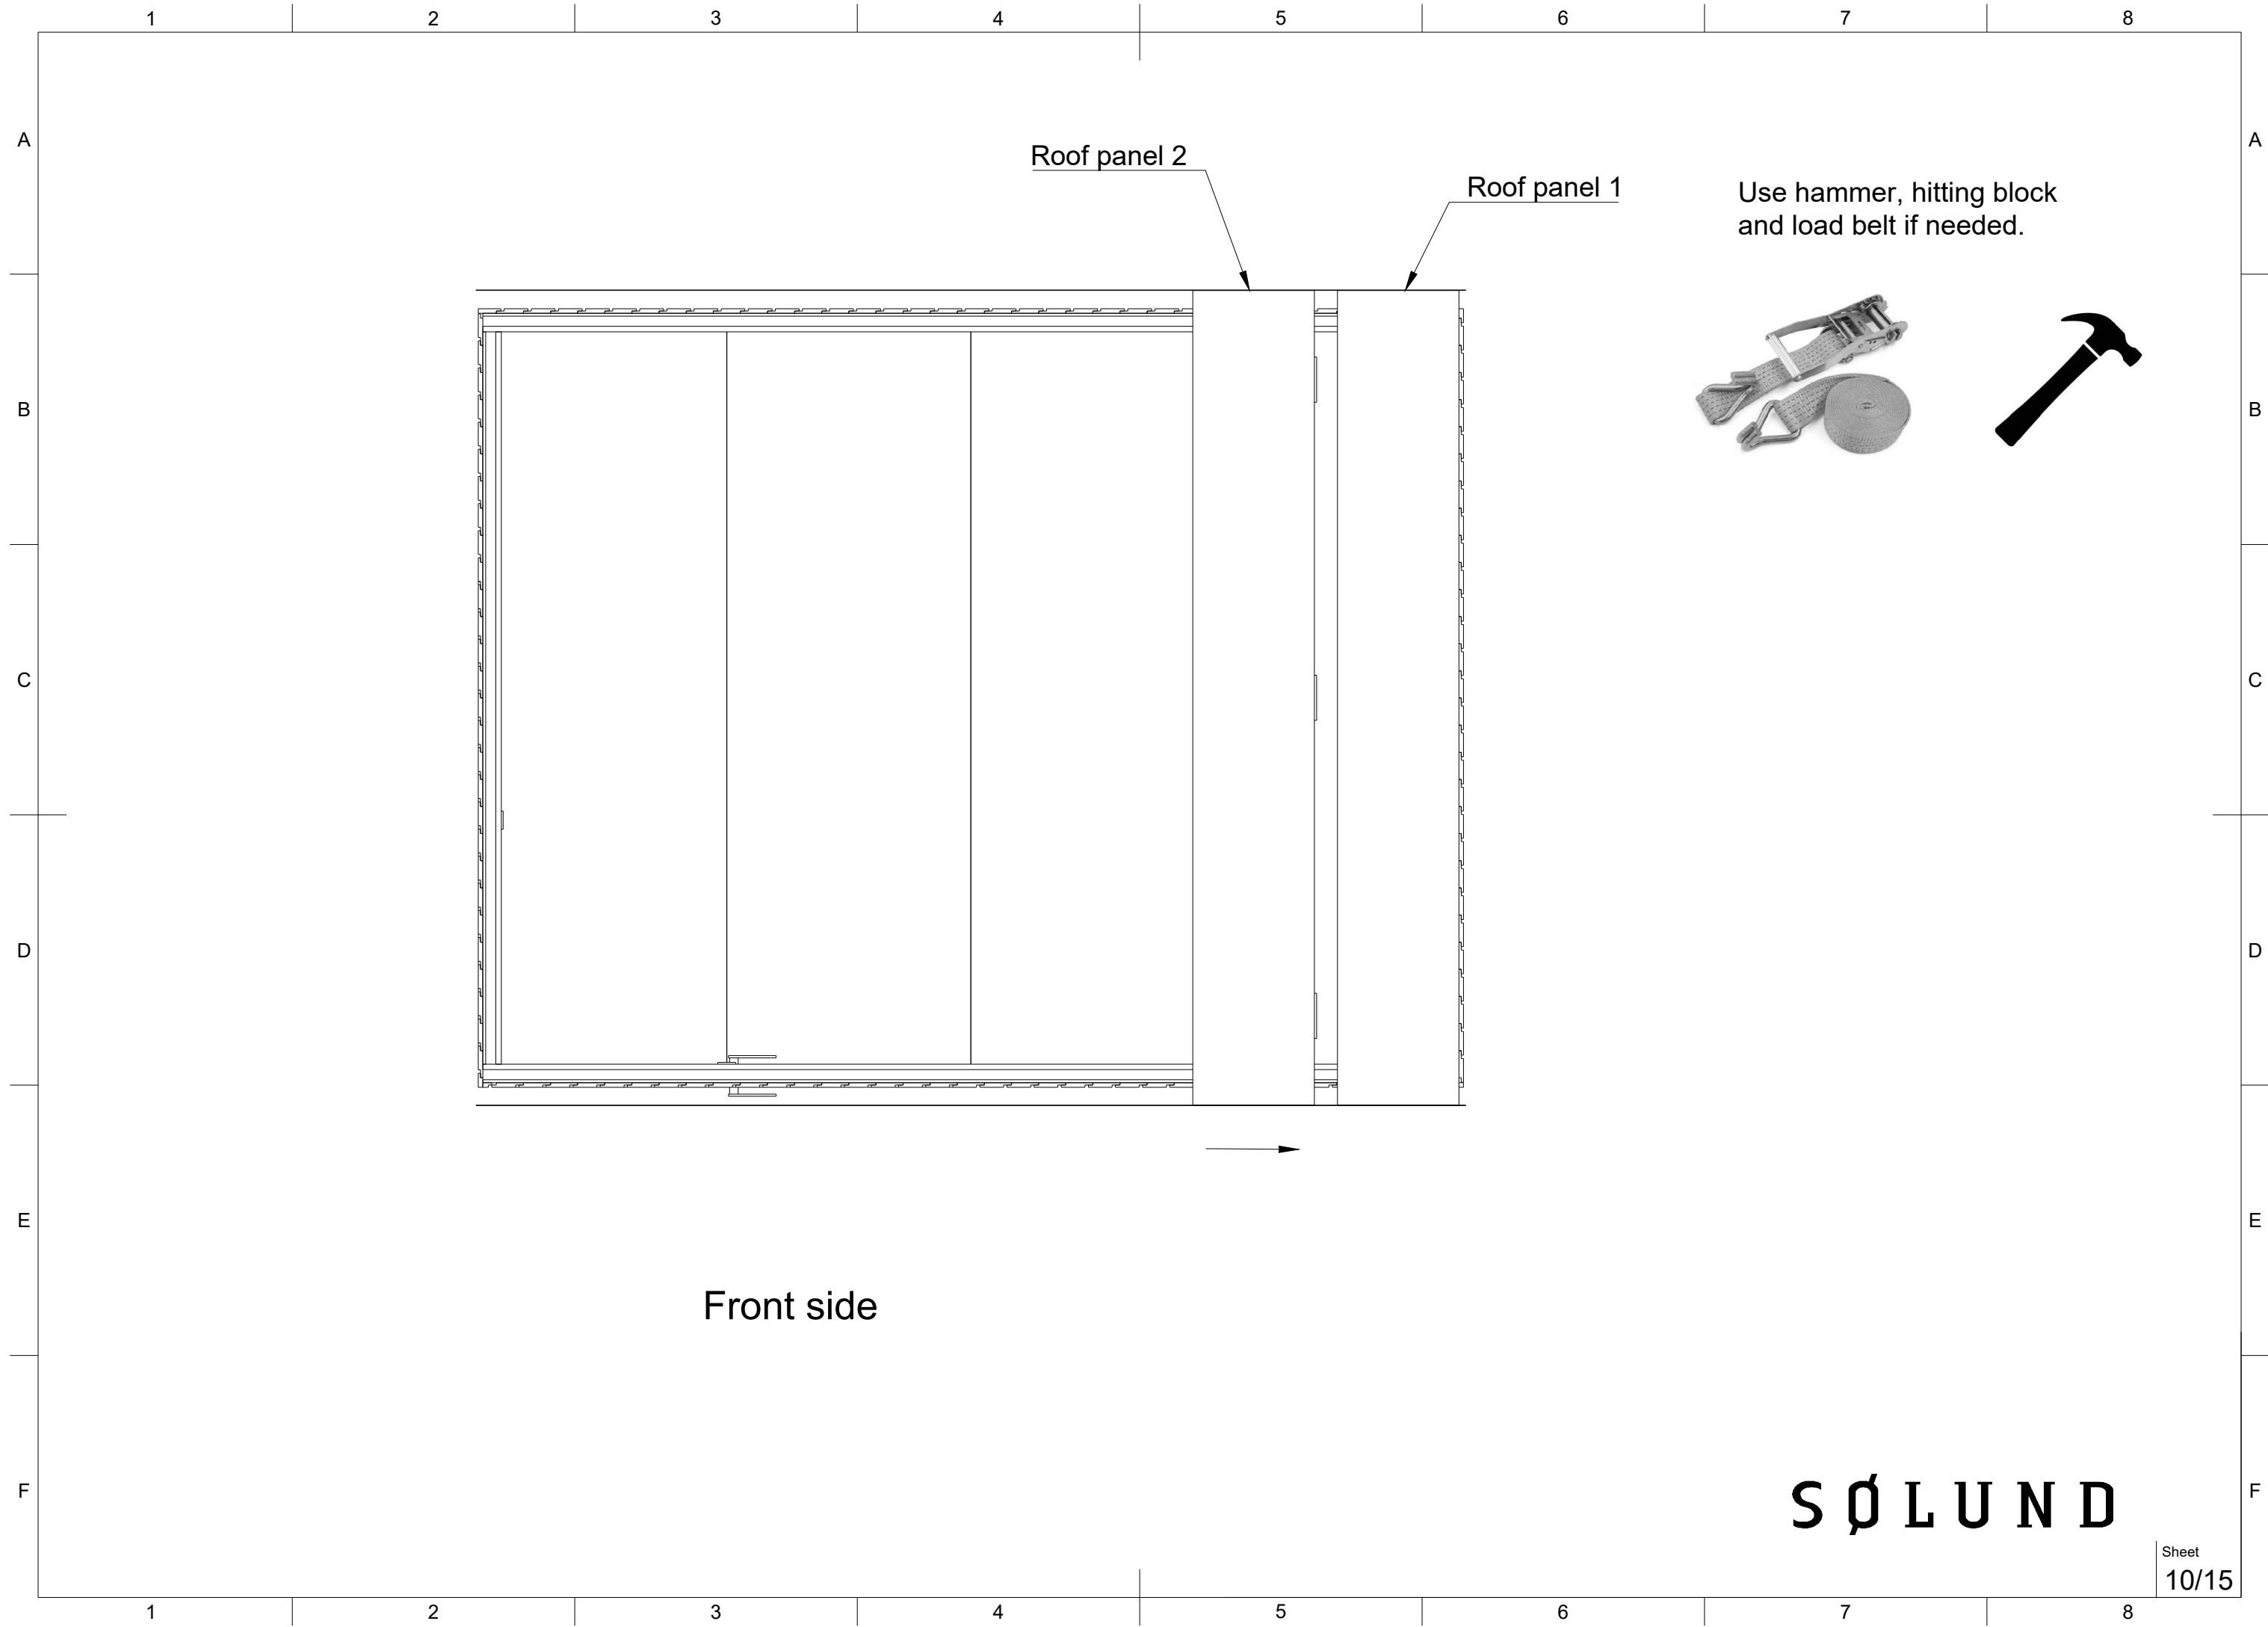

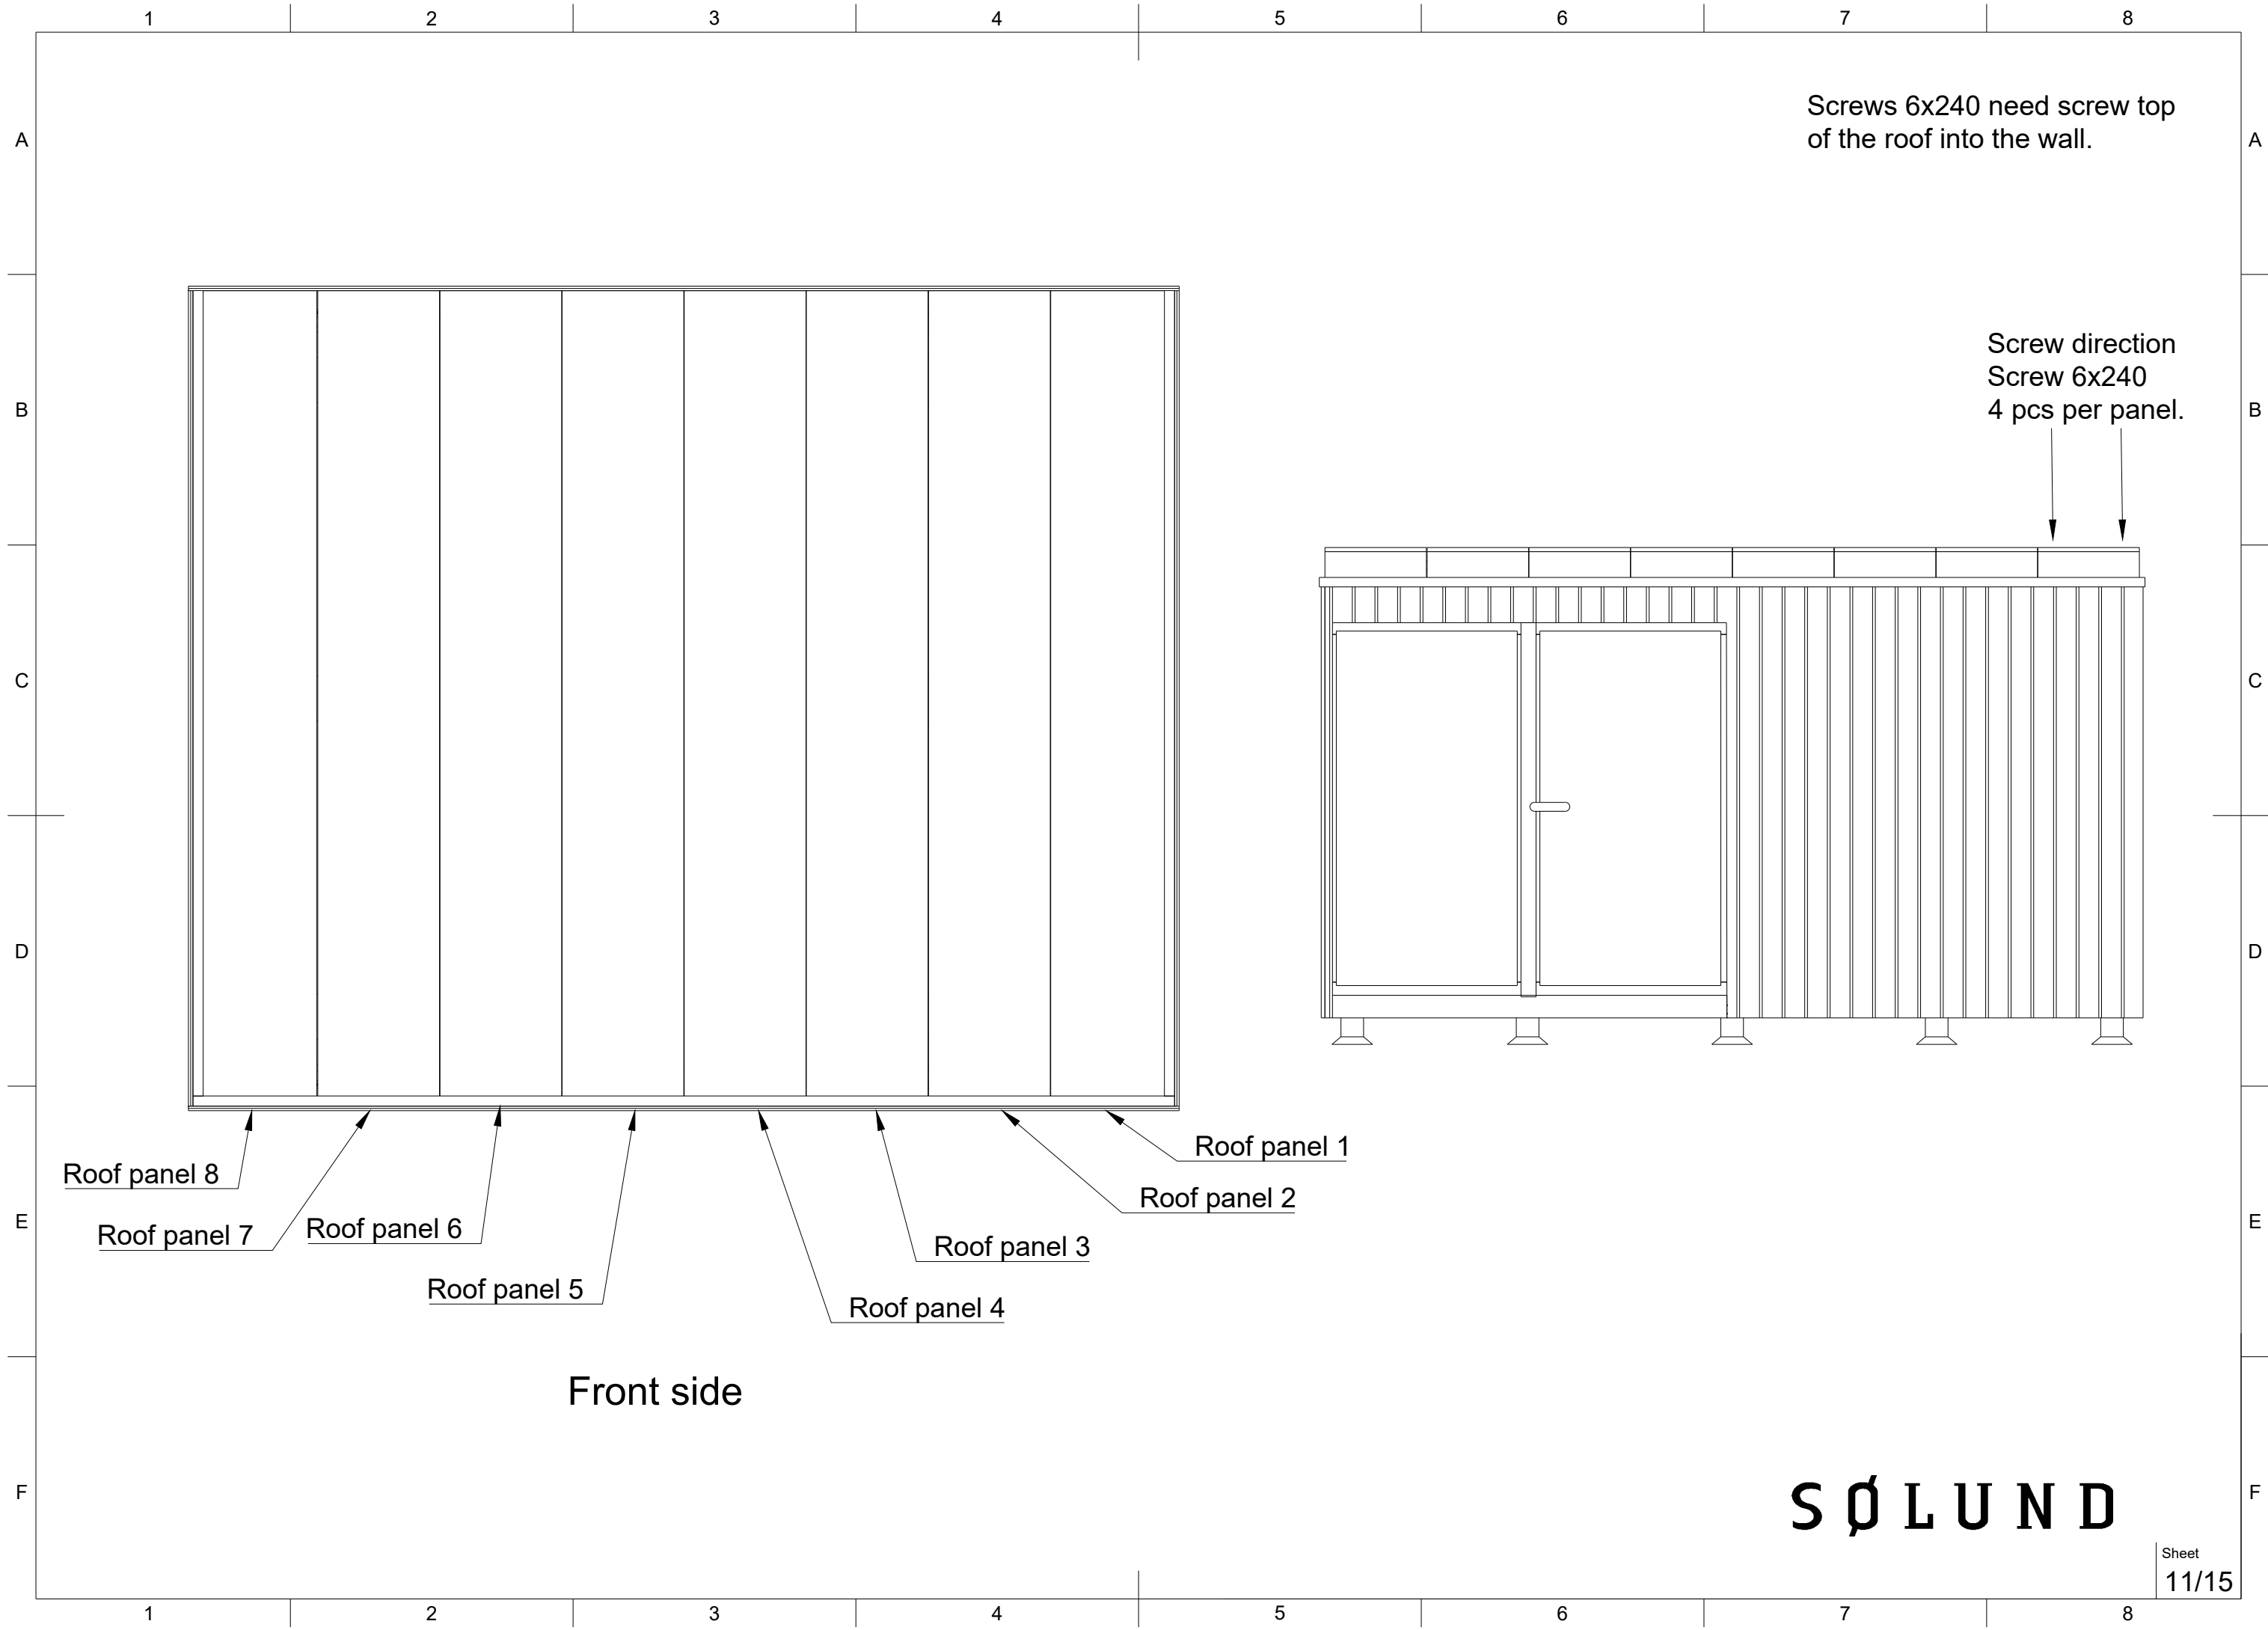


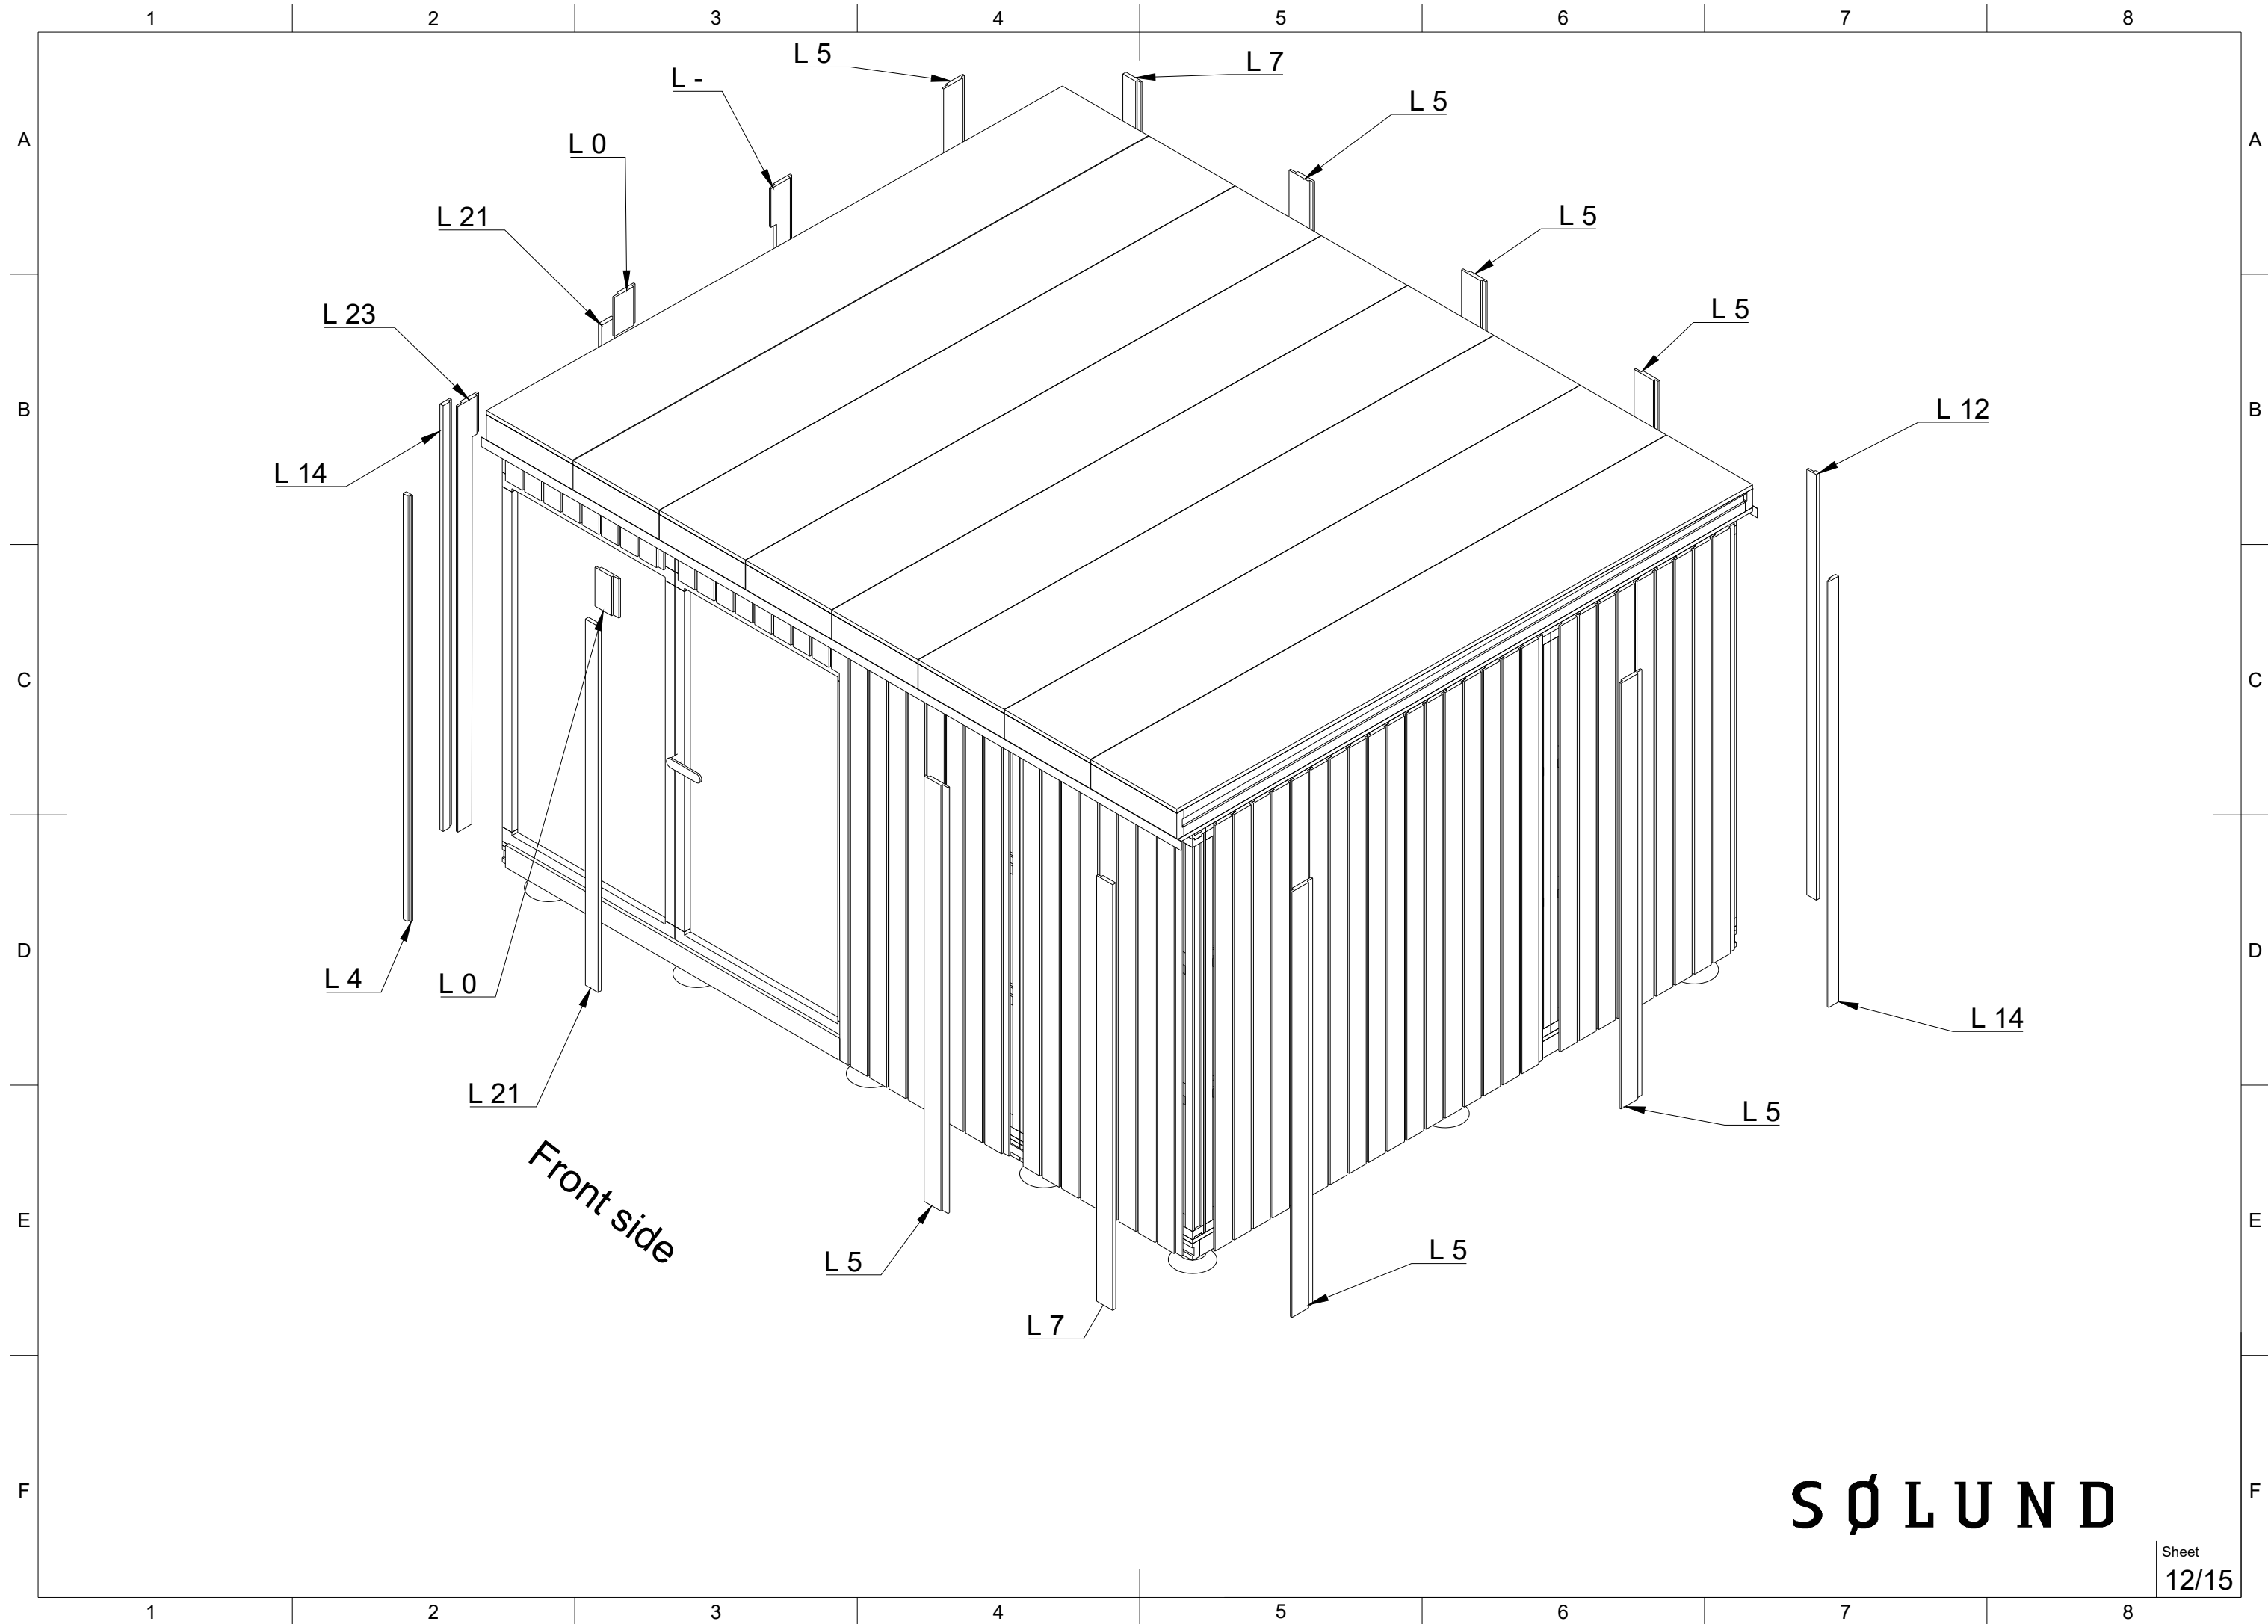


SØLUND

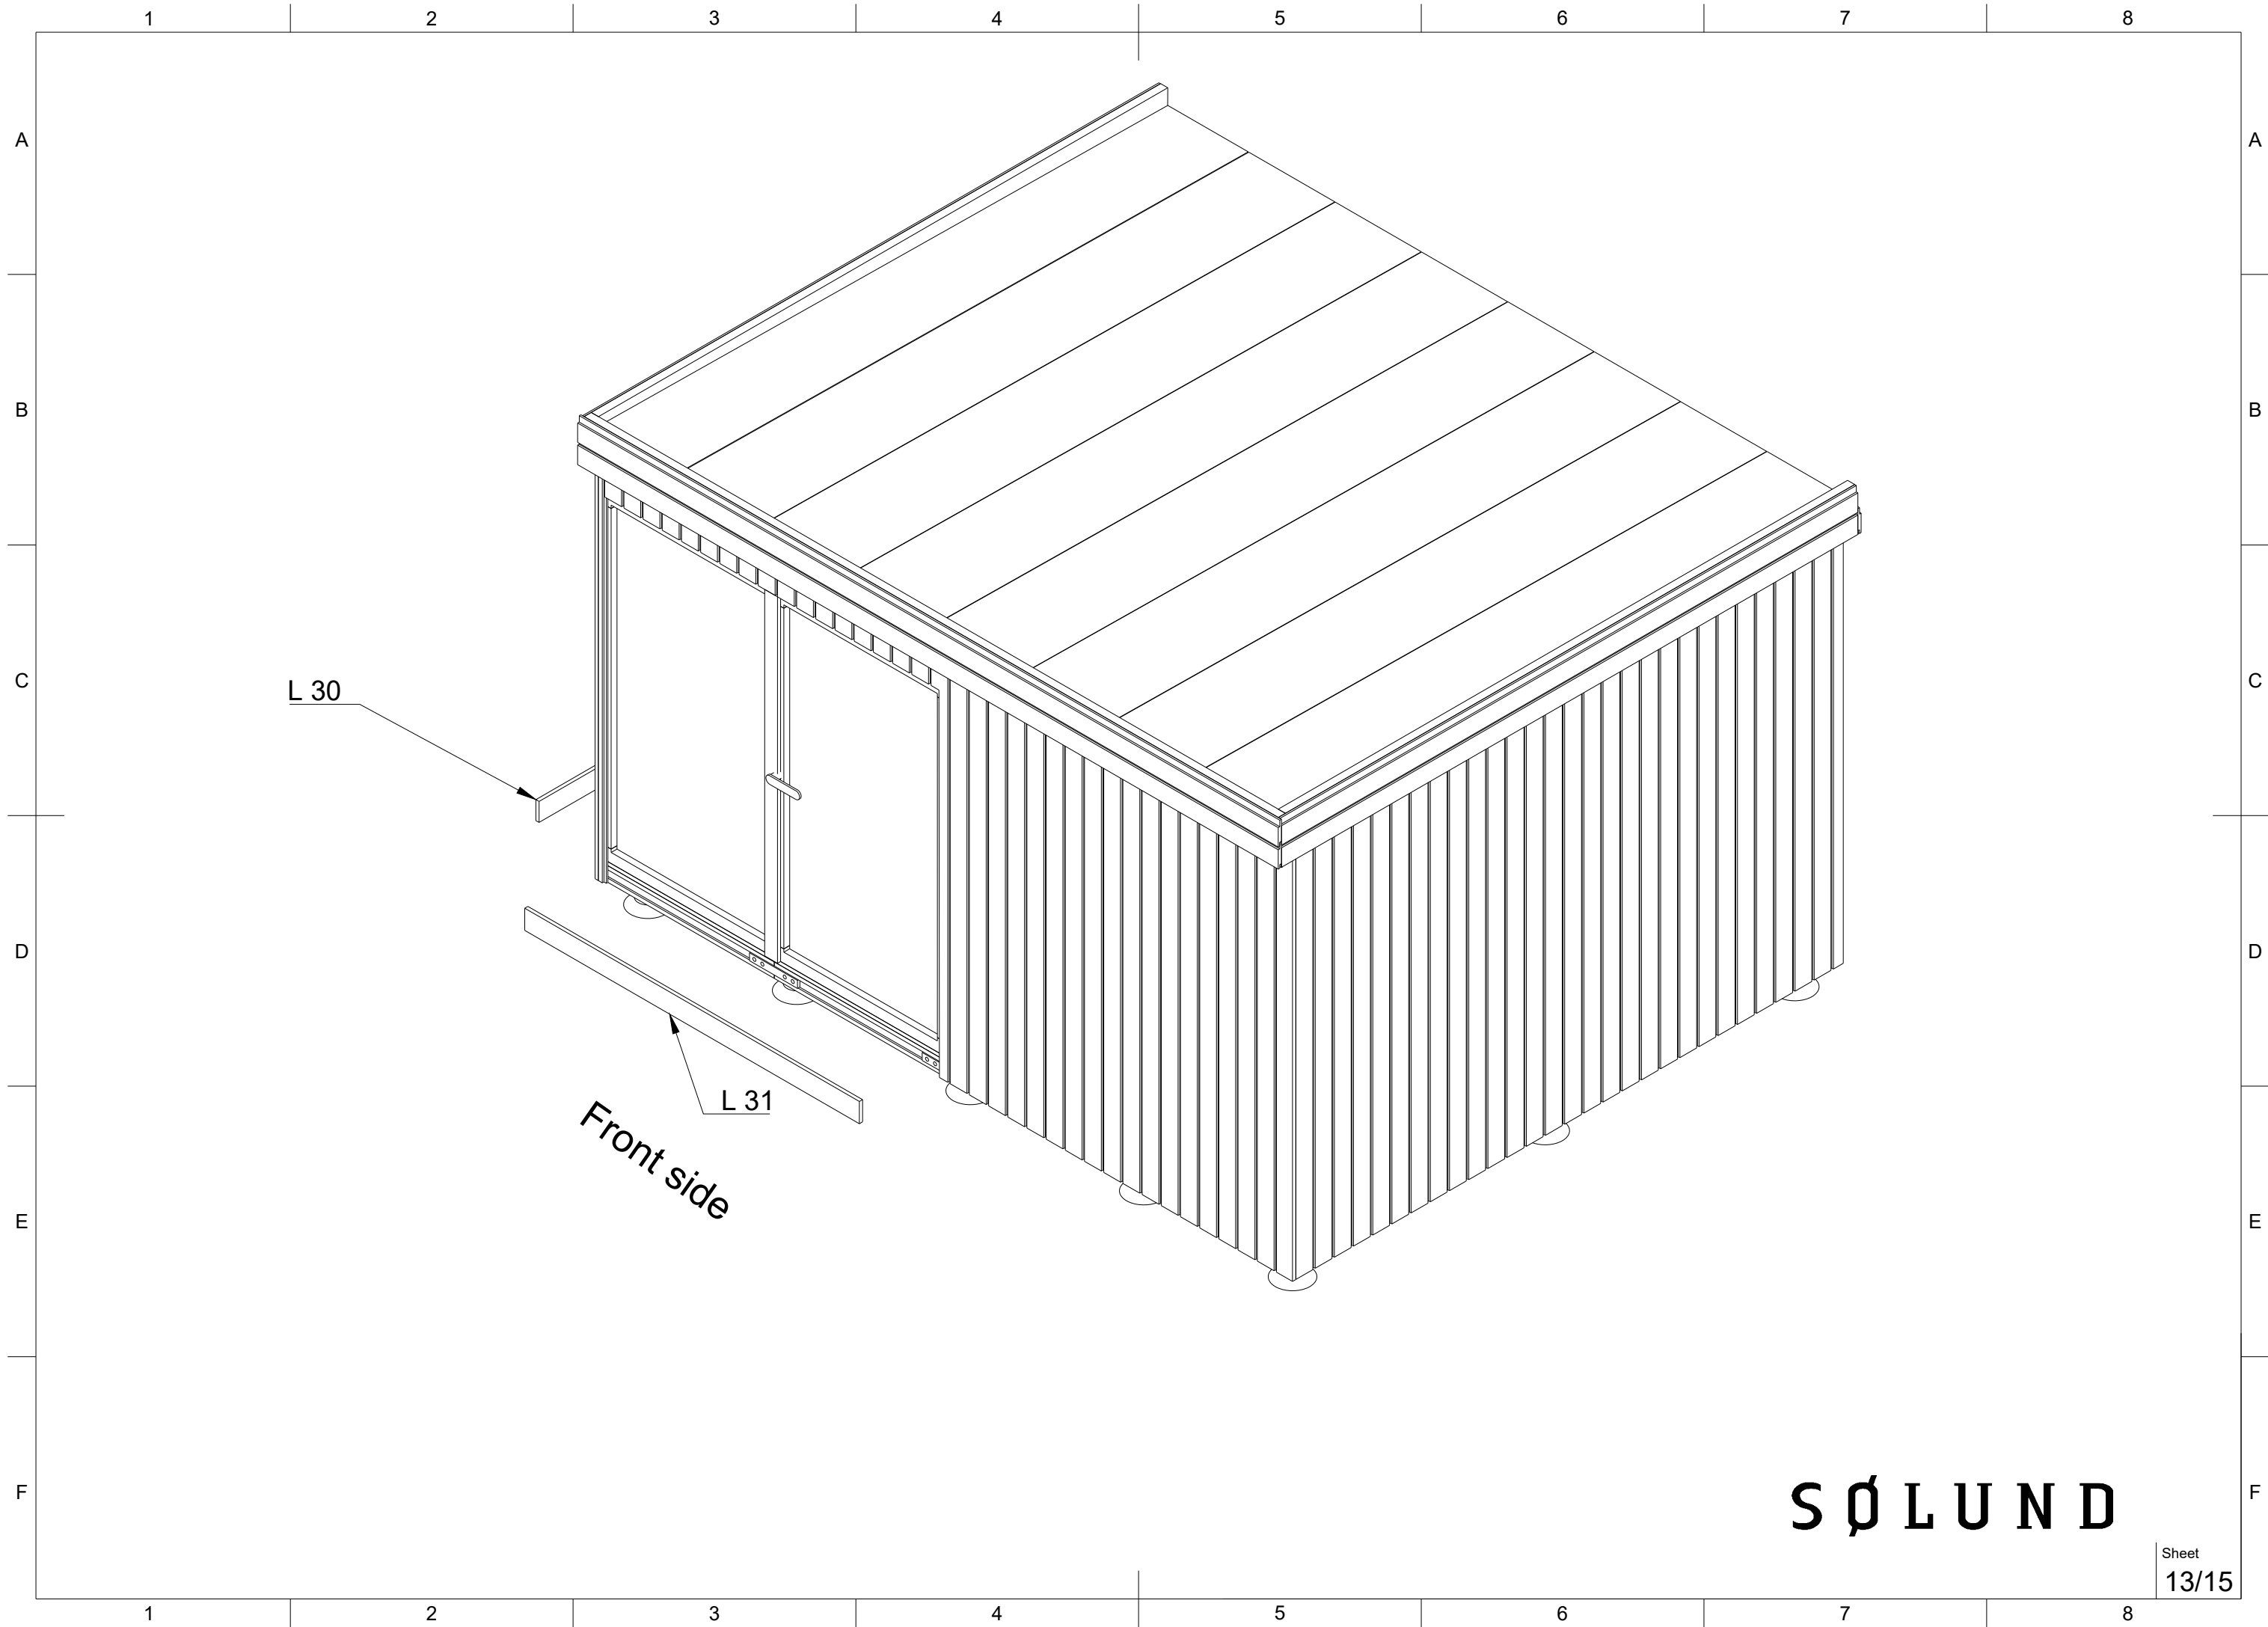


S Ø L U N D

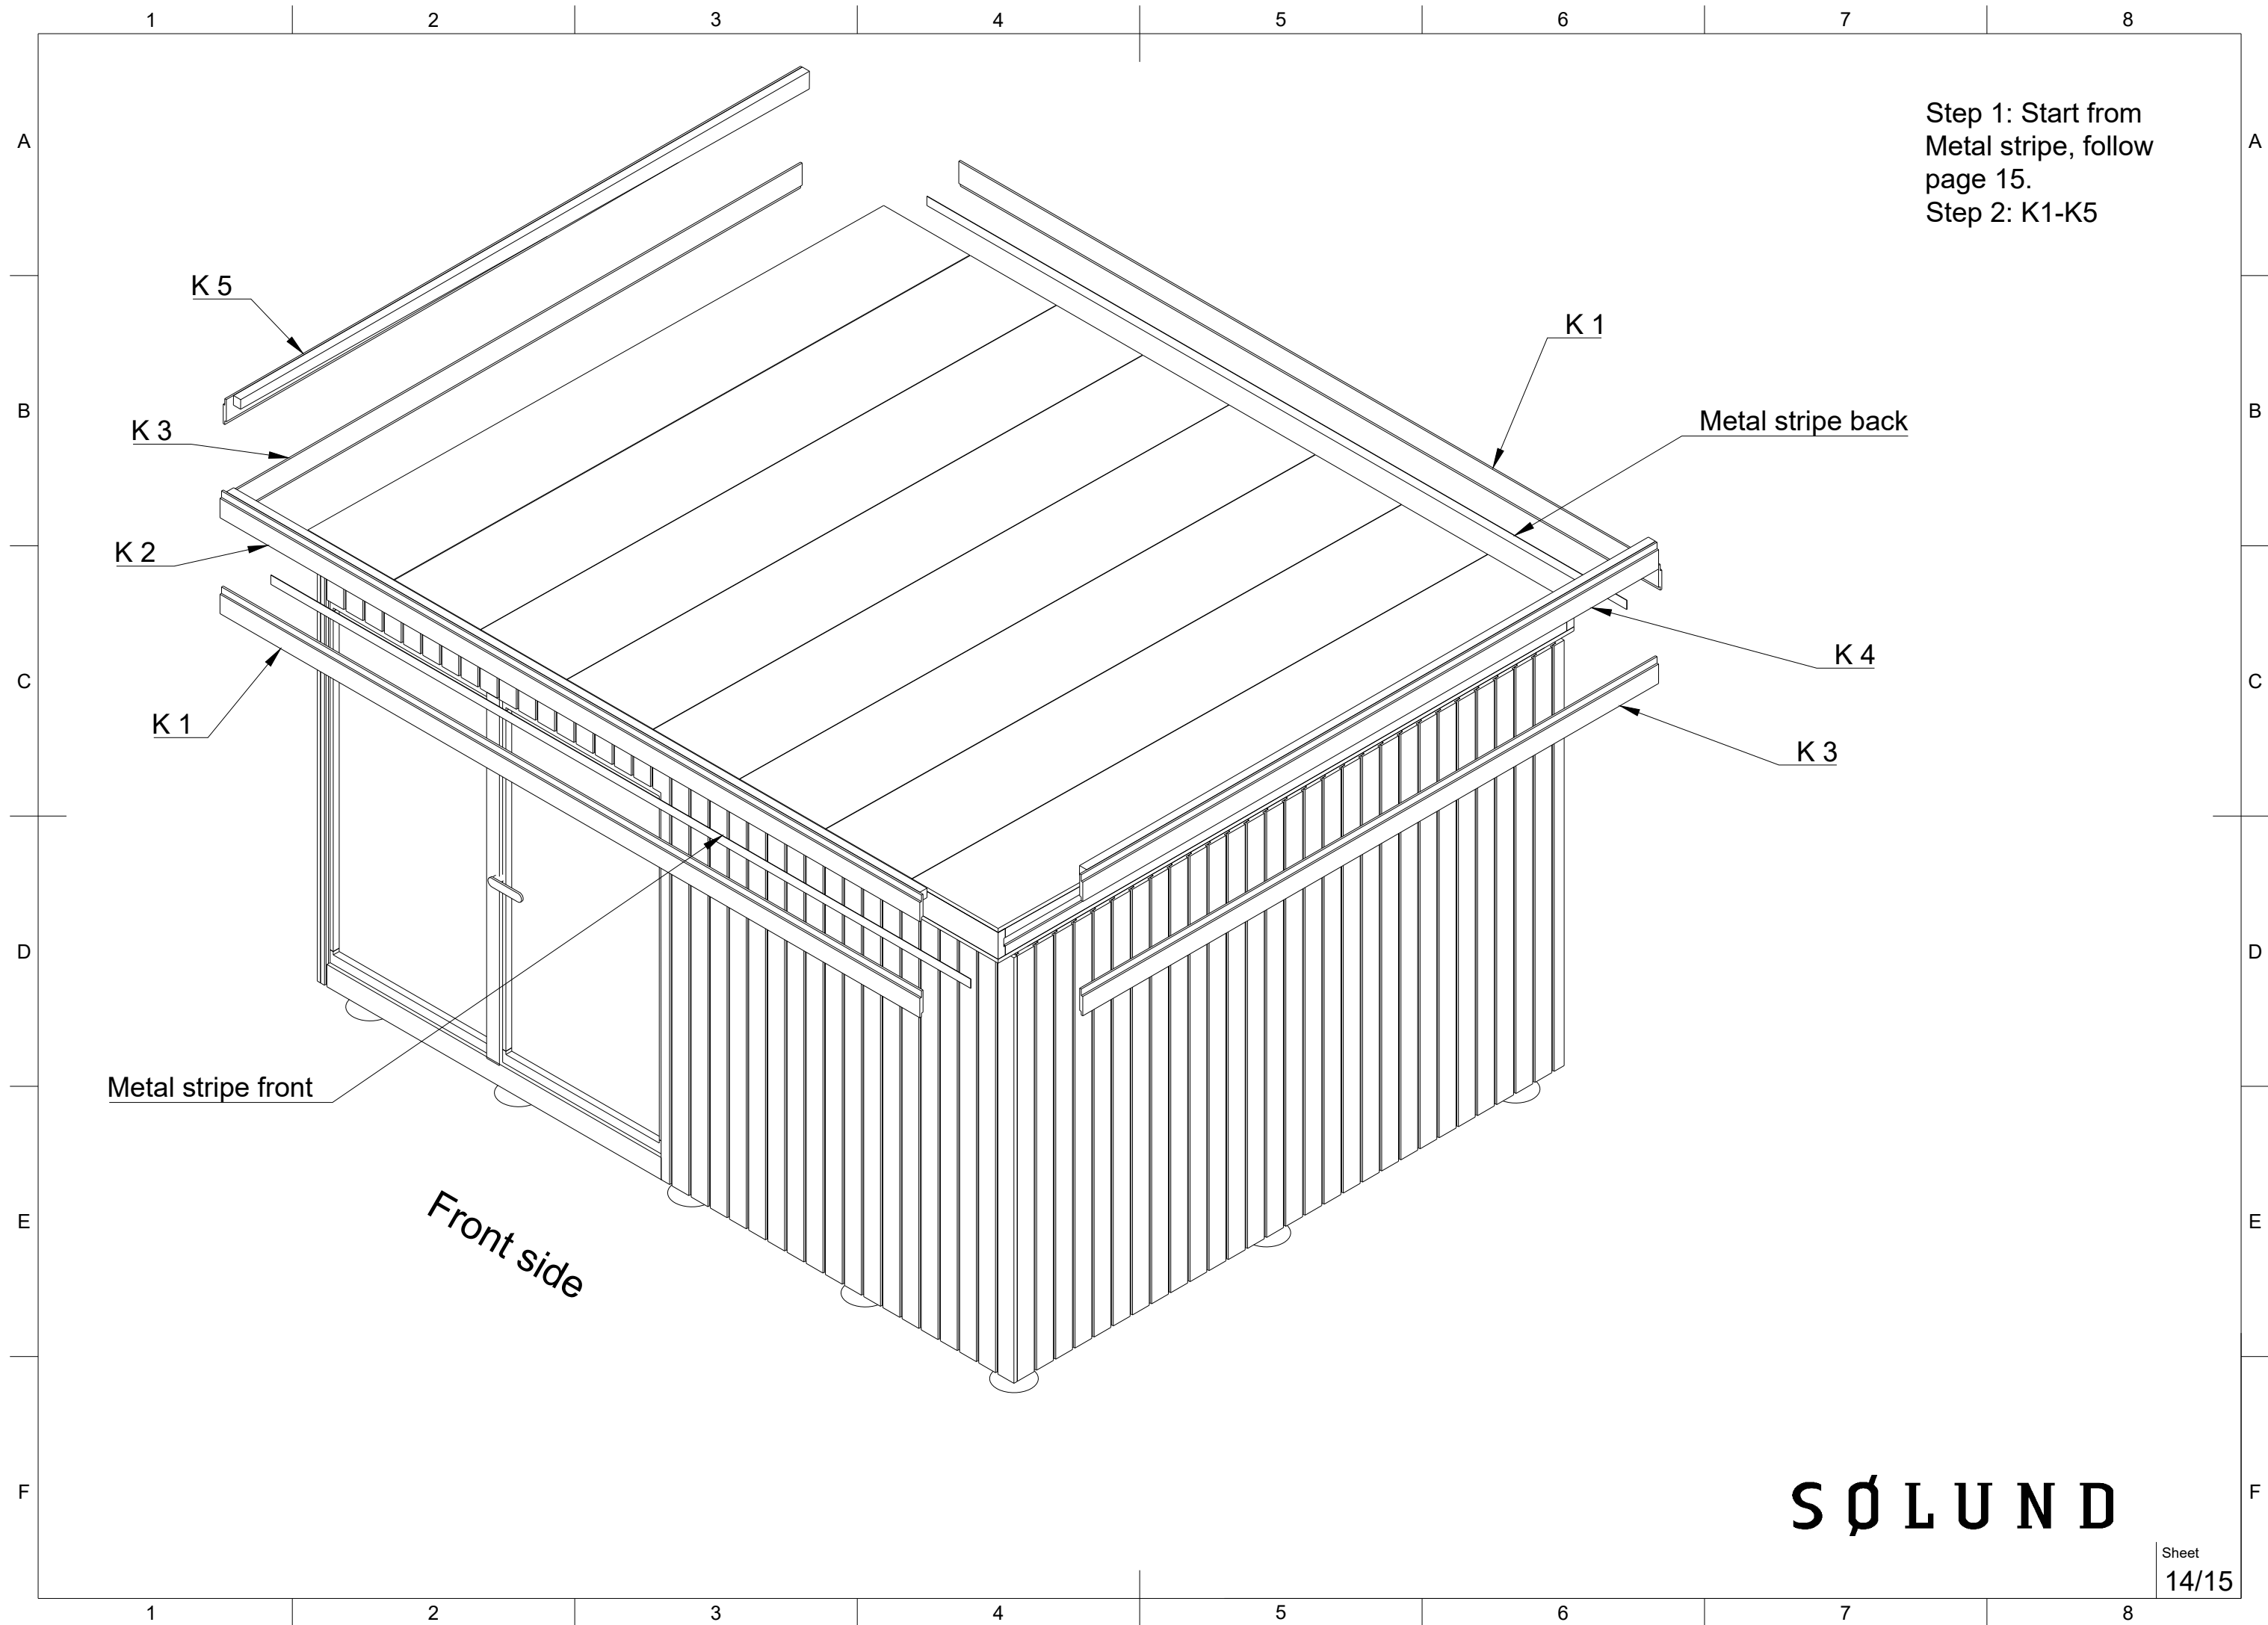


S Ø L U N D

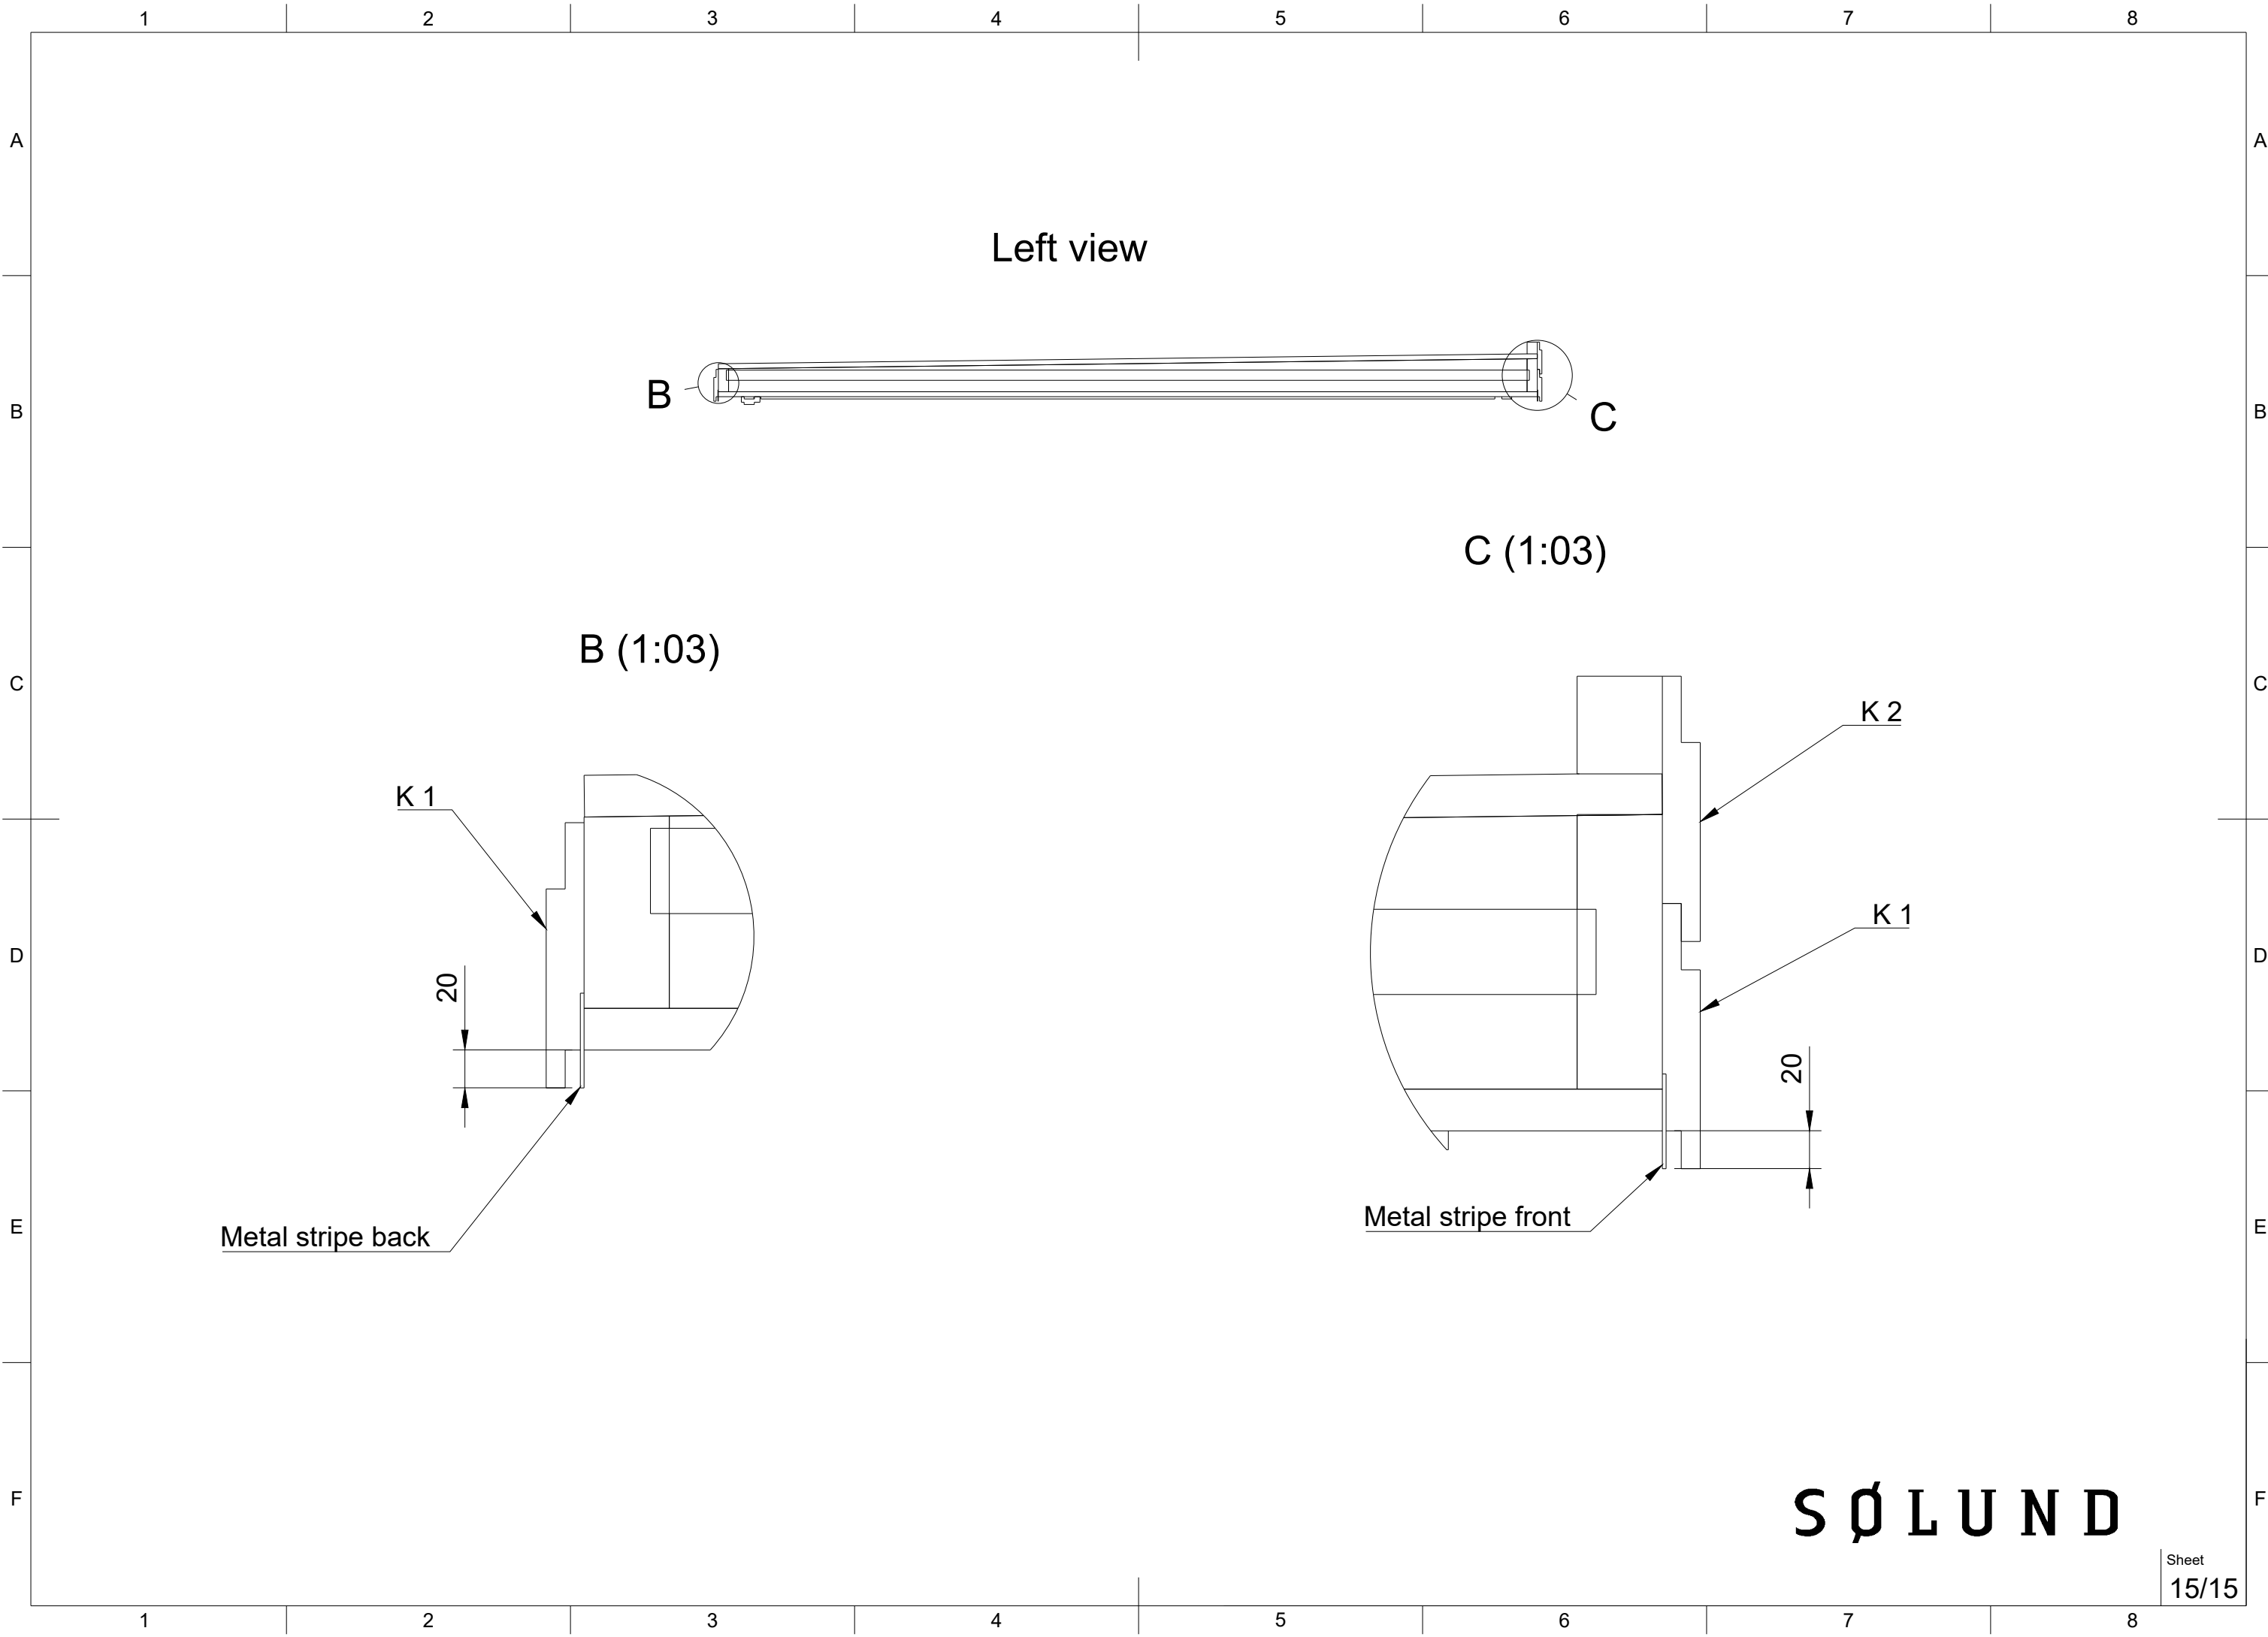


Left view

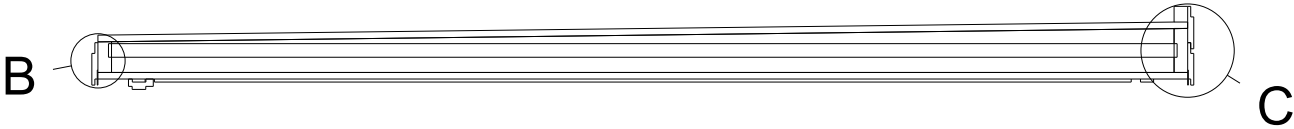

C (1:03)

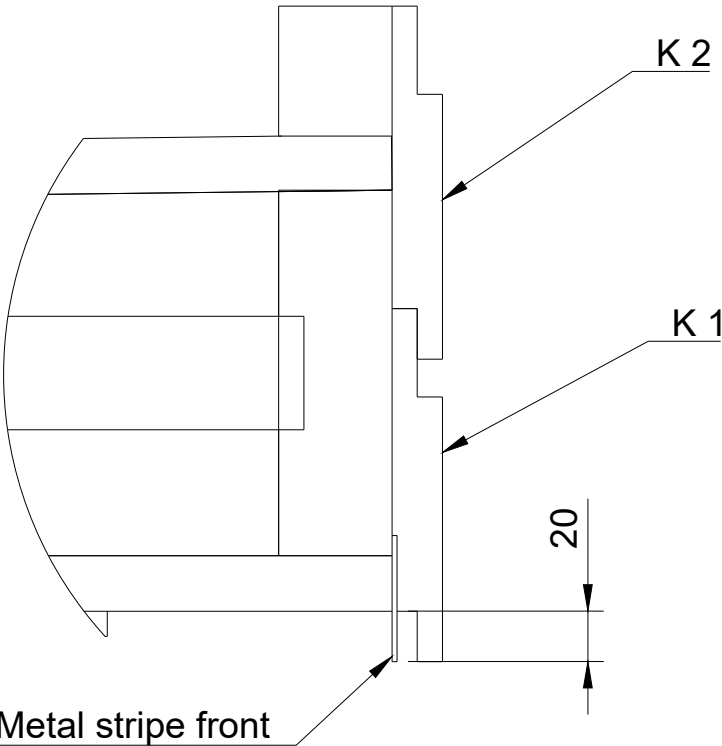

B (1:03)

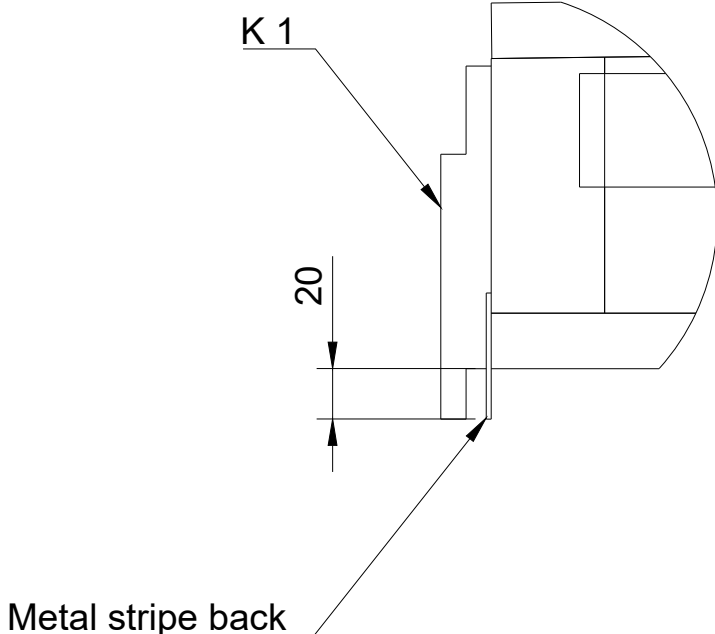

S Ø L U N D