






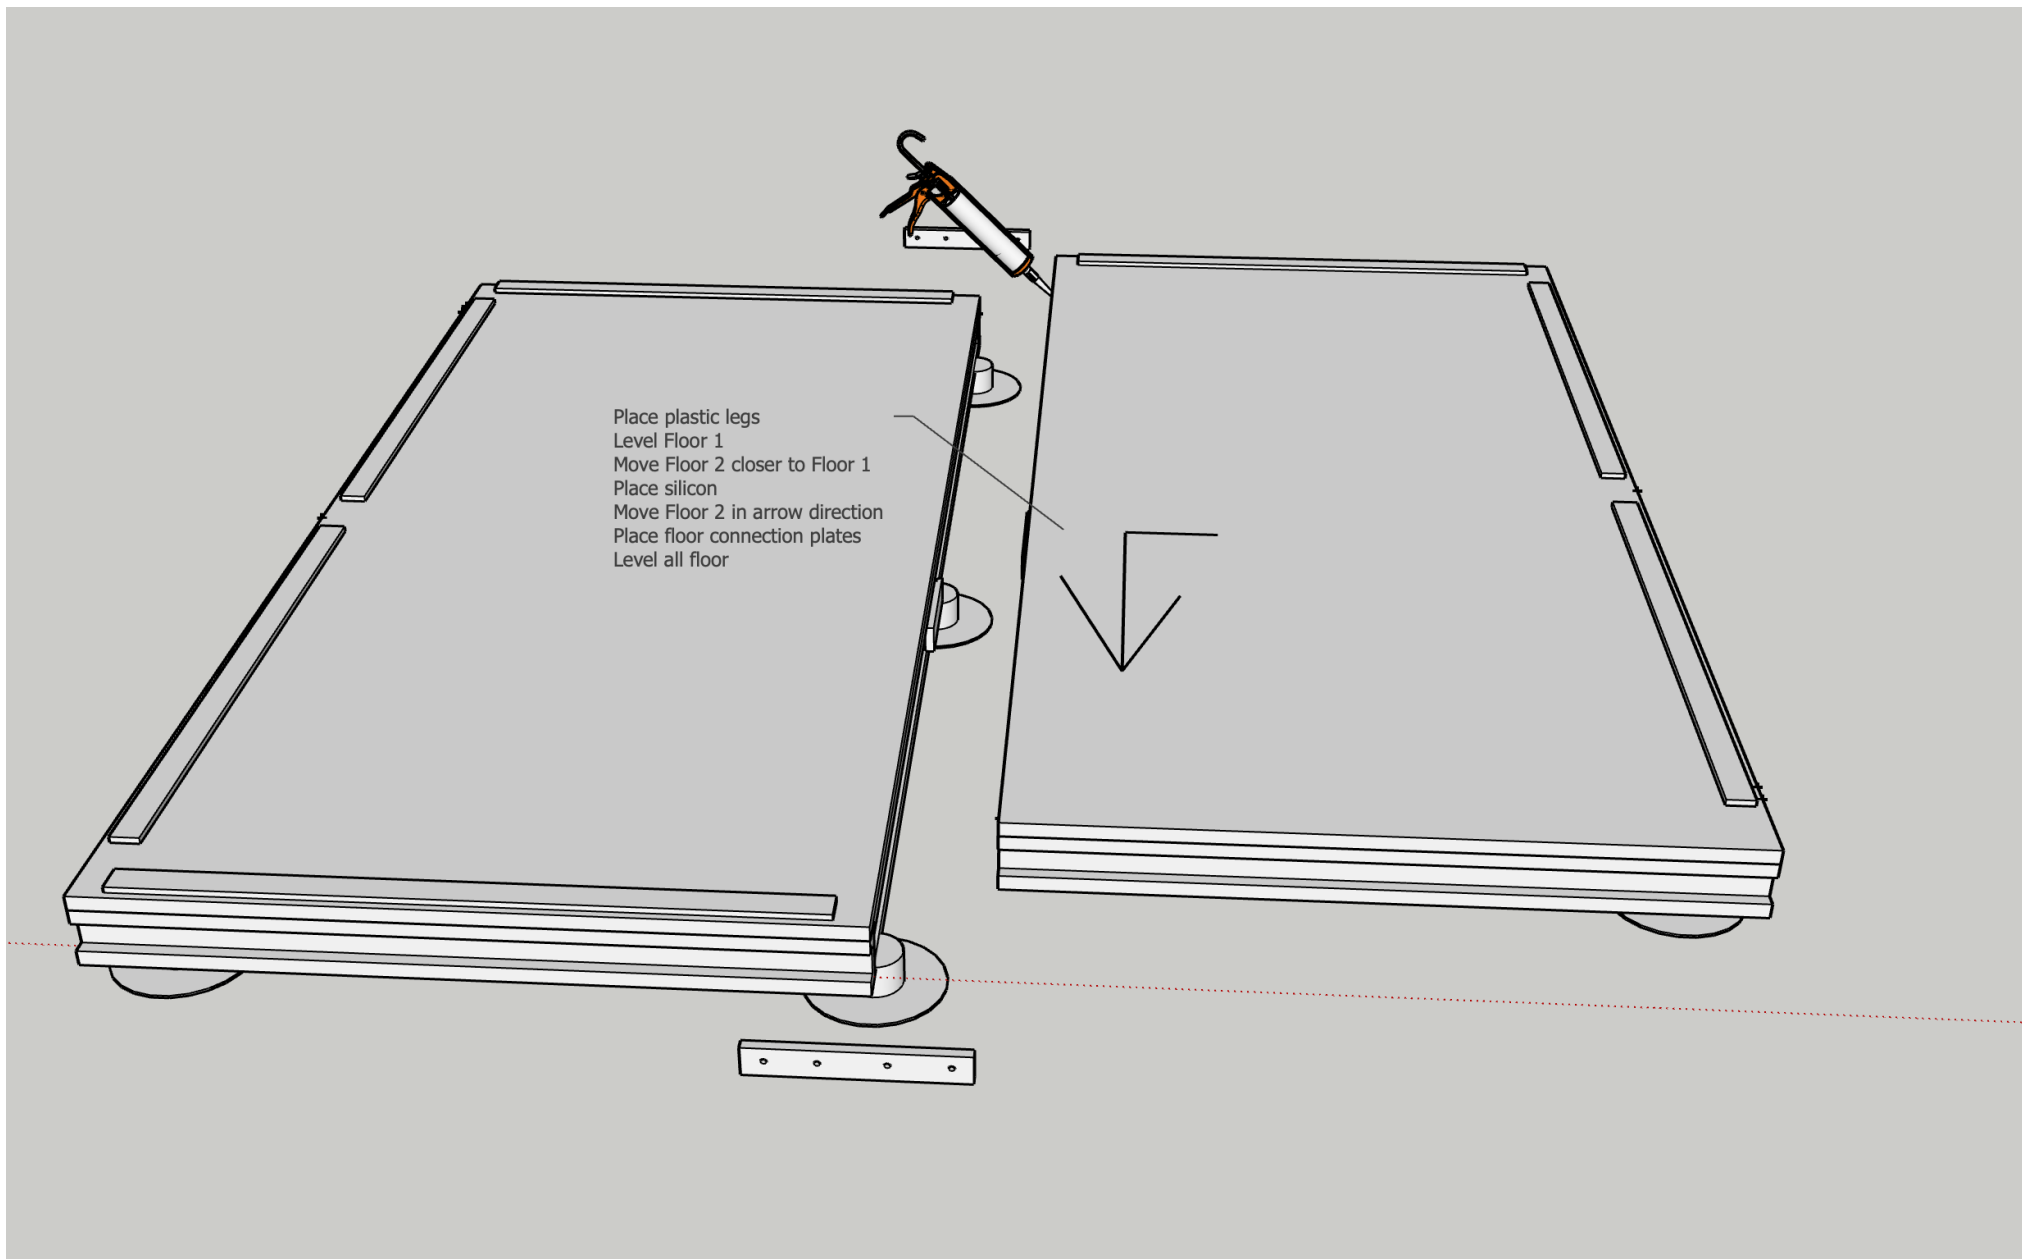


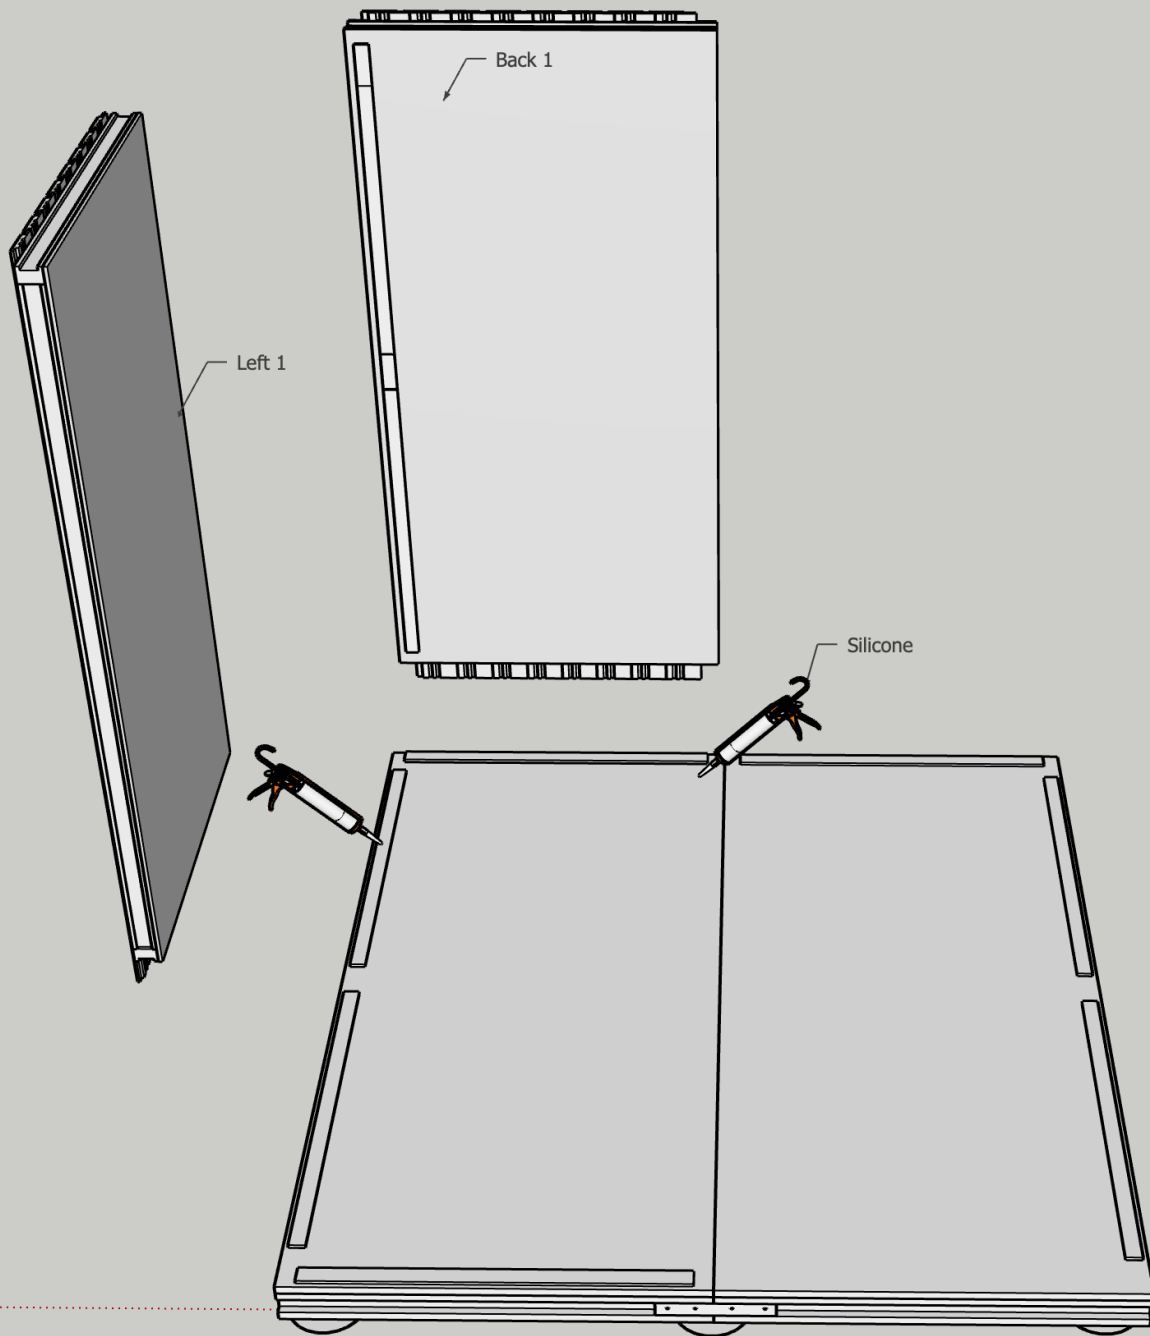


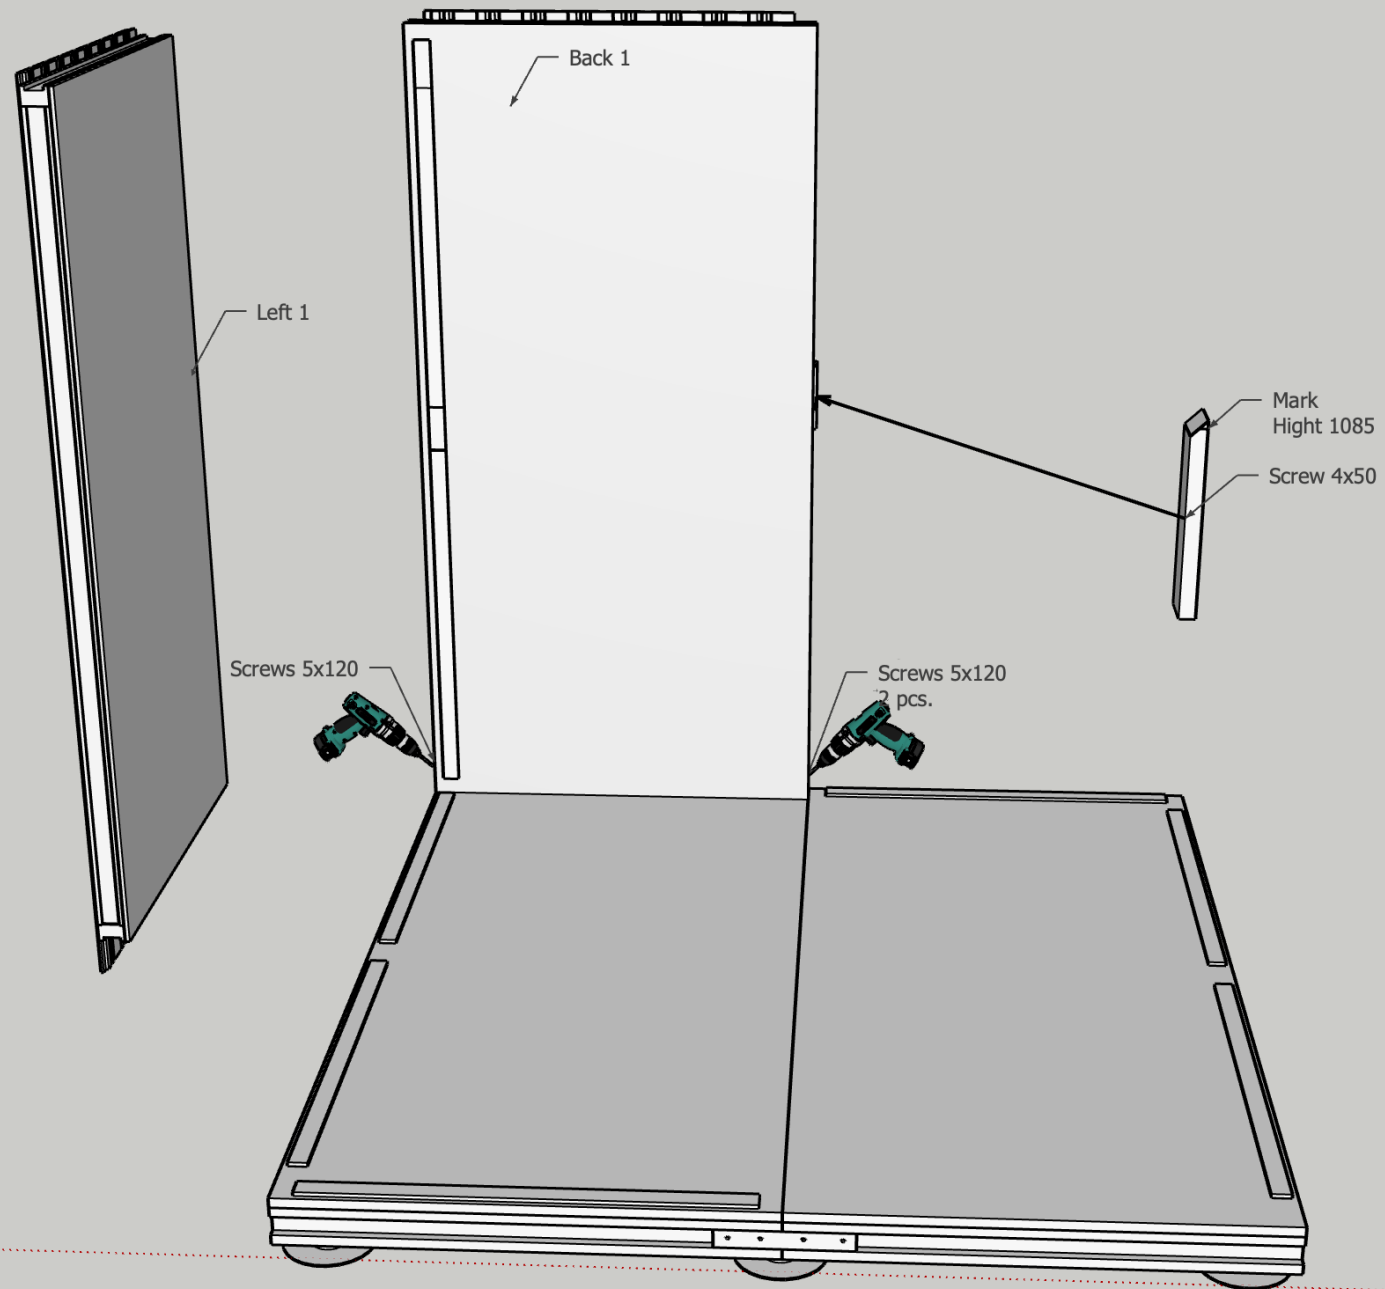


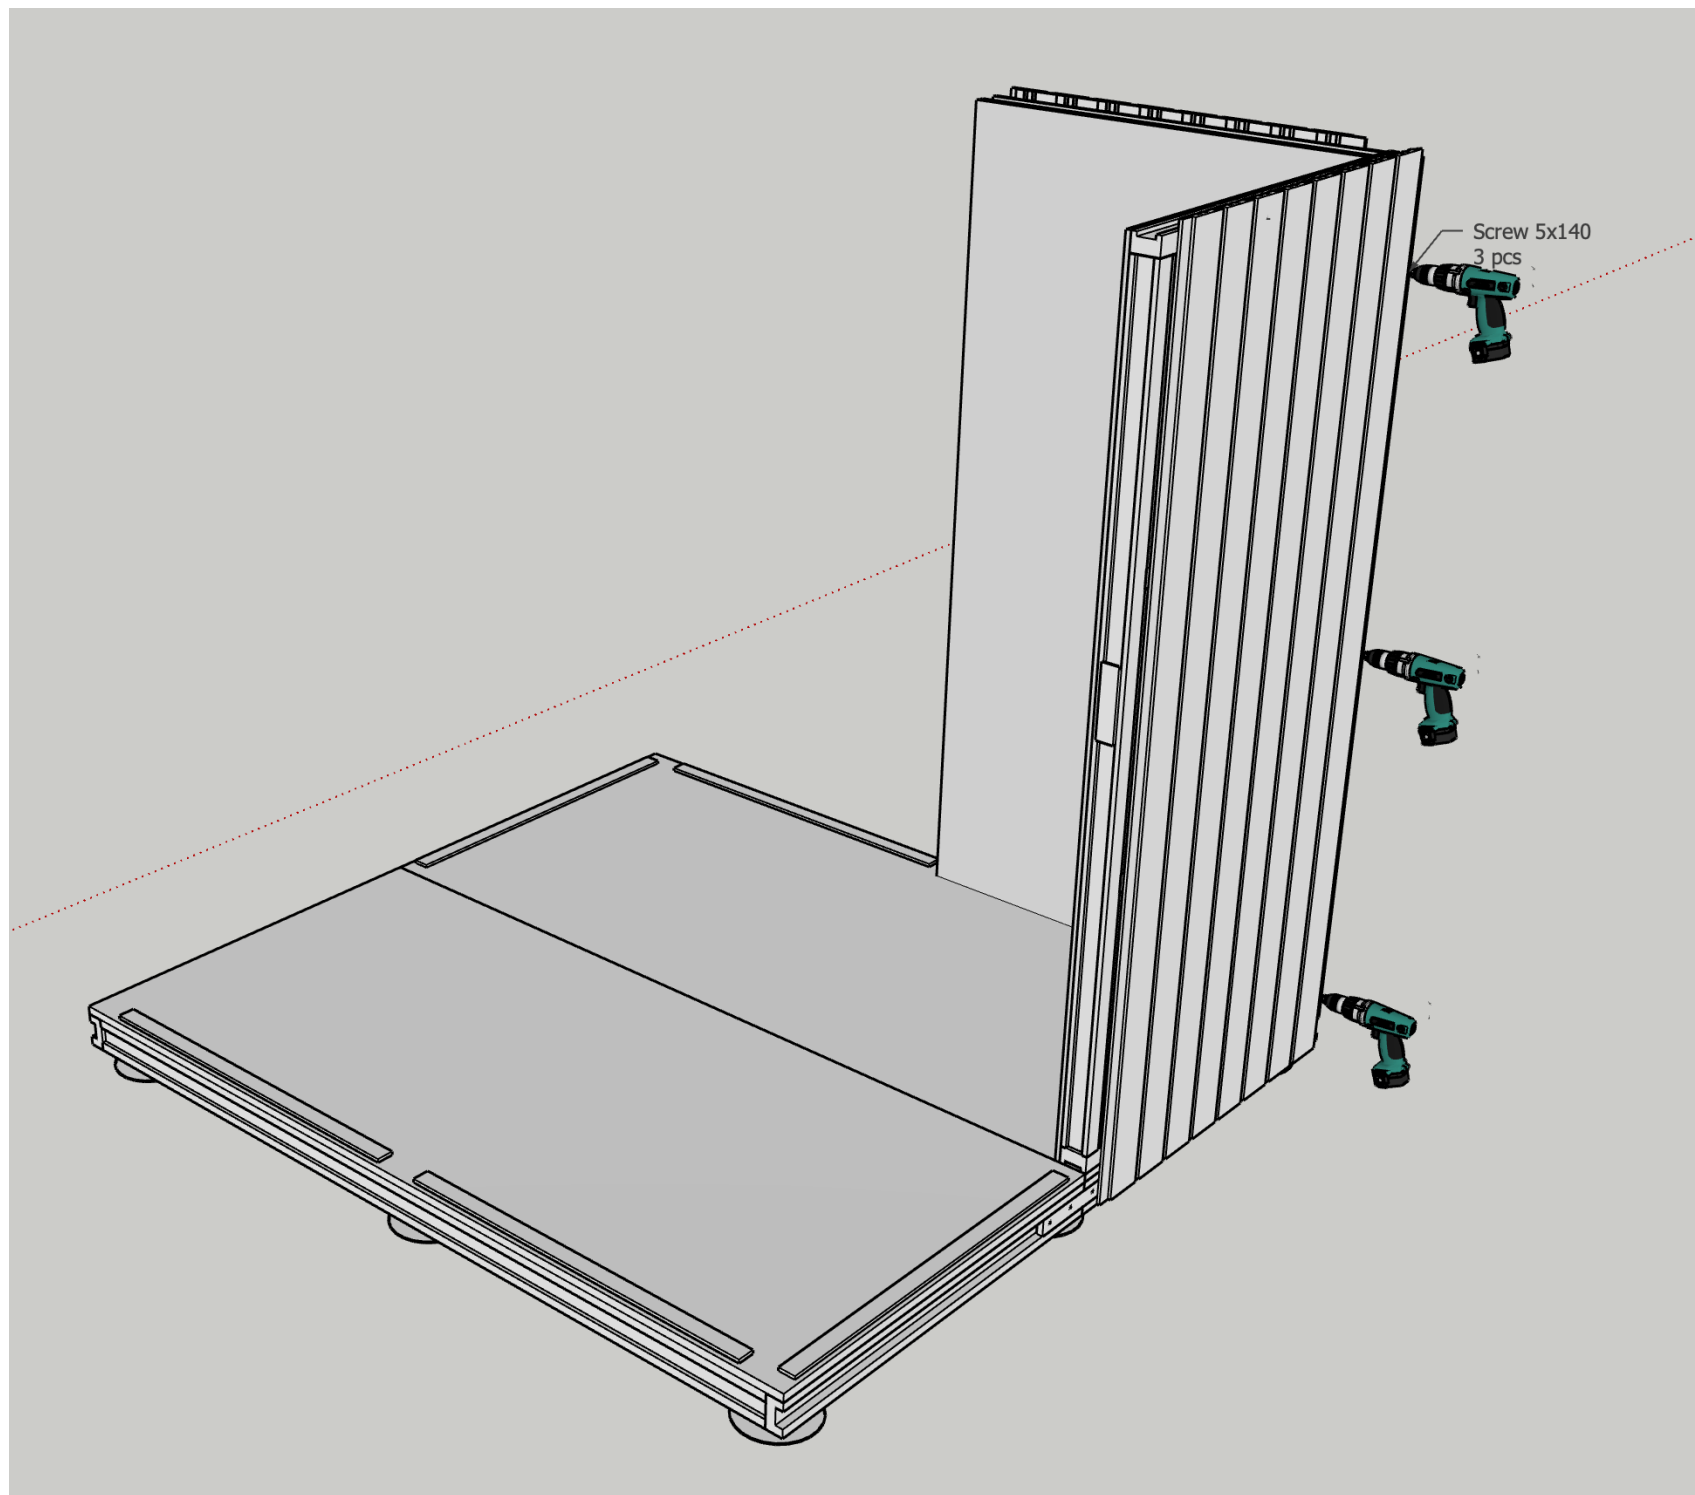

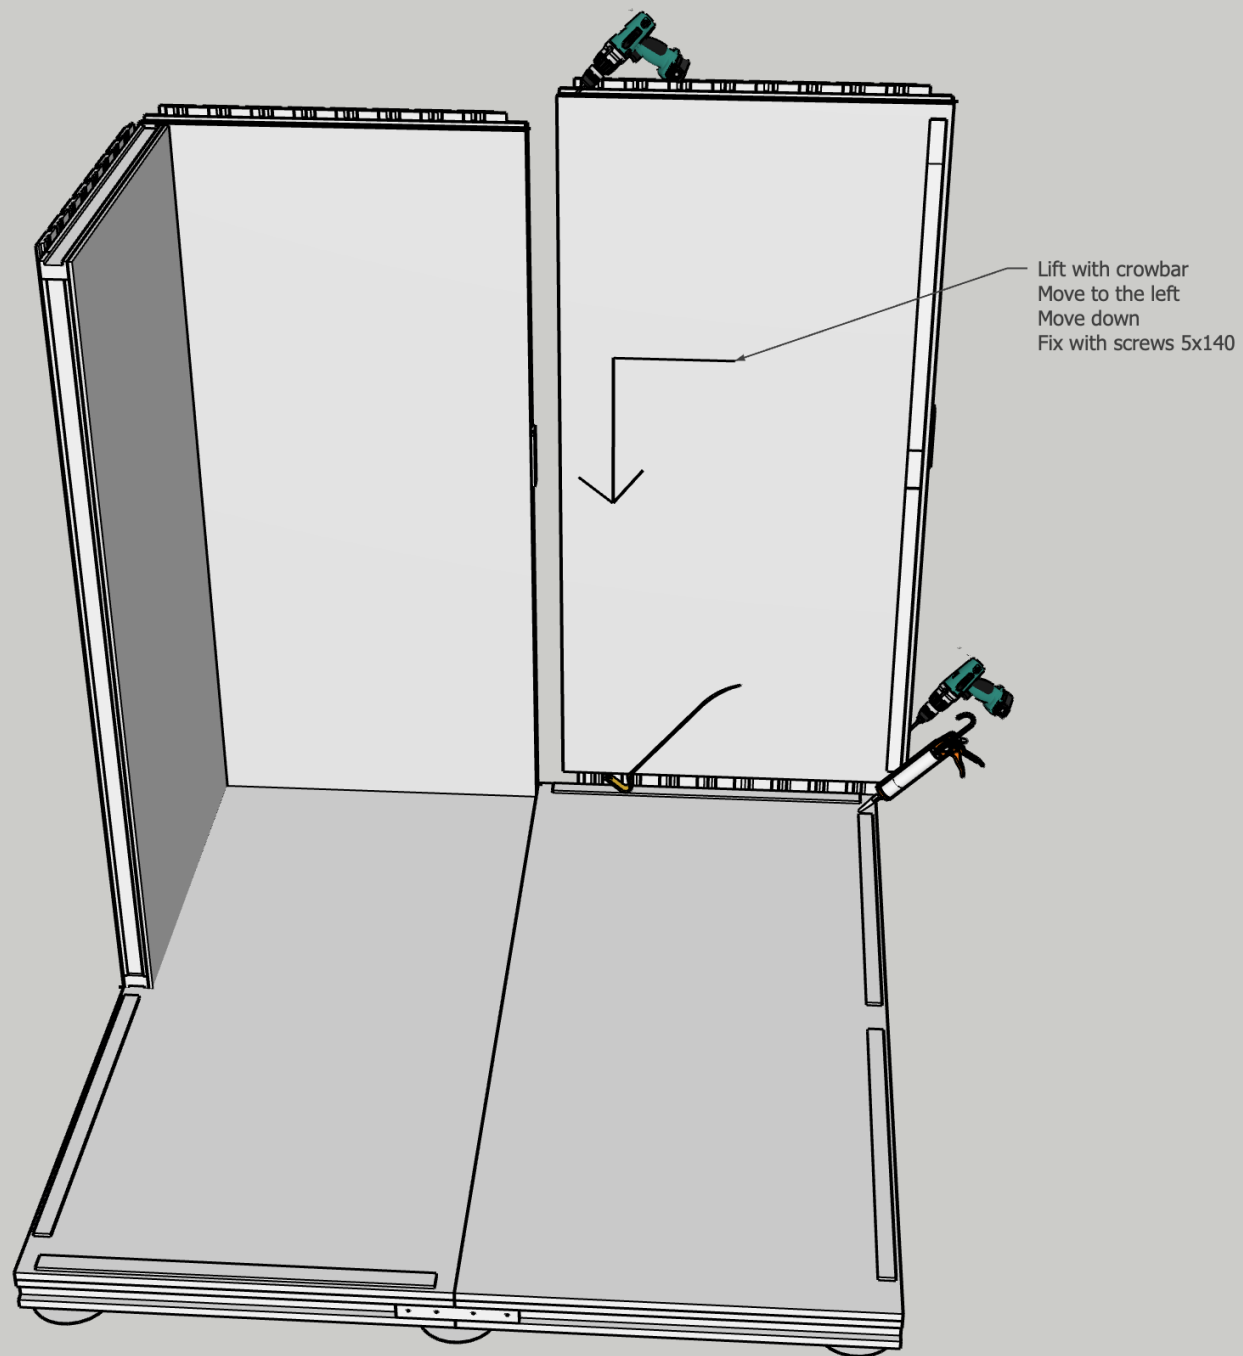


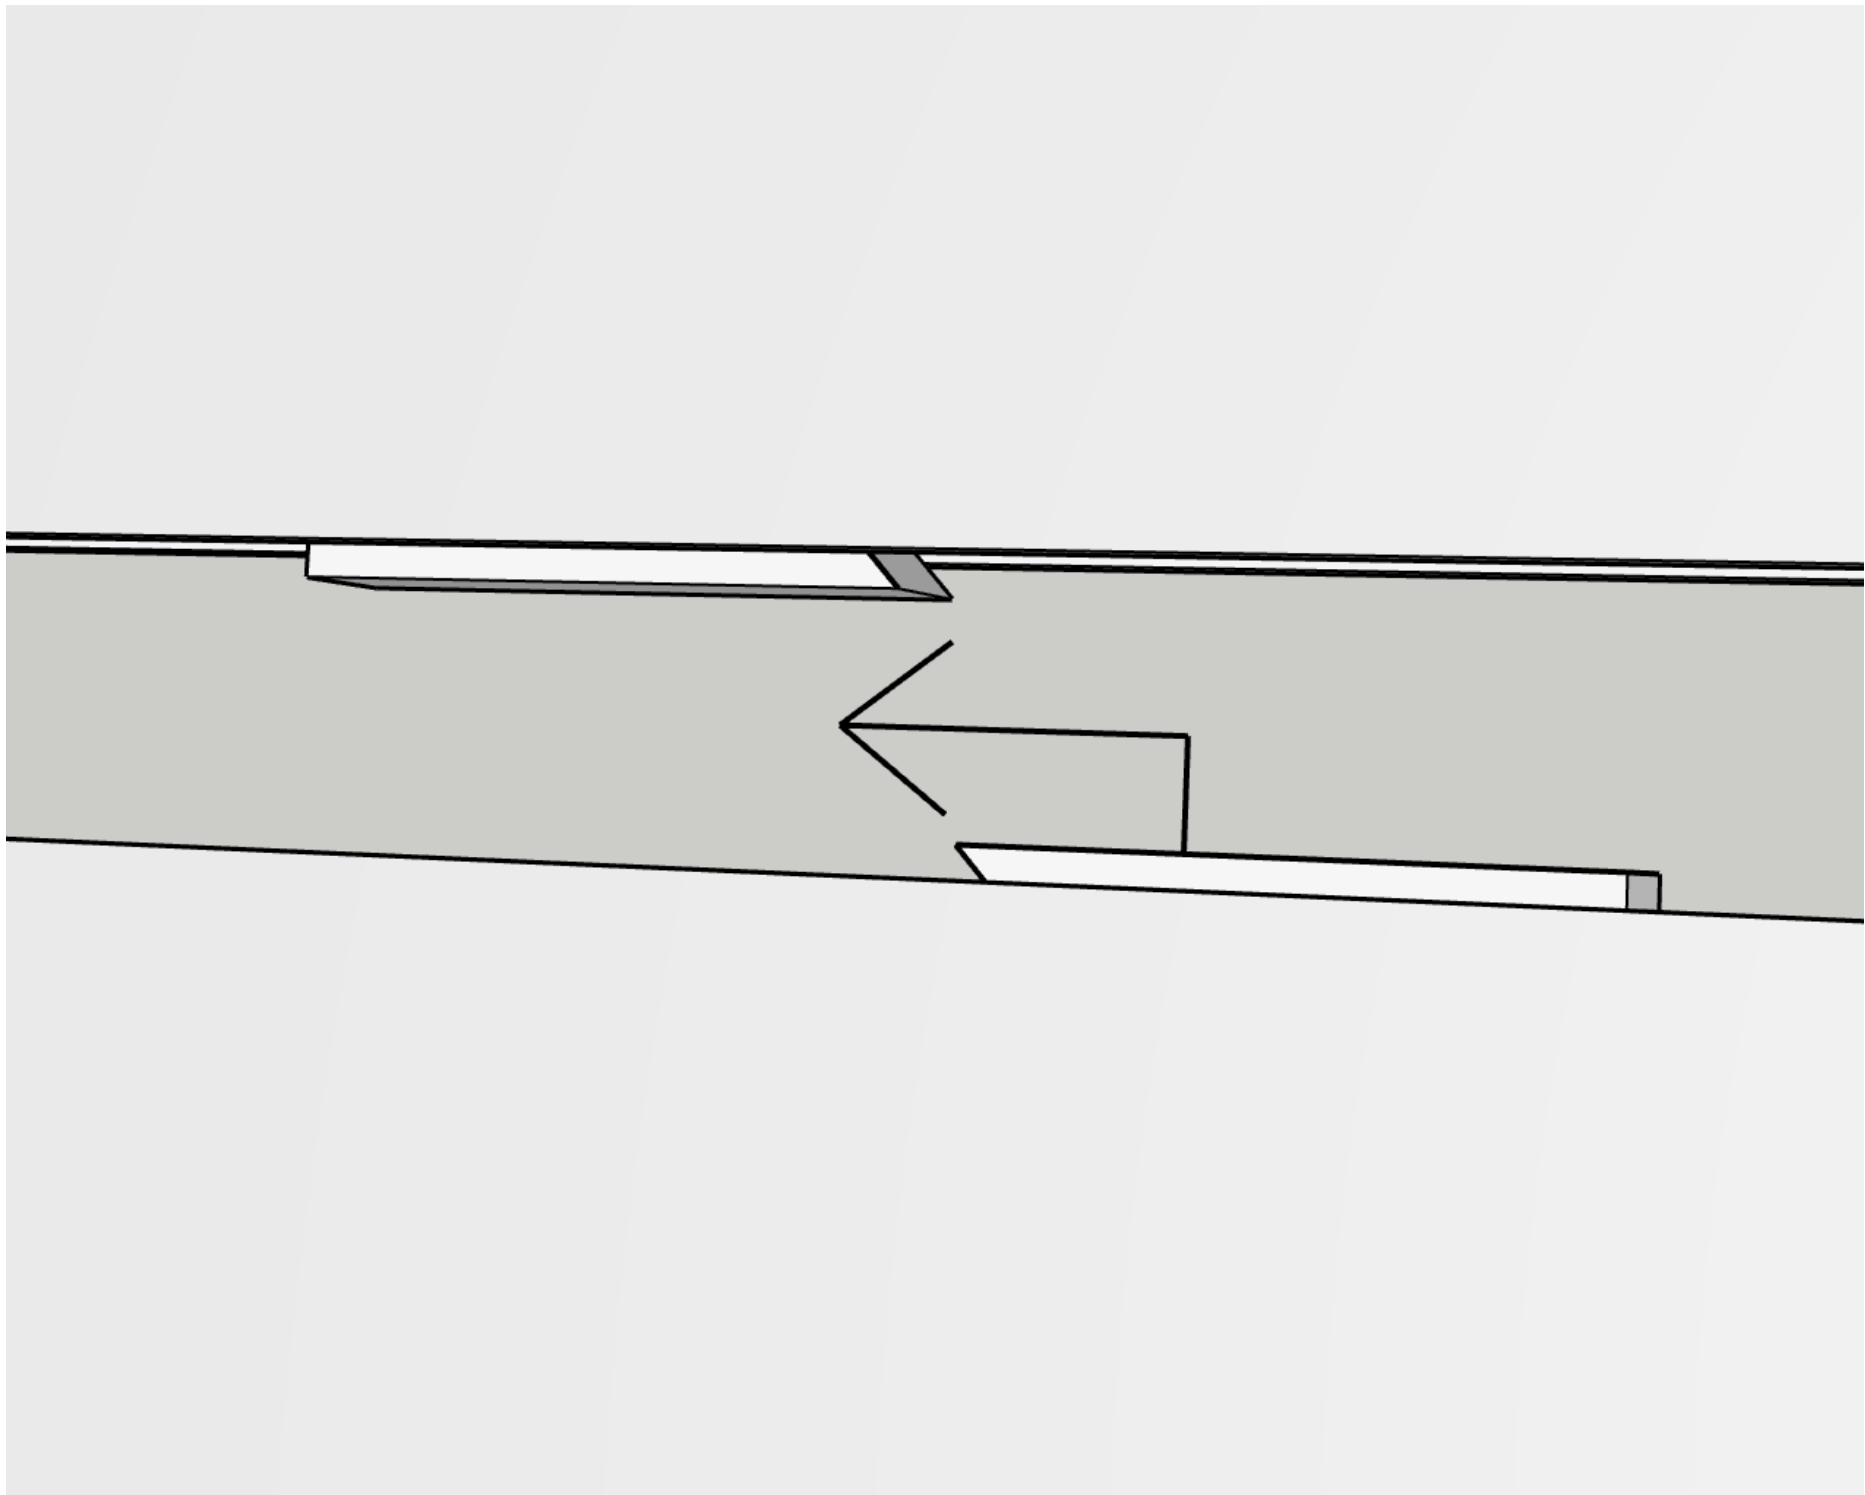

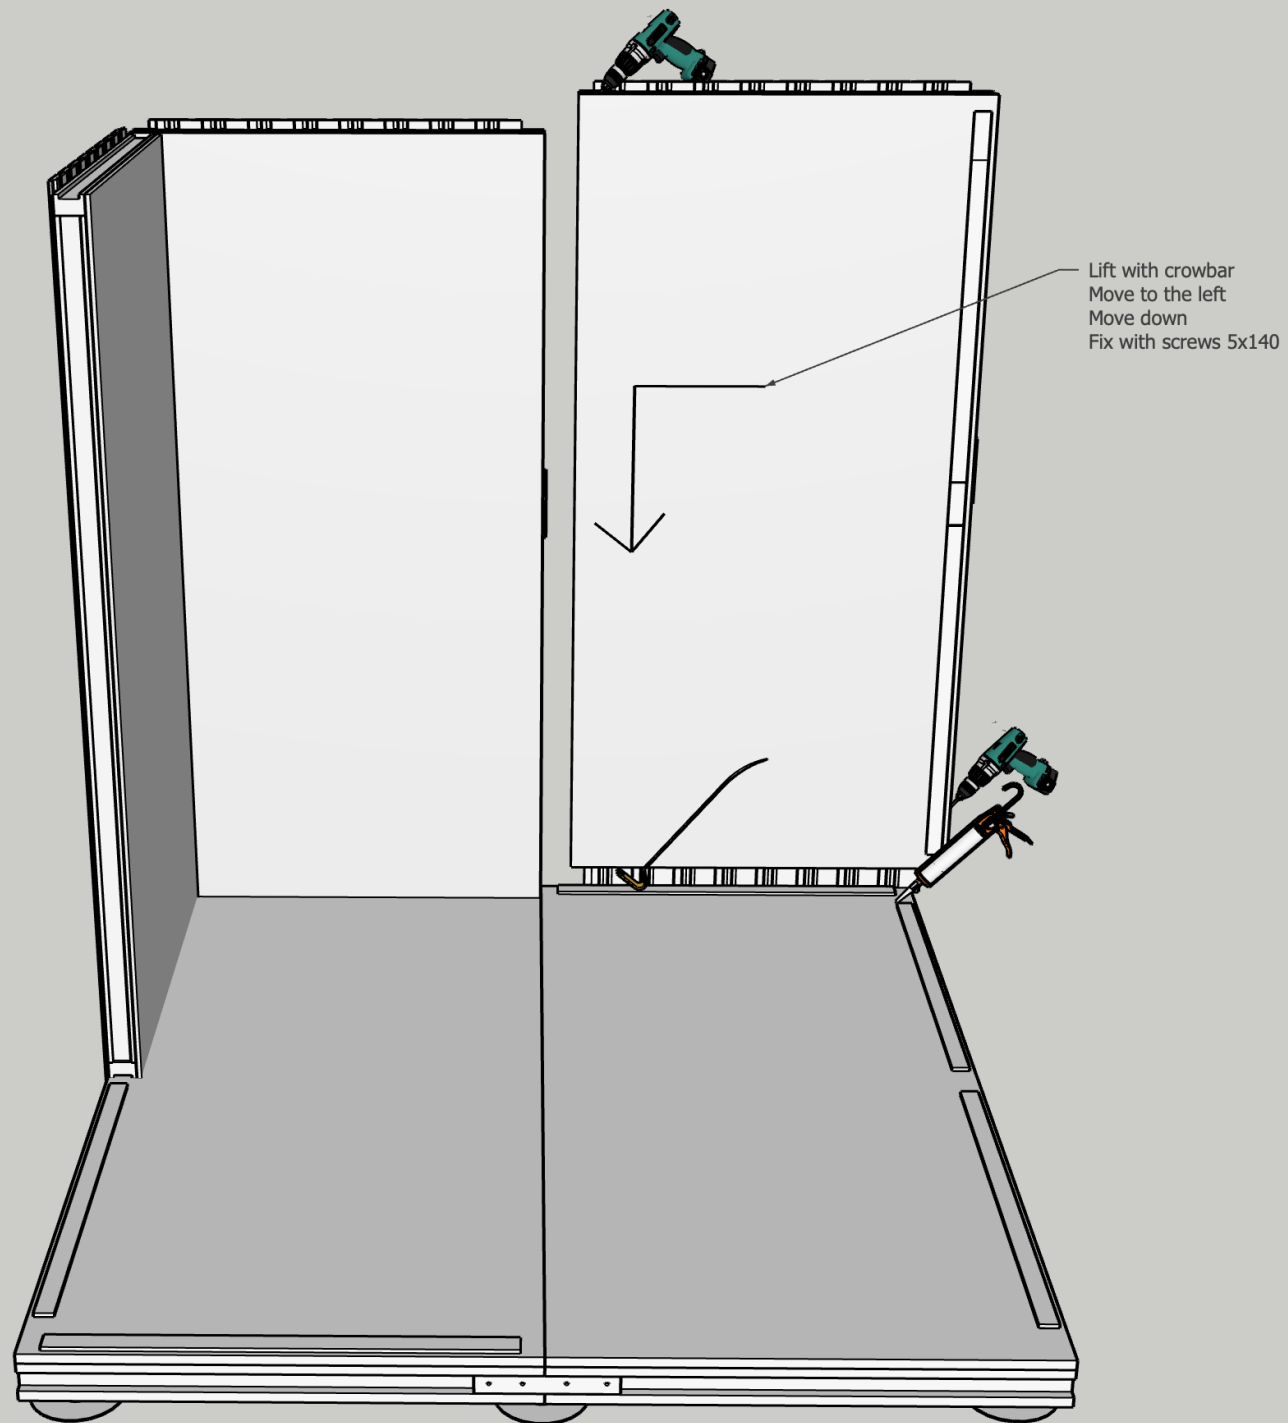


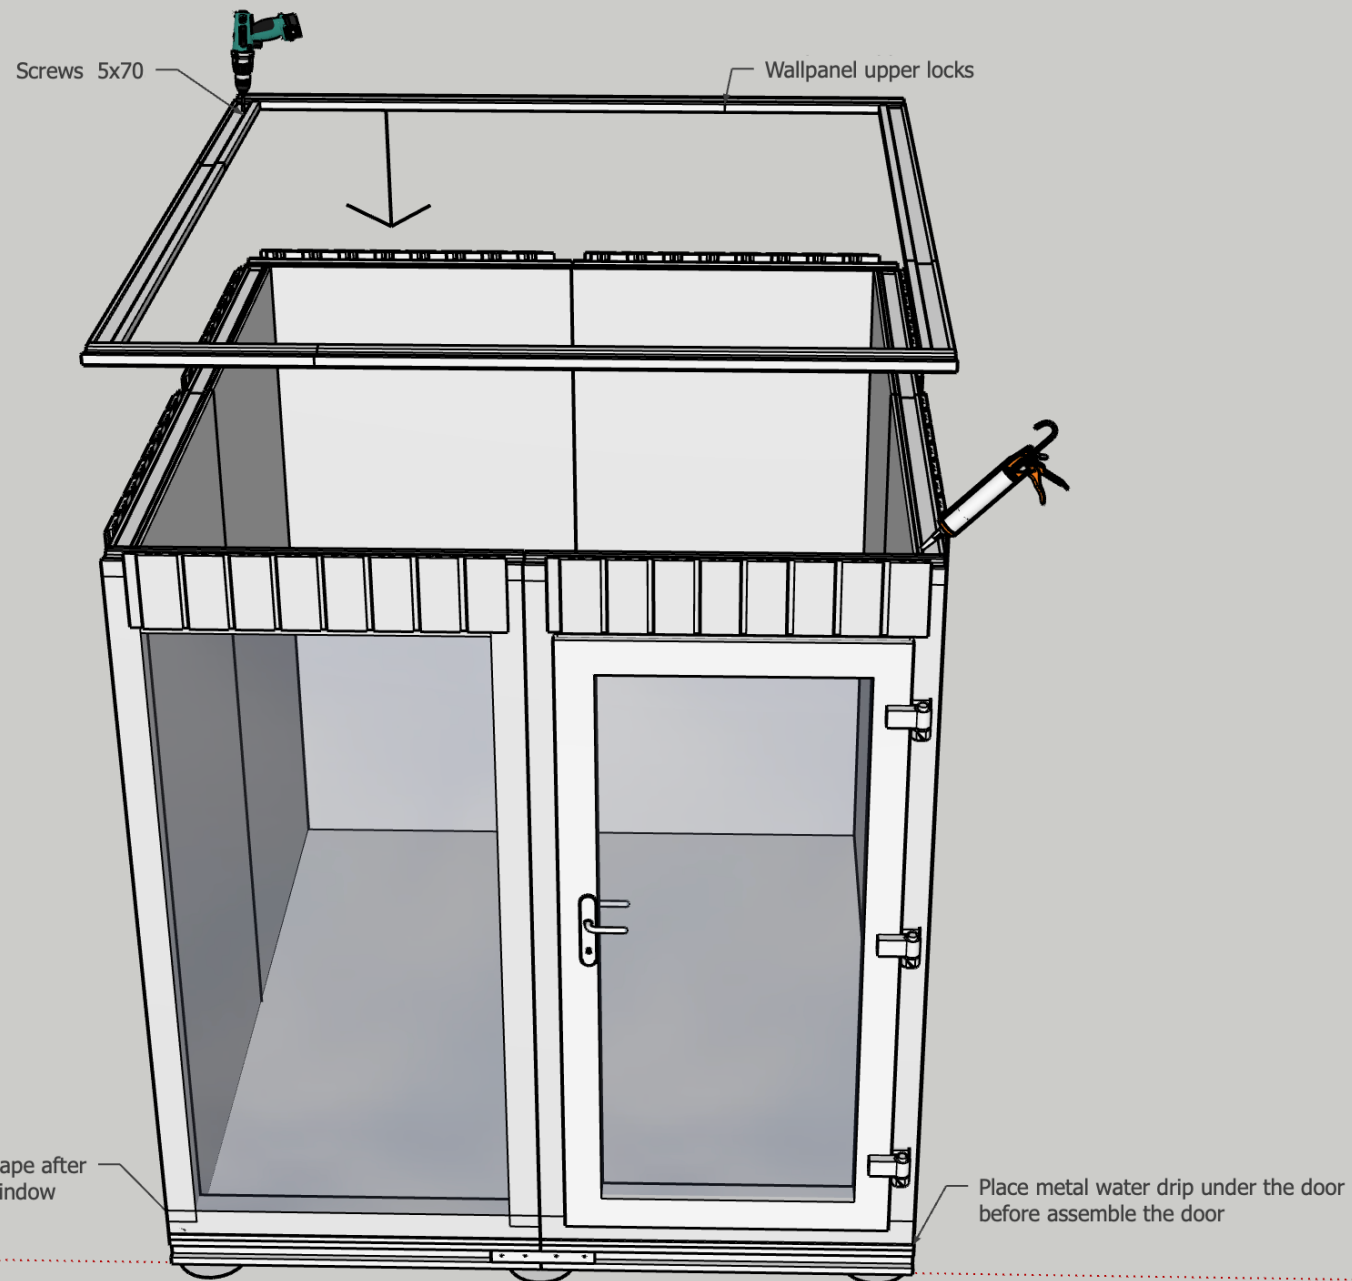


Screws 6x240

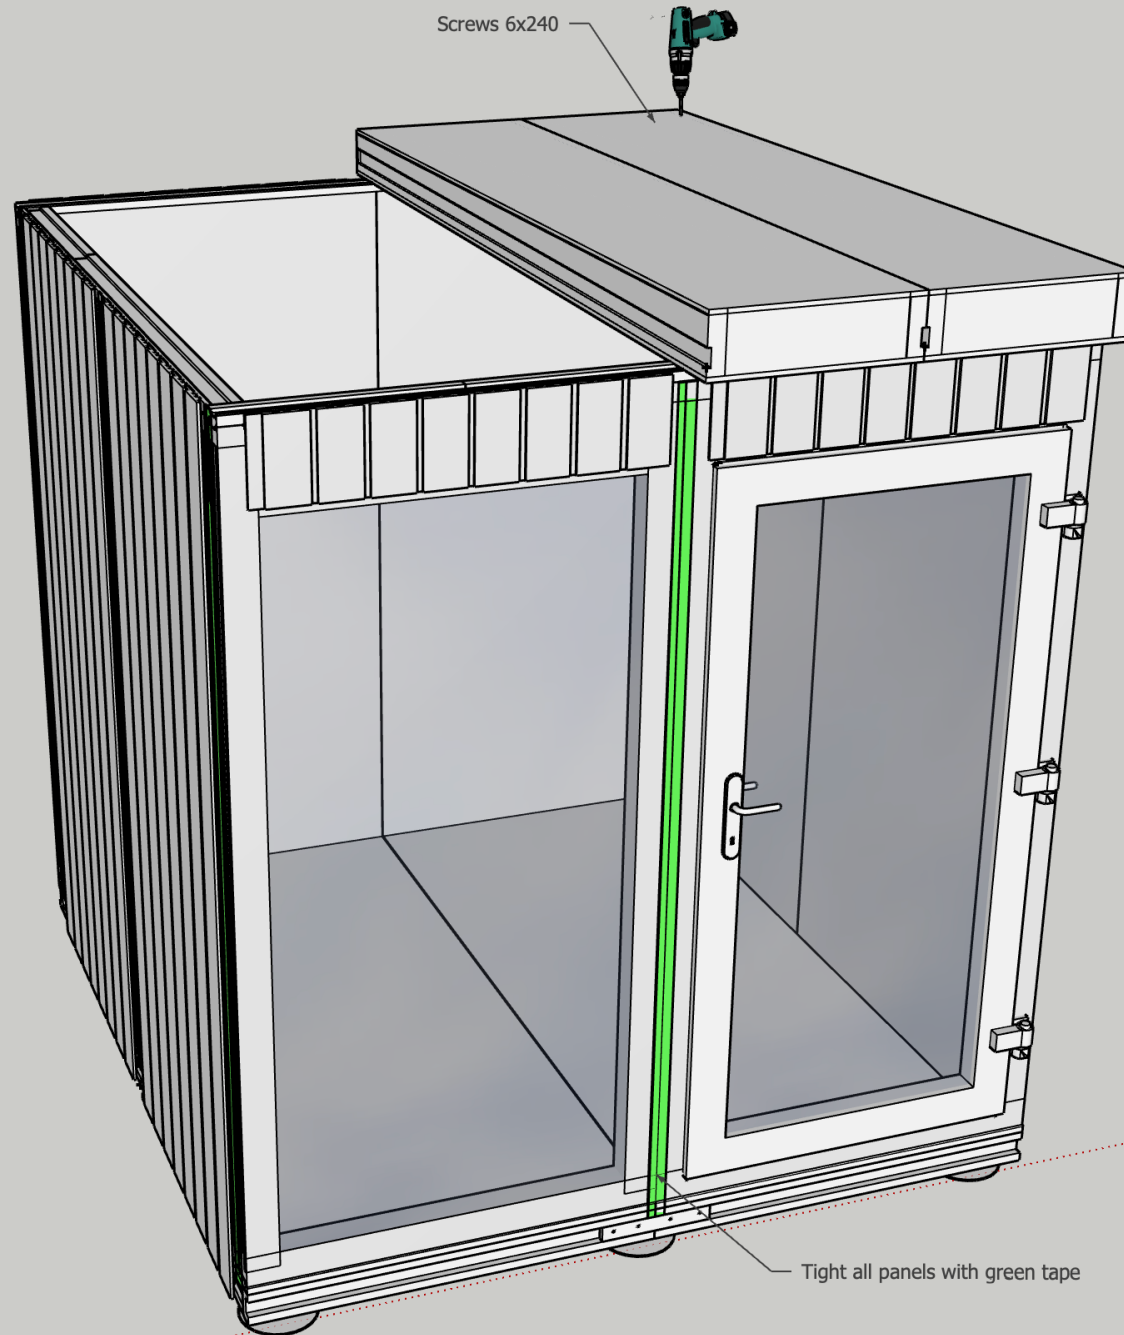


Tight all panels with green tape

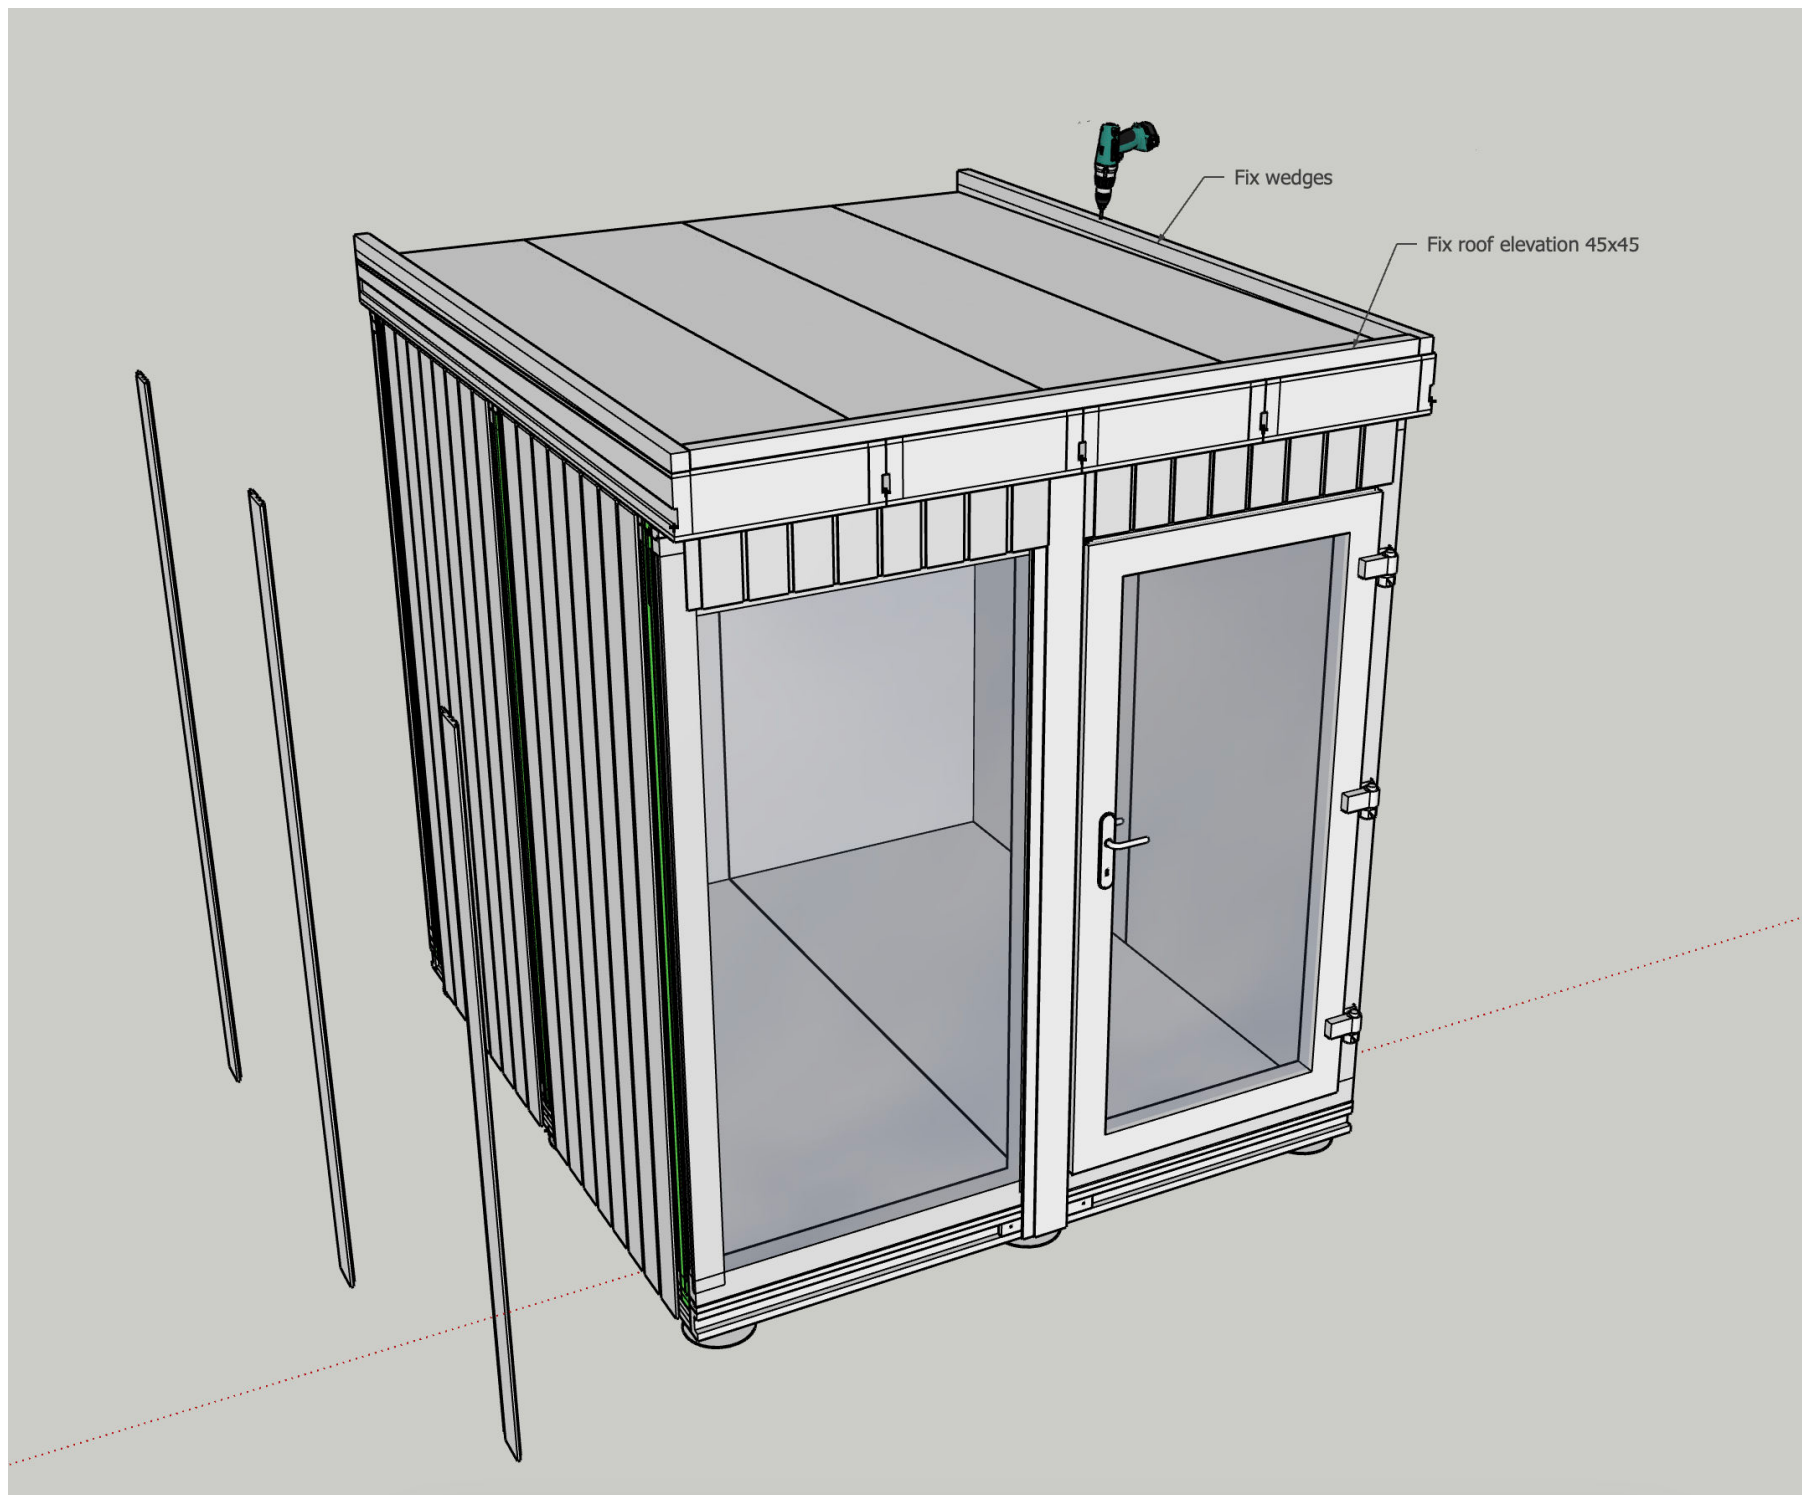

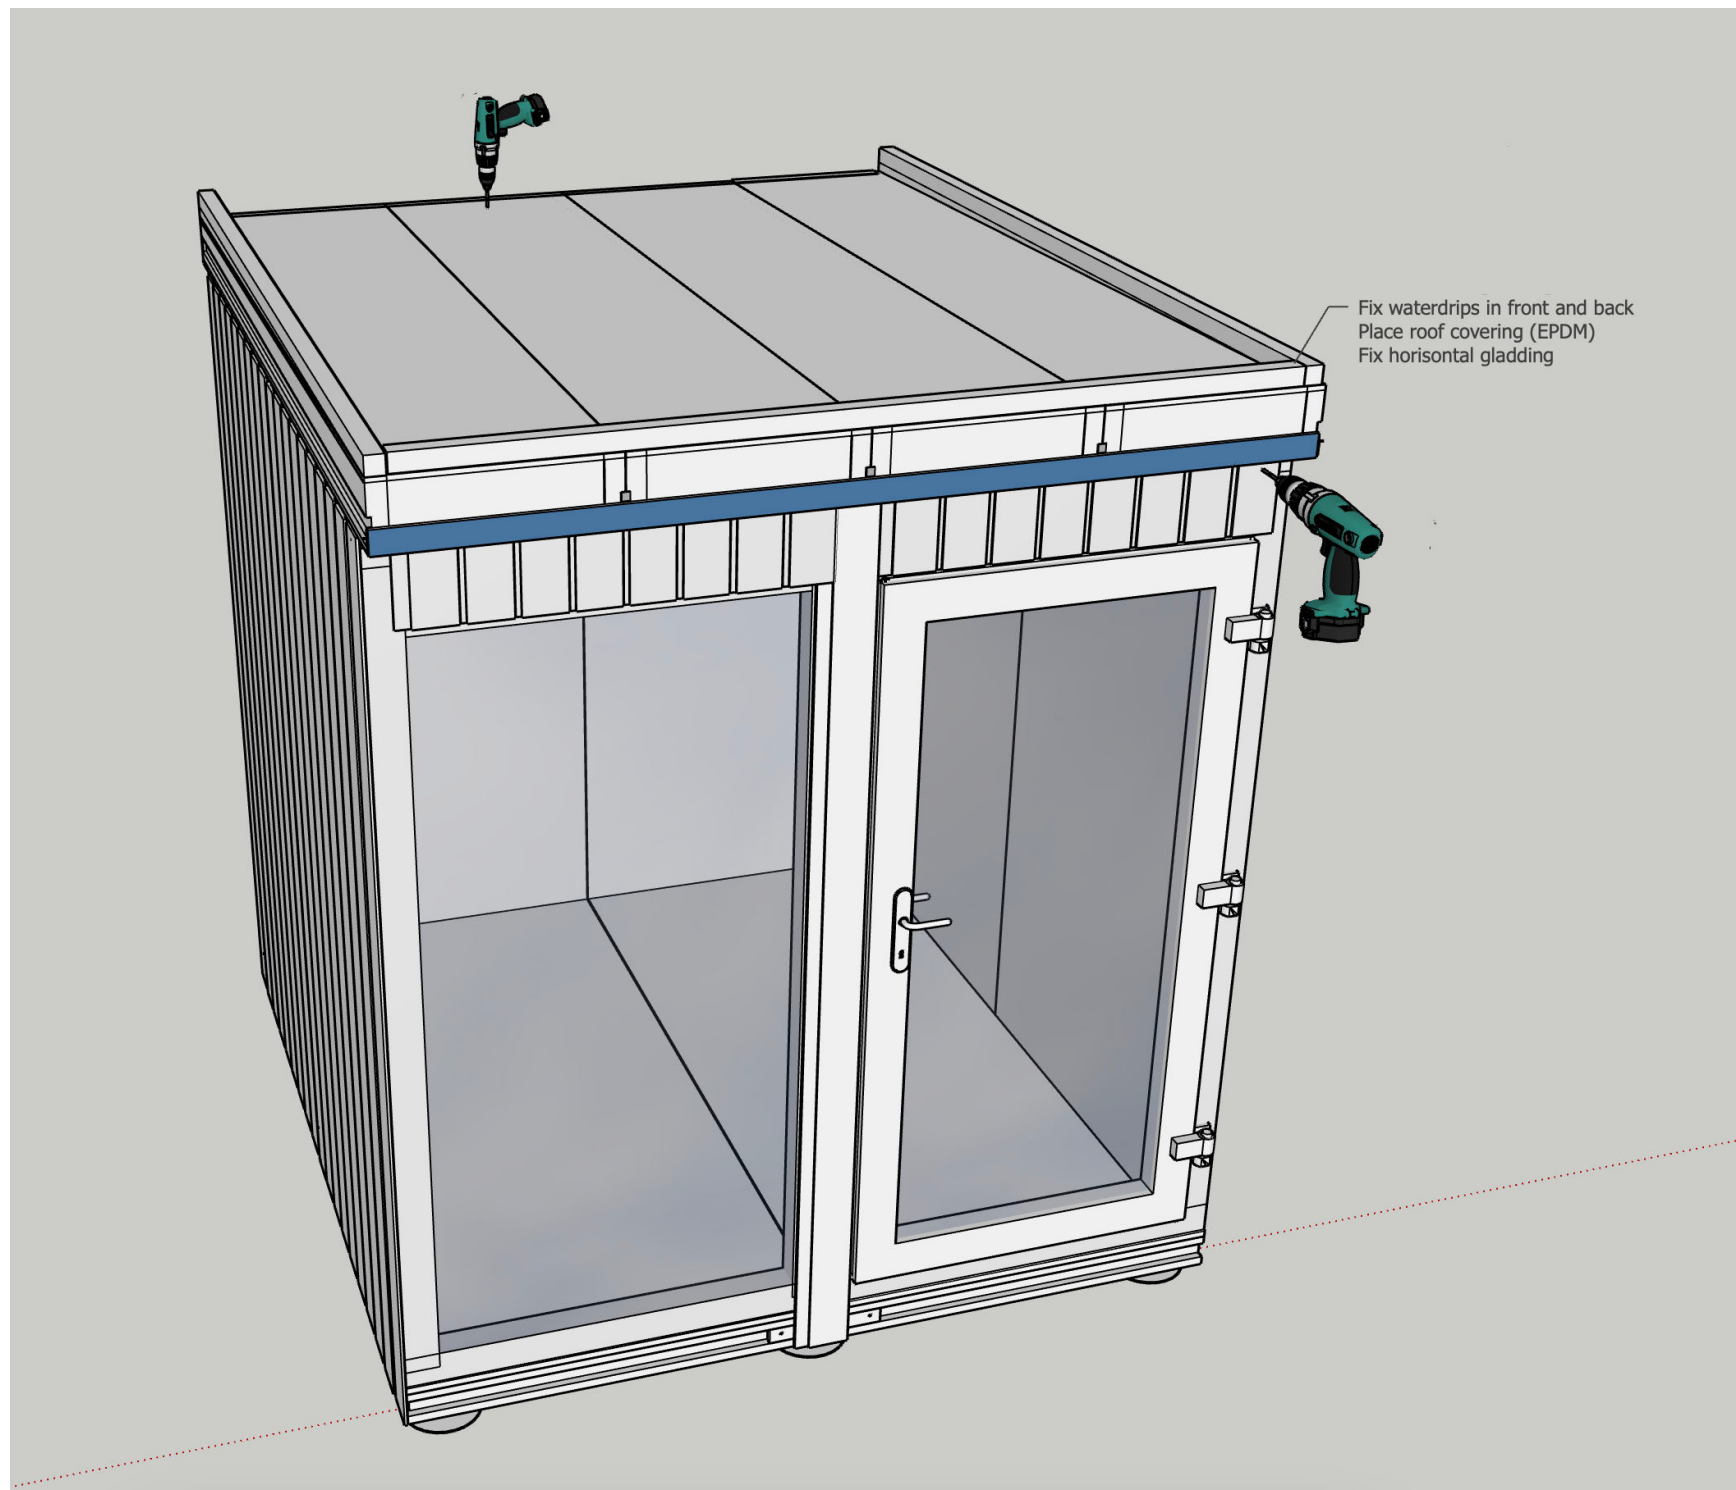

Place a metal border
On front and sides
With hexagonal screws

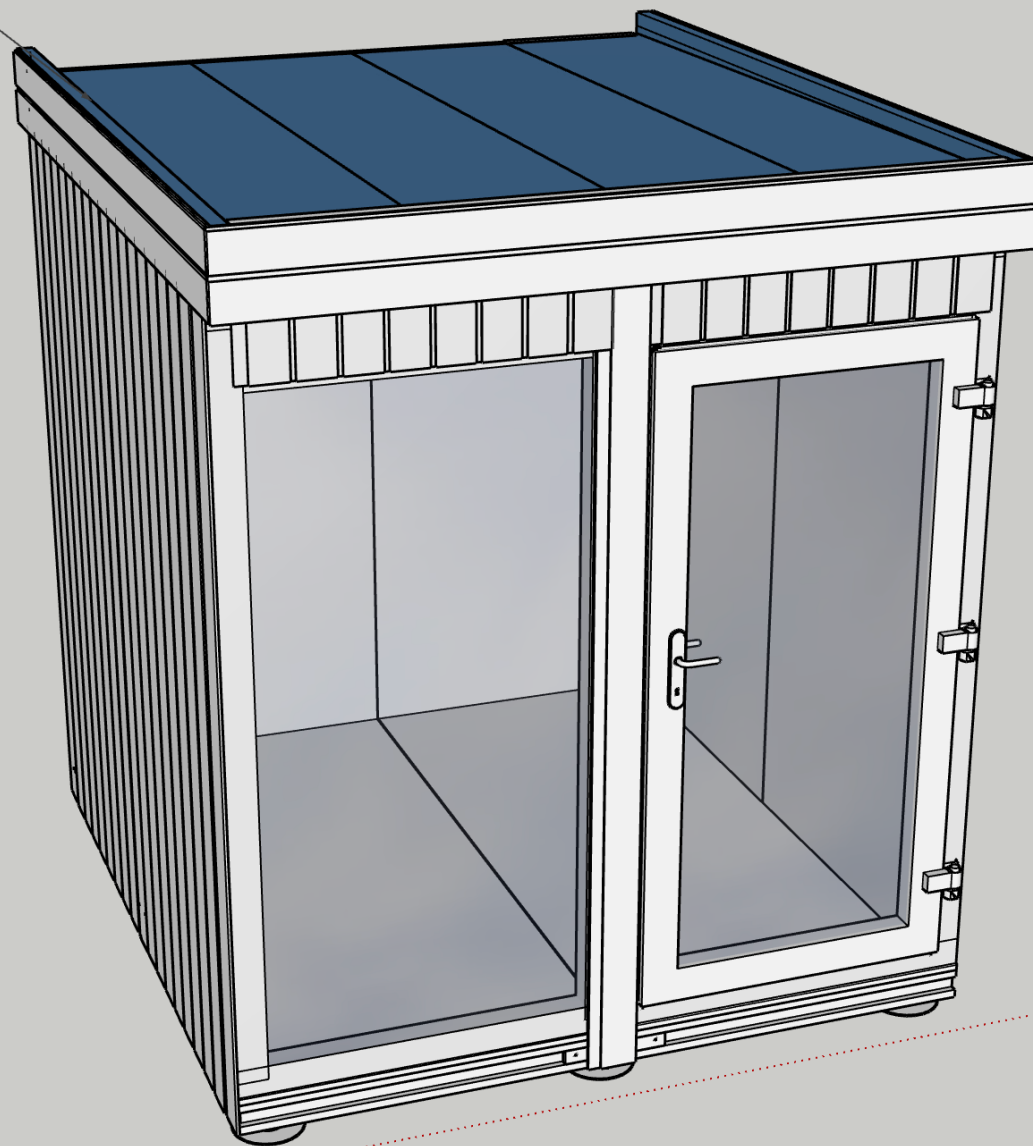

Cut the top boards narrower

Fix boards with screws 4x50